



# Eureka EasyClean 71C Casing Replacement

This prerequisite guide covers how to remove the casing of the device to access the parts inside.

Written By: Tanner Durnil



---

## INTRODUCTION

Some vital parts of the vacuum cleaner require you to remove the casing in order to replace them. This guide serves as a prerequisite only to the guides on how to replace those parts.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Bottom Cover



- Unscrew the two 18.1 mm PH2 Phillips head screws on the bottom of the vacuum.

## Step 2



- Pry off the Riser Visor using the plastic opening tool.




### Step 3



- Remove the screw cap using the metal spudger.
- ⓘ First-time removal of the screw cap can be difficult. The screw cap isn't vital, so don't worry about damaging the screw cap and just keep trying until it comes out.

### Step 4

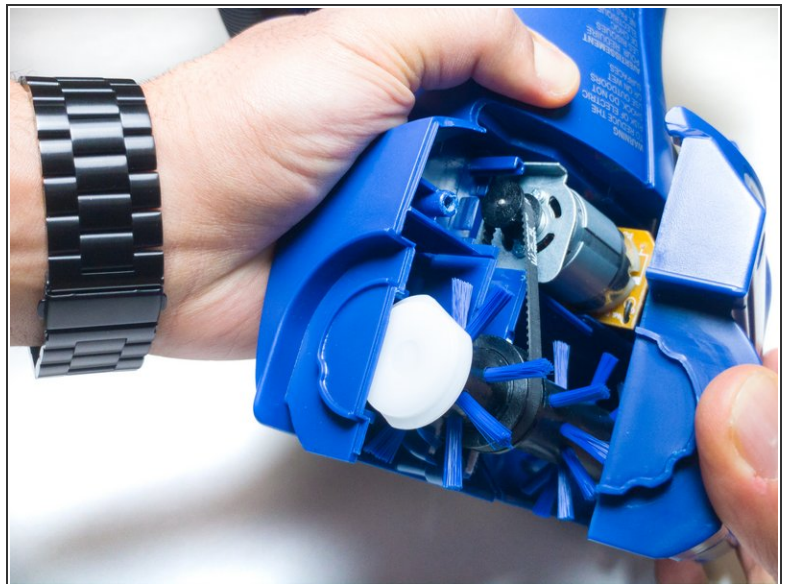


- Unscrew the 14mm PH2 Phillips head screw.
- Pull the bottom cover off of the rest of the casing.

## Step 5 — Casing



- Pull the power switch all the way up and remove the dust cup.

## Step 6

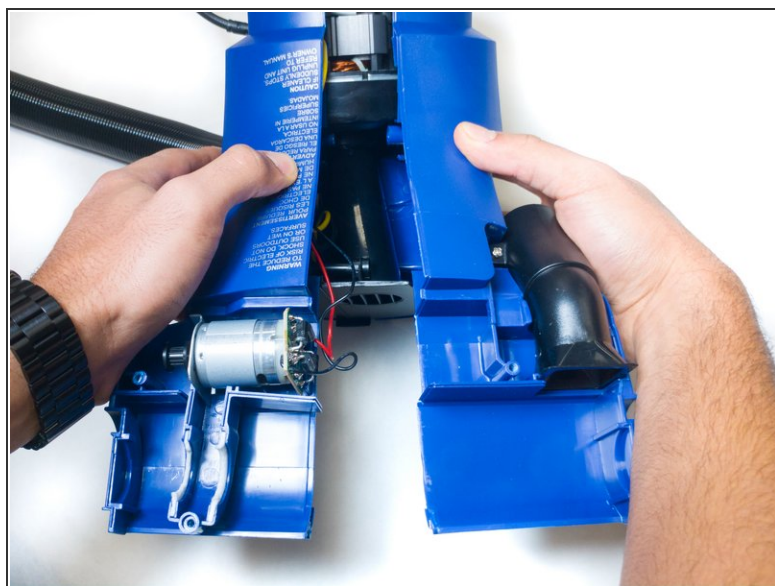

- Unscrew the six 18.1mm PH2 Phillips head screws on the side of the vacuum.
- Pull the casing apart.

To reassemble your device, follow these instructions in reverse order.