


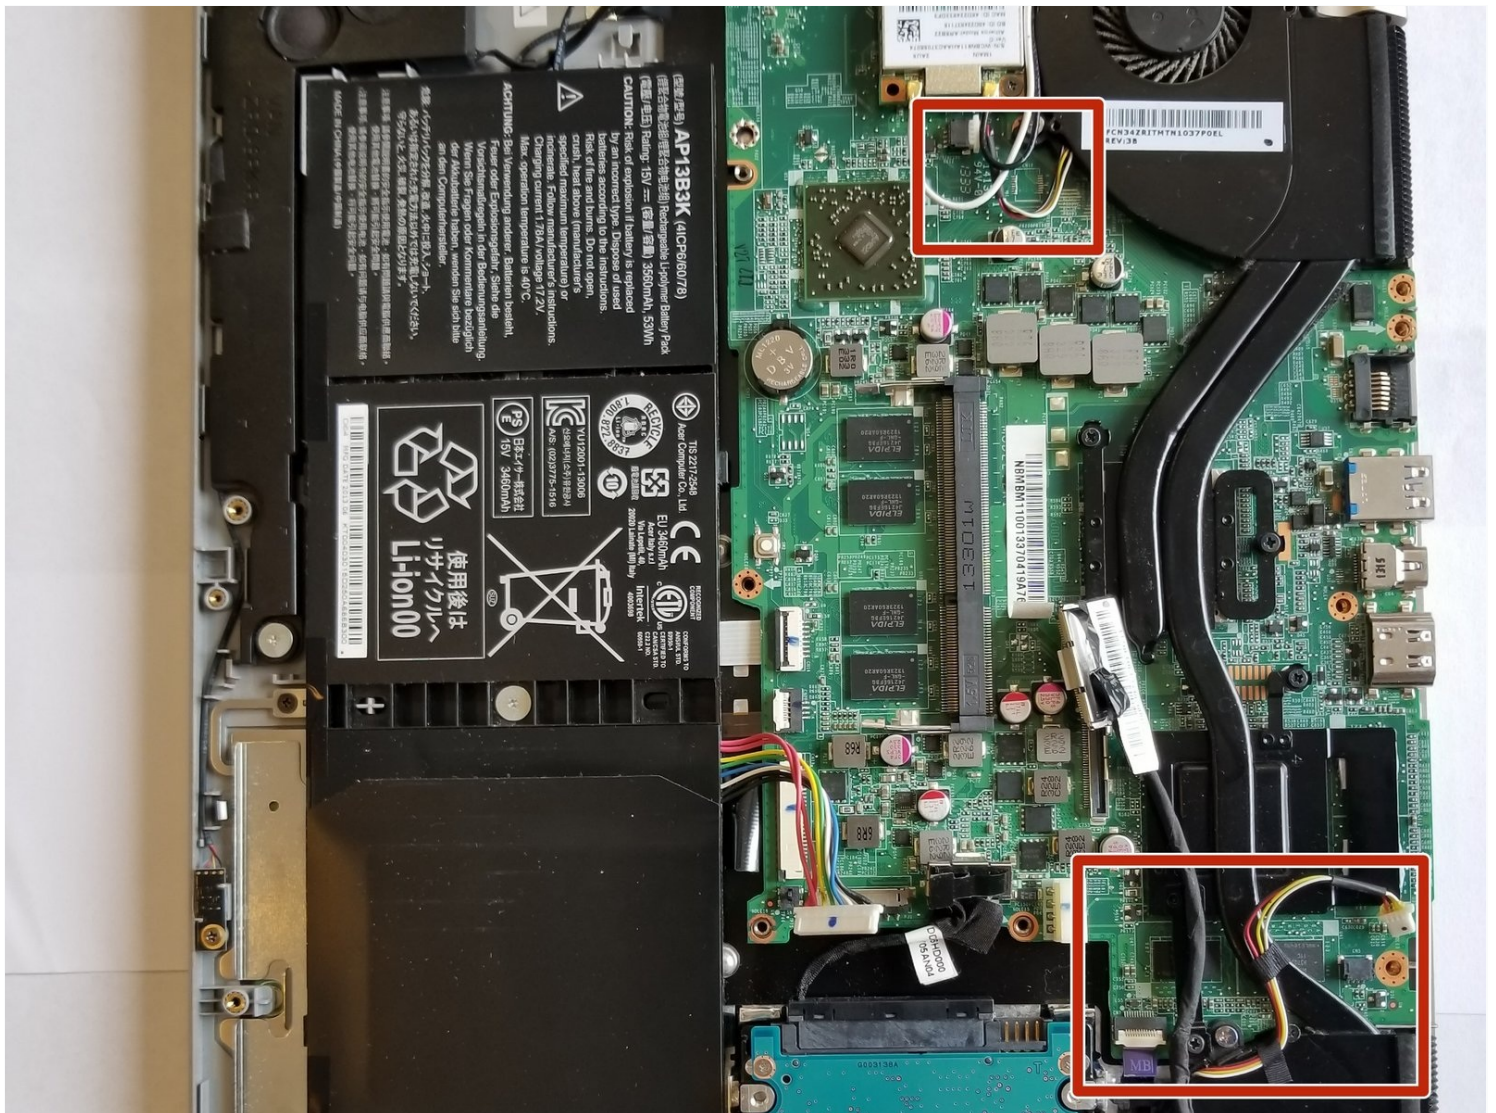

# Acer Aspire V5-552PG-X469 Internal Fan Replacement

The Acer Aspire is a 15.6" slim, touchscreen...

Written By: Sanjana Duddupudi



## INTRODUCTION

The Acer Aspire is a 15.6" slim, touchscreen laptop. These laptops are ideal for household users or small businesses.


---

### TOOLS:

[JIS #0 Screwdriver](#) (1)


---

### Step 1 — Back Case

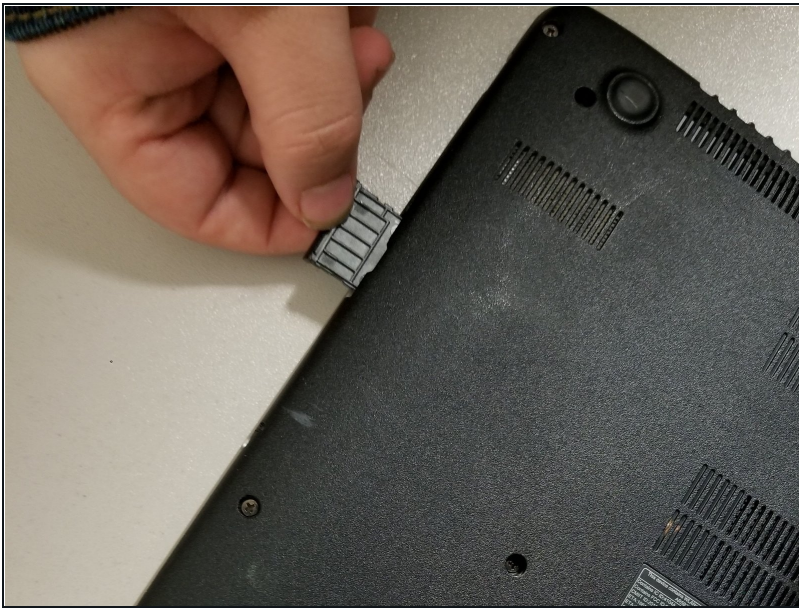

- Remove the storage tray on the left edge of the device.

## Step 2

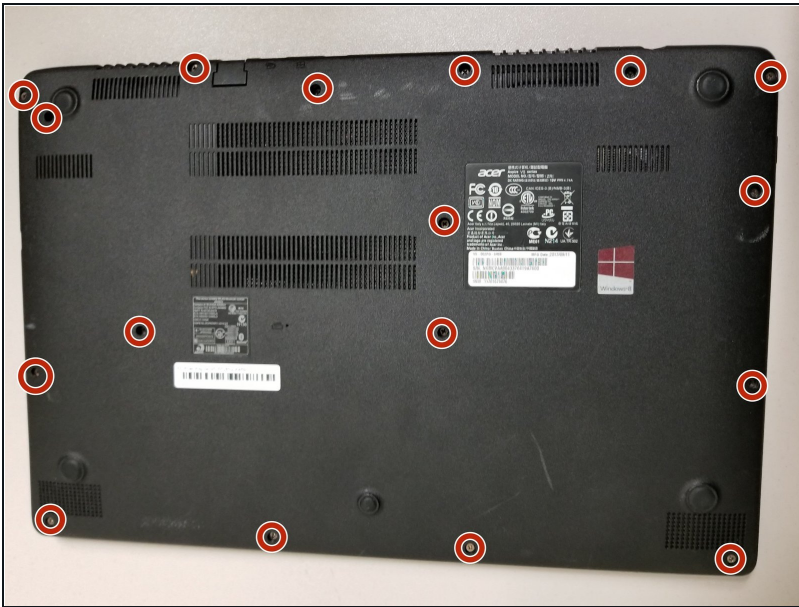

- Use a Phillips #0 screwdriver to remove seventeen 7mm screws from the lower case.




## Step 3



- Lift up the back case to remove it.





## Step 4 — Internal Fan

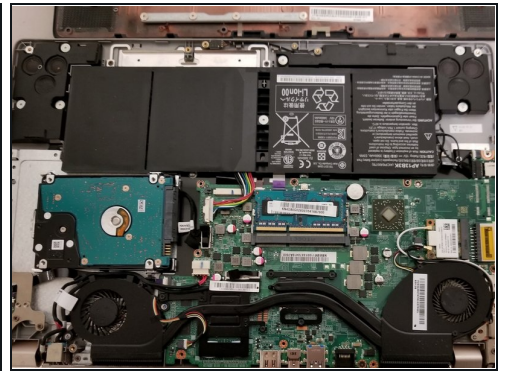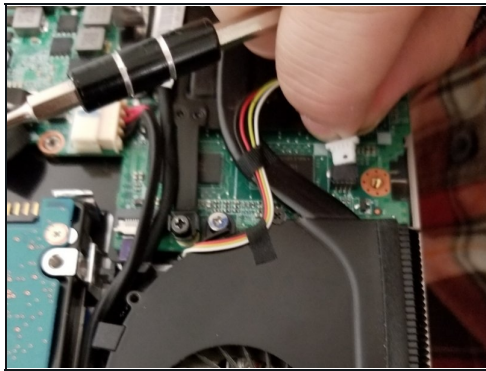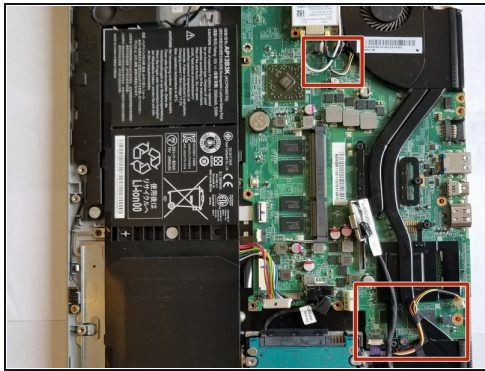


- Unplug the two multi-colored wires
- ❗ There is one multi-colored wire near either side of the fan

## Step 5

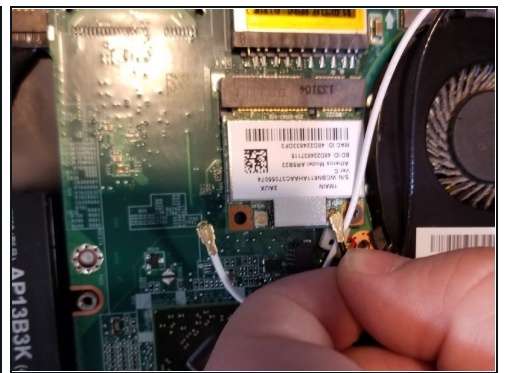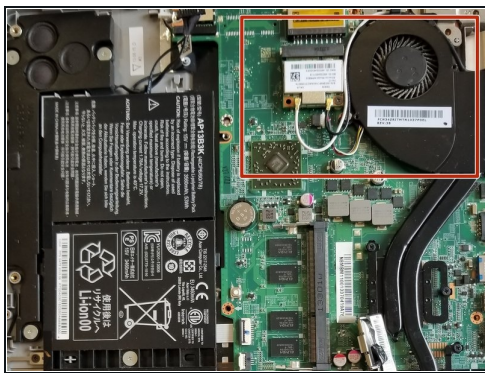


- Remove the white and the black antenna wires from the wifi module.

## Step 6

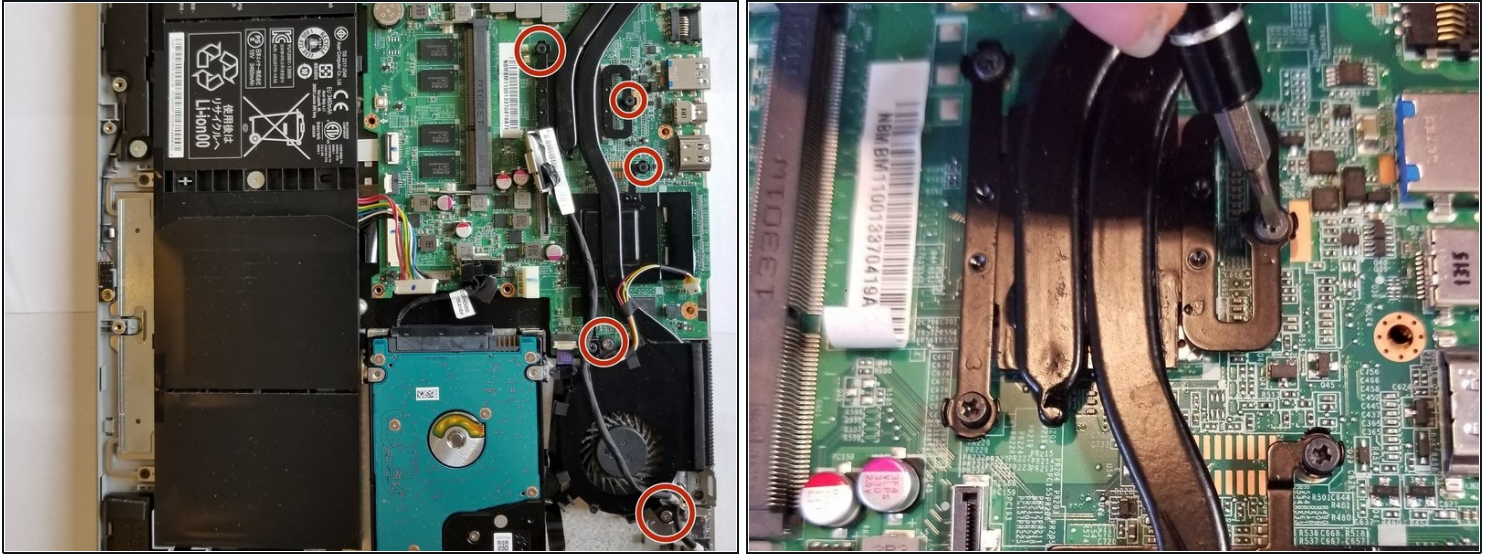

- Remove the five, 1/4 inch screws

## Step 7

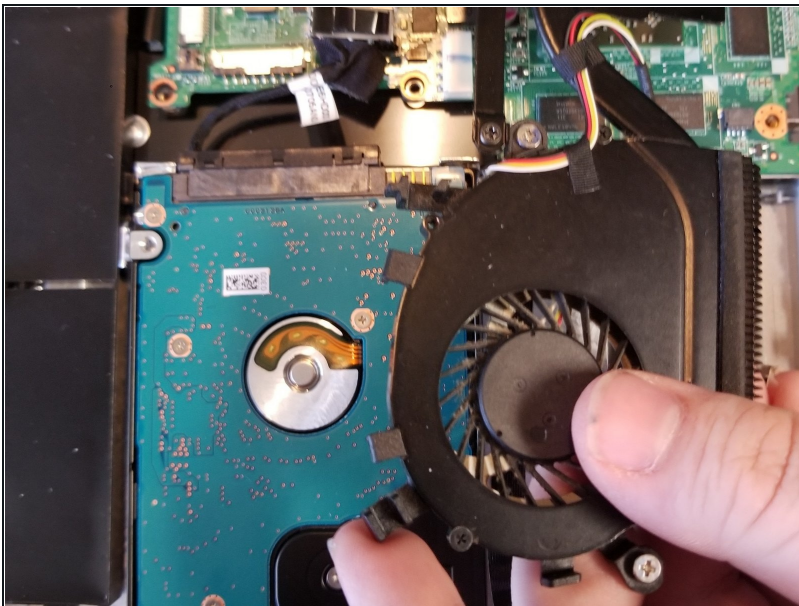

- Remove the internal fan

To reassemble your device, follow these instructions in reverse order.