




# Eureka EasyClean 71C Power Cord Replacement

This guide covers how to replace the vacuum's power cord.

Written By: Tanner Durnil

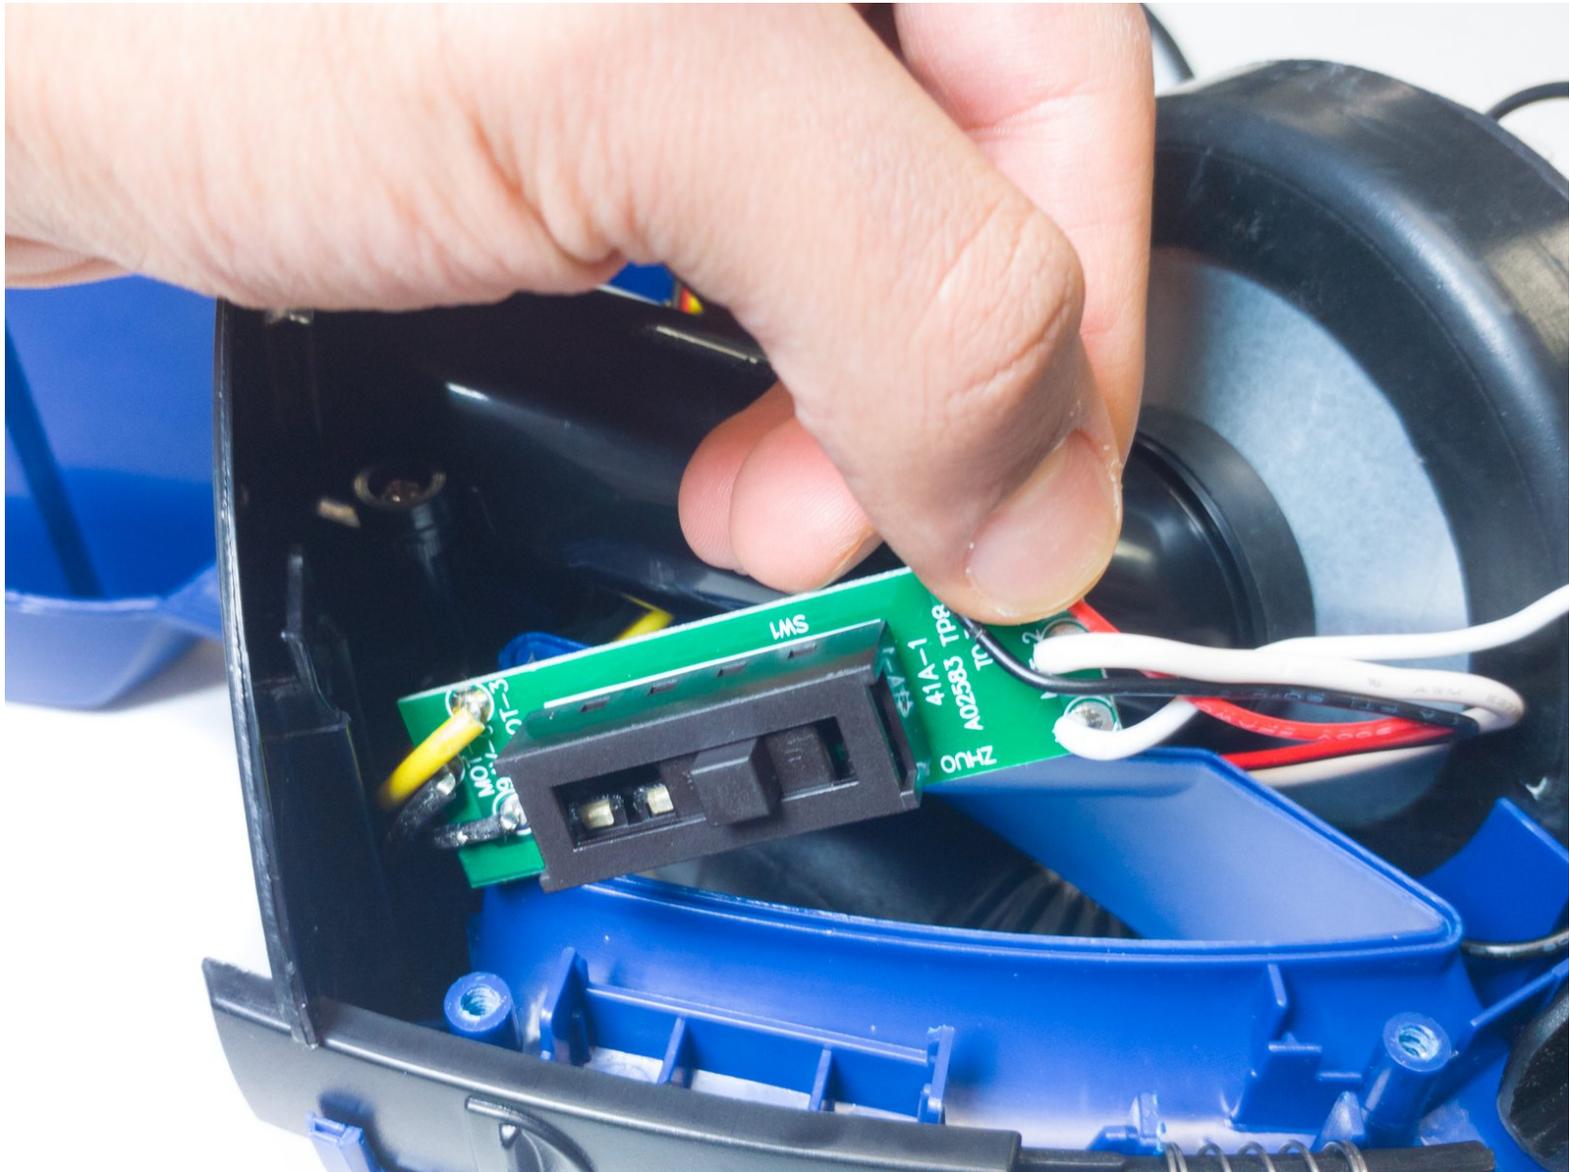

---

## INTRODUCTION

While the power cord is built to last for quite a while, it can still suffer from wear-and-tear. Additionally, accidents that damage the power cord can happen. This guide covers how to replace the vacuum's power cord.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
  - [Soldering Workstation](#) (1)
-

## Step 1 — Bottom Cover



- Unscrew the two 18.1 mm PH2 Phillips head screws on the bottom of the vacuum.

## Step 2




- Pry off the Riser Visor using the plastic opening tool.

### Step 3



- Remove the screw cap using the metal spudger.
- ⓘ First-time removal of the screw cap can be difficult. The screw cap isn't vital, so don't worry about damaging the screw cap and just keep trying until it comes out.

### Step 4

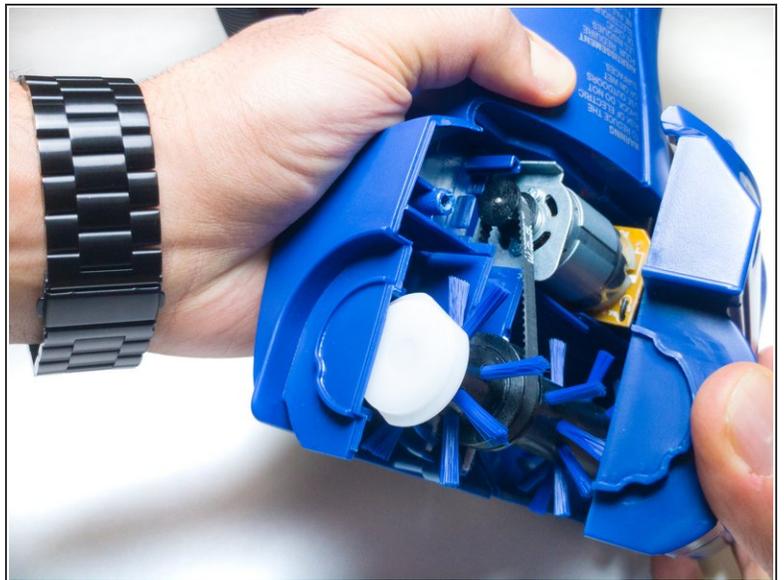


- Unscrew the 14mm PH2 Phillips head screw.
- Pull the bottom cover off of the rest of the casing.

## Step 5 — Casing




- Pull the power switch all the way up and remove the dust cup.

## Step 6

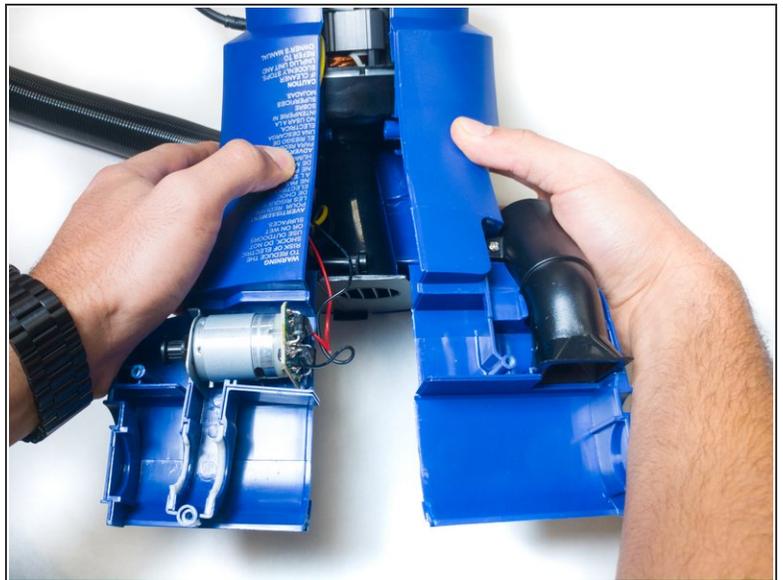

- Unscrew the six 18.1mm PH2 Phillips head screws on the side of the vacuum.
- Pull the casing apart.



## Step 7 — Power Cord

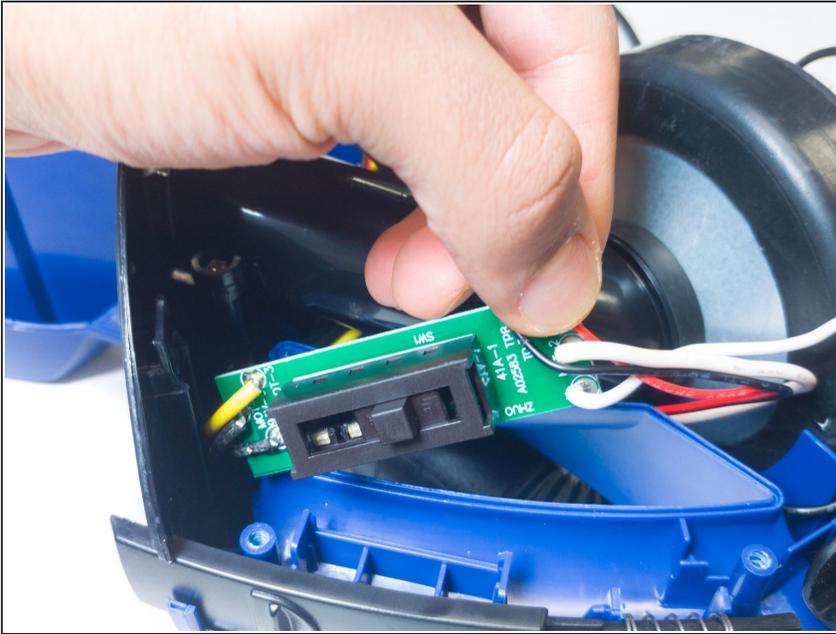

- Pull out the switch board.

⚠ Ensure the vacuum is powered off and unplugged before handling any electronics.


## Step 8

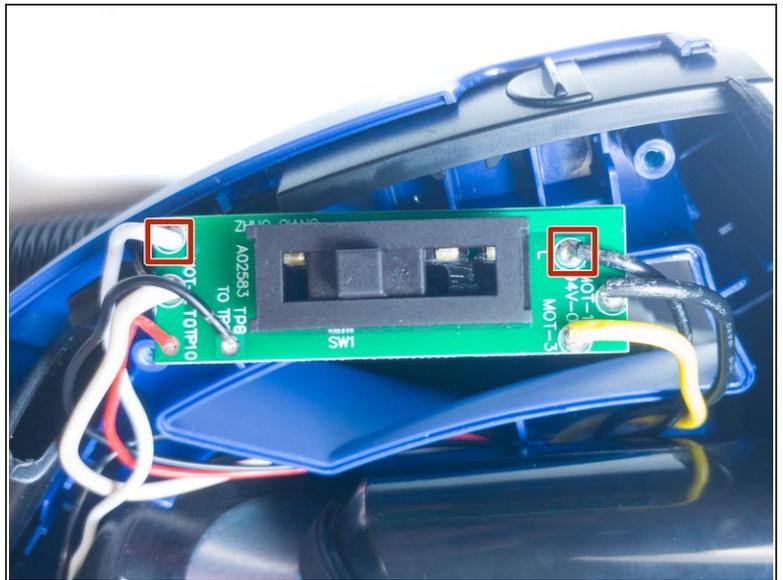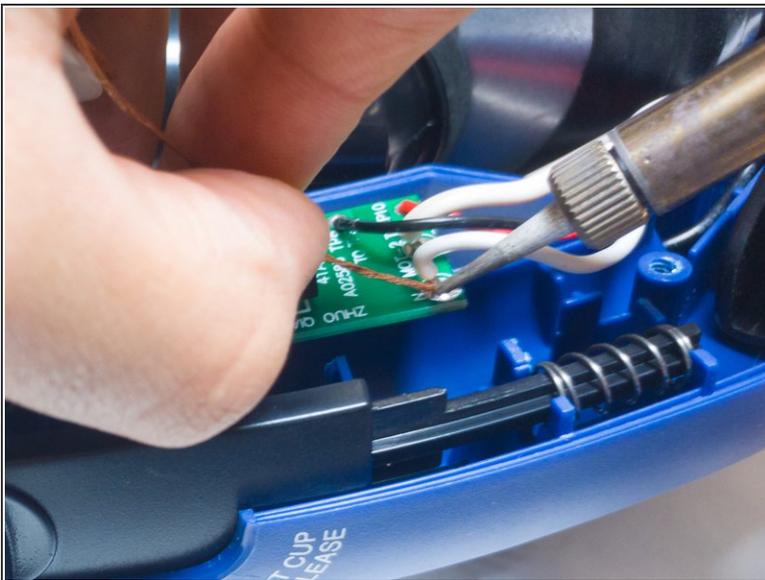

- Desolder the highlighted black and white wires.

**i** For instructions on how to solder and desolder wires, visit [this guide](#).

## Step 9

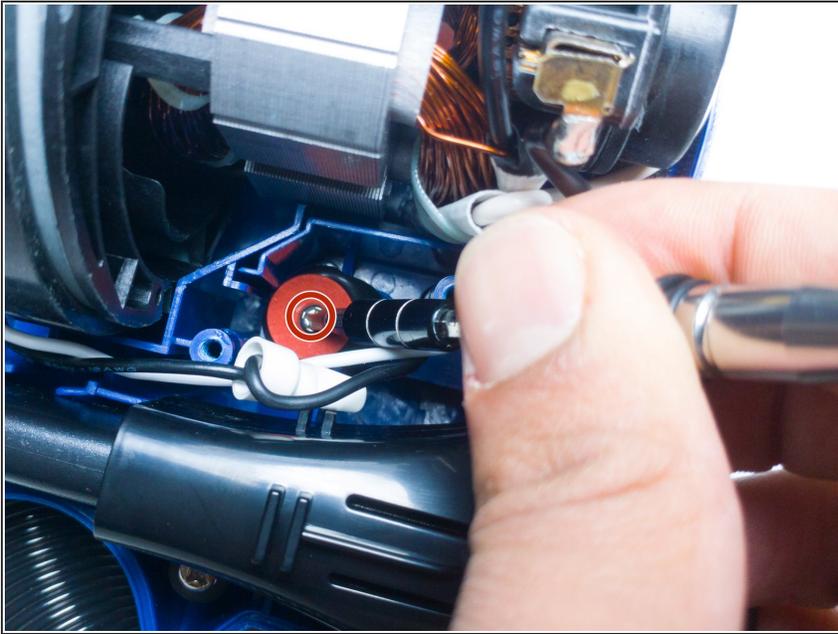

- Unscrew the 22.3mm PH2 Phillips head screw.
- Remove the power cord.

To reassemble your device, follow these instructions in reverse order.