



Mitsubishi Diamondpoint NXM76LCD Speaker Replacement

Speaker removal and replacement for the Mitsubishi Diamondpoint LCD.

Written By: Padraic Hoselton





TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [5mm Nut Driver](#) (1)

Step 1 — Removing the stand.



- Lift the black cover off.
- Remove all 4 Phillips #2 screws.

Step 2 — Remove the 5 screws



- Remove the two 24mm Phillips #2 screws.
- Remove the three 8mm Phillips #2 screws.

 
 
Step 3 — Remove the back panel



- Lift the back and pry the back off.

i The panel is held in with clips on the side. It needs a lot of force to take it off.

Step 4 — Remove the four screws

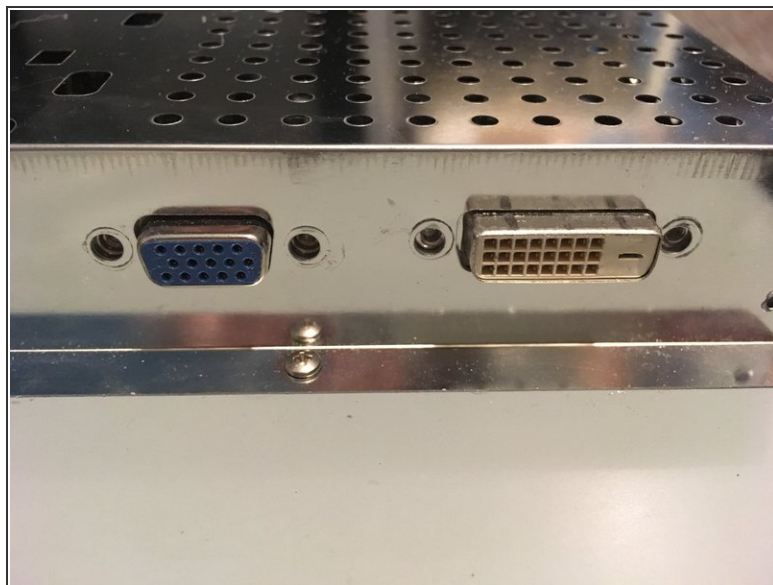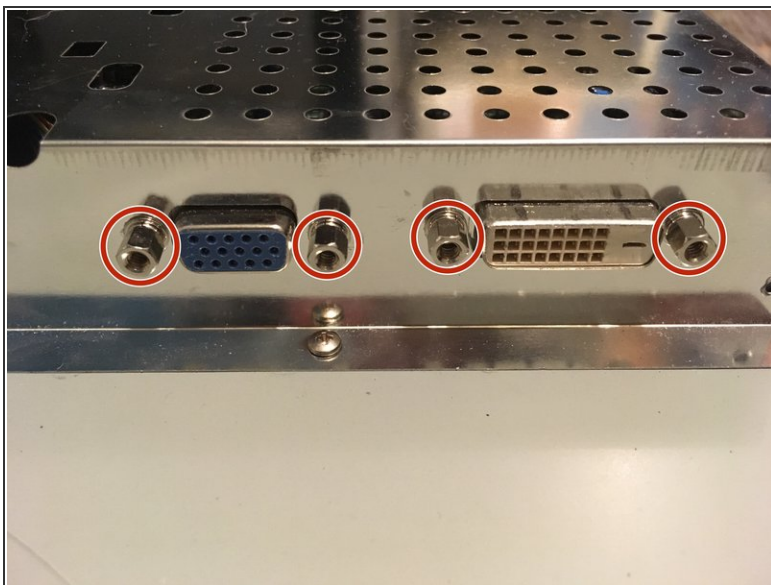


- Remove the four 5mm nut screws.

Step 5




- Remove the seven Phillips #1 screws.

 Step 6 — Remove the front board

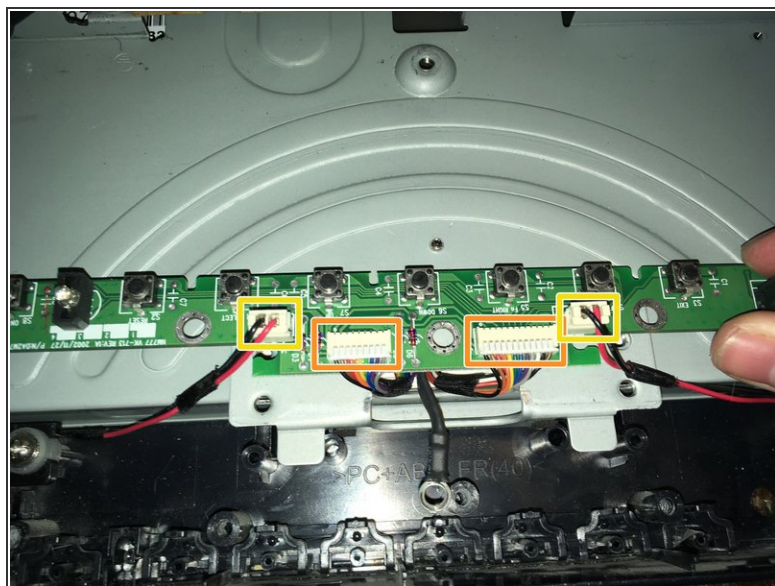

- Remove the three Phillips #2 screws.
- Remove the two data/power cables.
- Remove the two speaker cables.

 Step 7

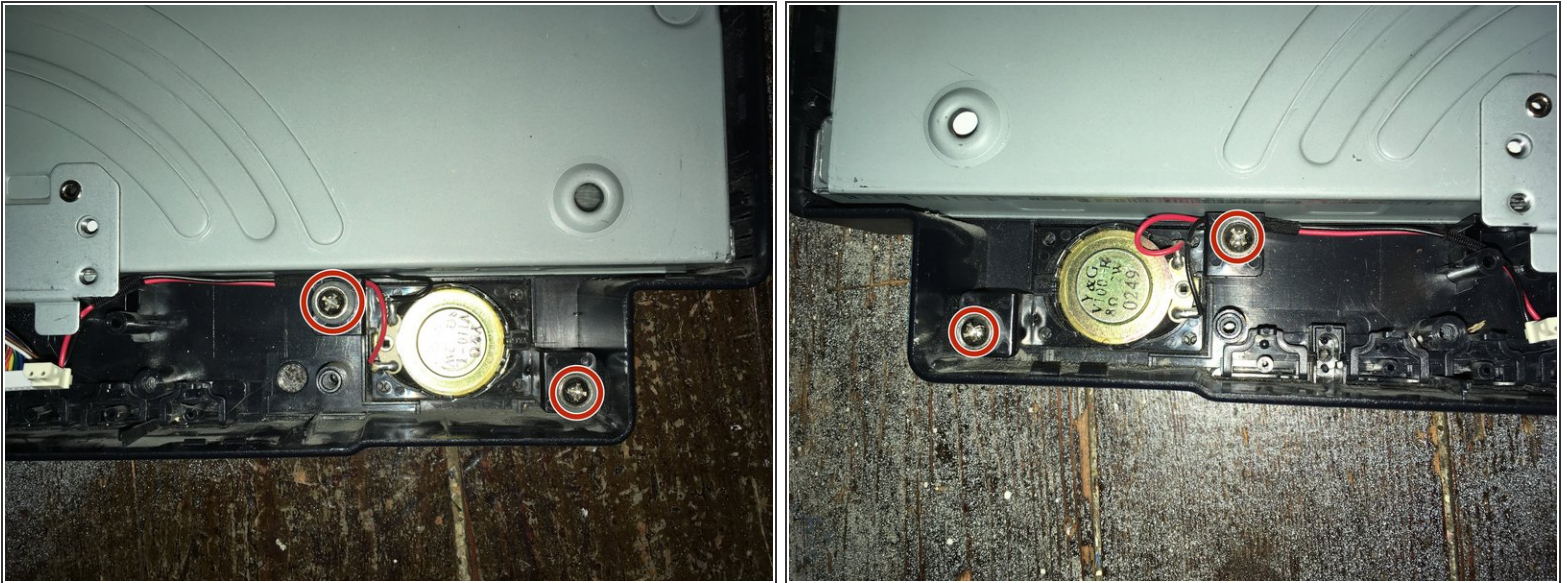

- Remove the Phillips #2 screws from the speaker(s).

Step 8



- Pull the speaker off the slots.

To reassemble your device, follow these instructions in reverse order.