


Alienware 17 R2 Wireless Card Replacement

In this guide, I will be showing you how to remove and replace the wireless card of you Alienware 17 R2.


Written By: Terrence15

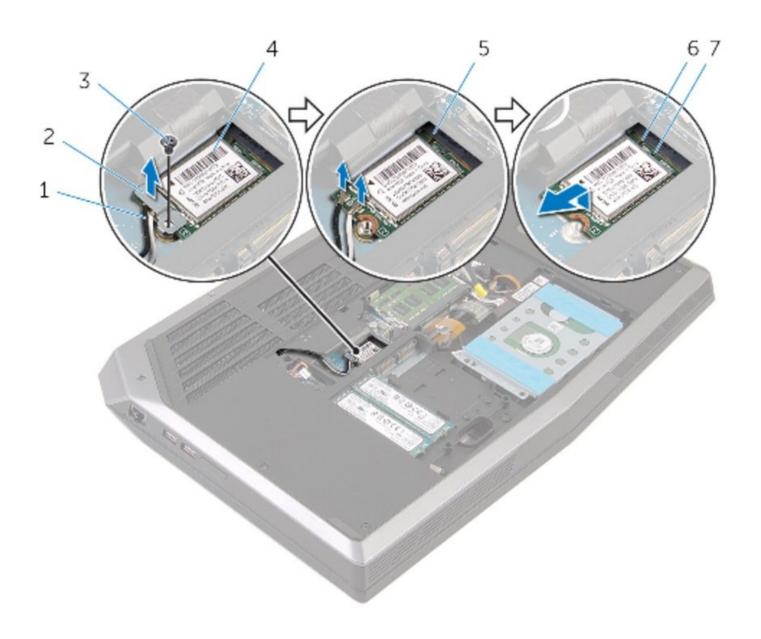




Phillips #0 Screwdriver (1)

Step 1 — Removing the Screw

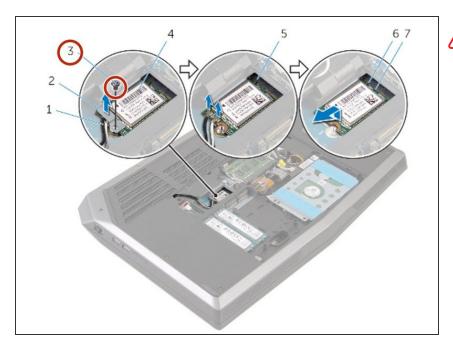


- WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before Working Inside Your Computer. After working inside your computer, follow the instructions in After Working Inside Your Computer.
 - Remove the screw that secures the wireless-card bracket and the wireless card to the system board.

Step 2 — Lifting the Card Bracket

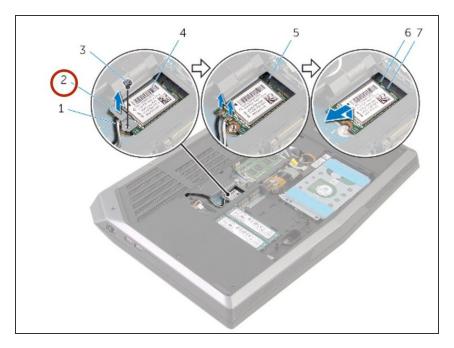


 Lift the wireless-card bracket off the wireless card.

Step 3 — Disconnecting Antenna Cables

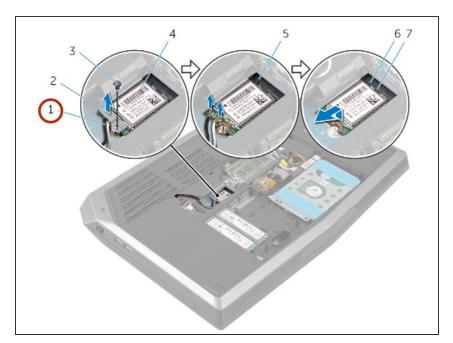


 Disconnect the antenna cables from the wireless card.

Step 4 — Removing the Wireless Card

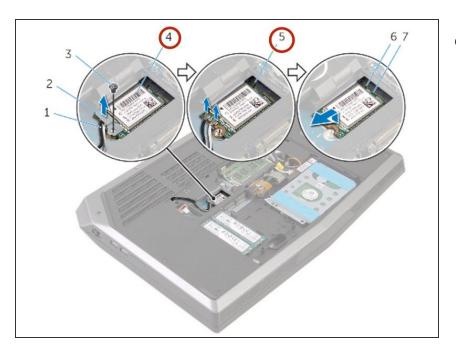

 Lift and slide the wireless card from the wireless-card slot.


Step 5

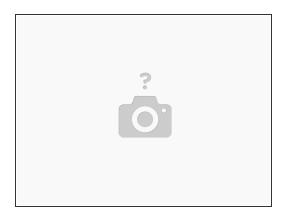

↑ CAUTION: To avoid damaging the wireless card, do not place any cables under it.


Align the notch on the wireless card with the tab on the wireless-card slot.

Step 6 — Sliding the Wireless Card

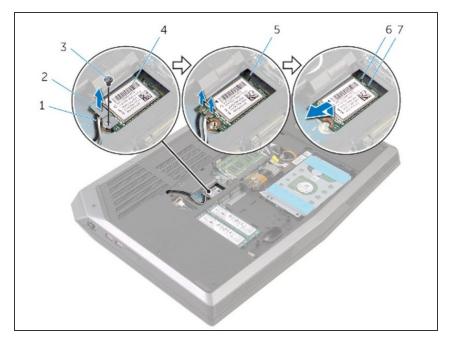


 Slide the wireless card at an angle into the wireless-card slot.

Step 7 — Connecting Cables to the Wireless Card

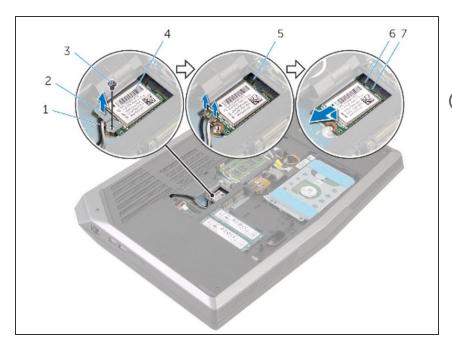


- Connect the antenna cables to the wireless-card.
- The following is the antenna-cable color color scheme for the wireless card: Main (white triangle) = White Auxiliary (black triangle) = Black

Step 8 — Aligining the Screw Holes

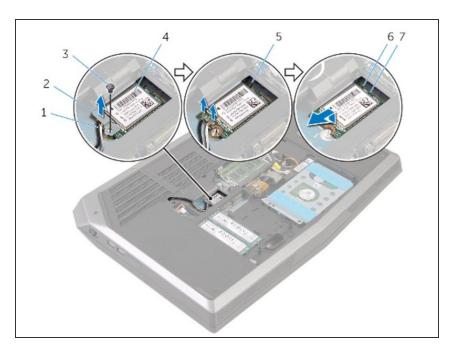

 Align the screw hole on the wirelesscard bracket with the screw hole on the wireless card.

Step 9 — Replacing the Screw

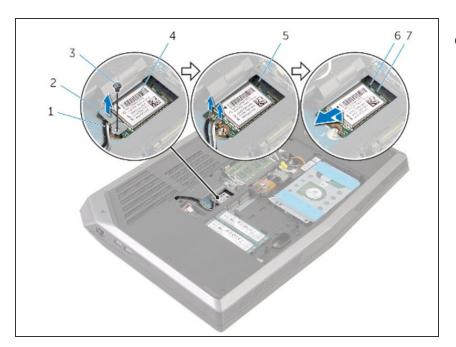

 Replace the screw that secures the wireless-card bracket and the wireless card to the system board.

To reassemble your device, follow these instructions in reverse order.