



# Instant Pot IP-DUO80 V2 Exhaust Valve/Steam Release Replacement

How to replace the exhaust valve/steam release on the Instant Pot IP-DUO80 V2.

Written By: Kayla Meacham



## Step 1 — Exhaust Valve/Steam Release



- Grab the black exhaust valve and pull upwards.
- ⓘ You might have to gently wiggle it to get it loose.

To reassemble your device, follow these instructions in reverse order.