




ASUS N550JK-DS71T Laptop CD/DVD Drive Replacement

This guide will show you how to remove and replace the laptop's CD/DVD Drive.

Written By: Steven Hahn

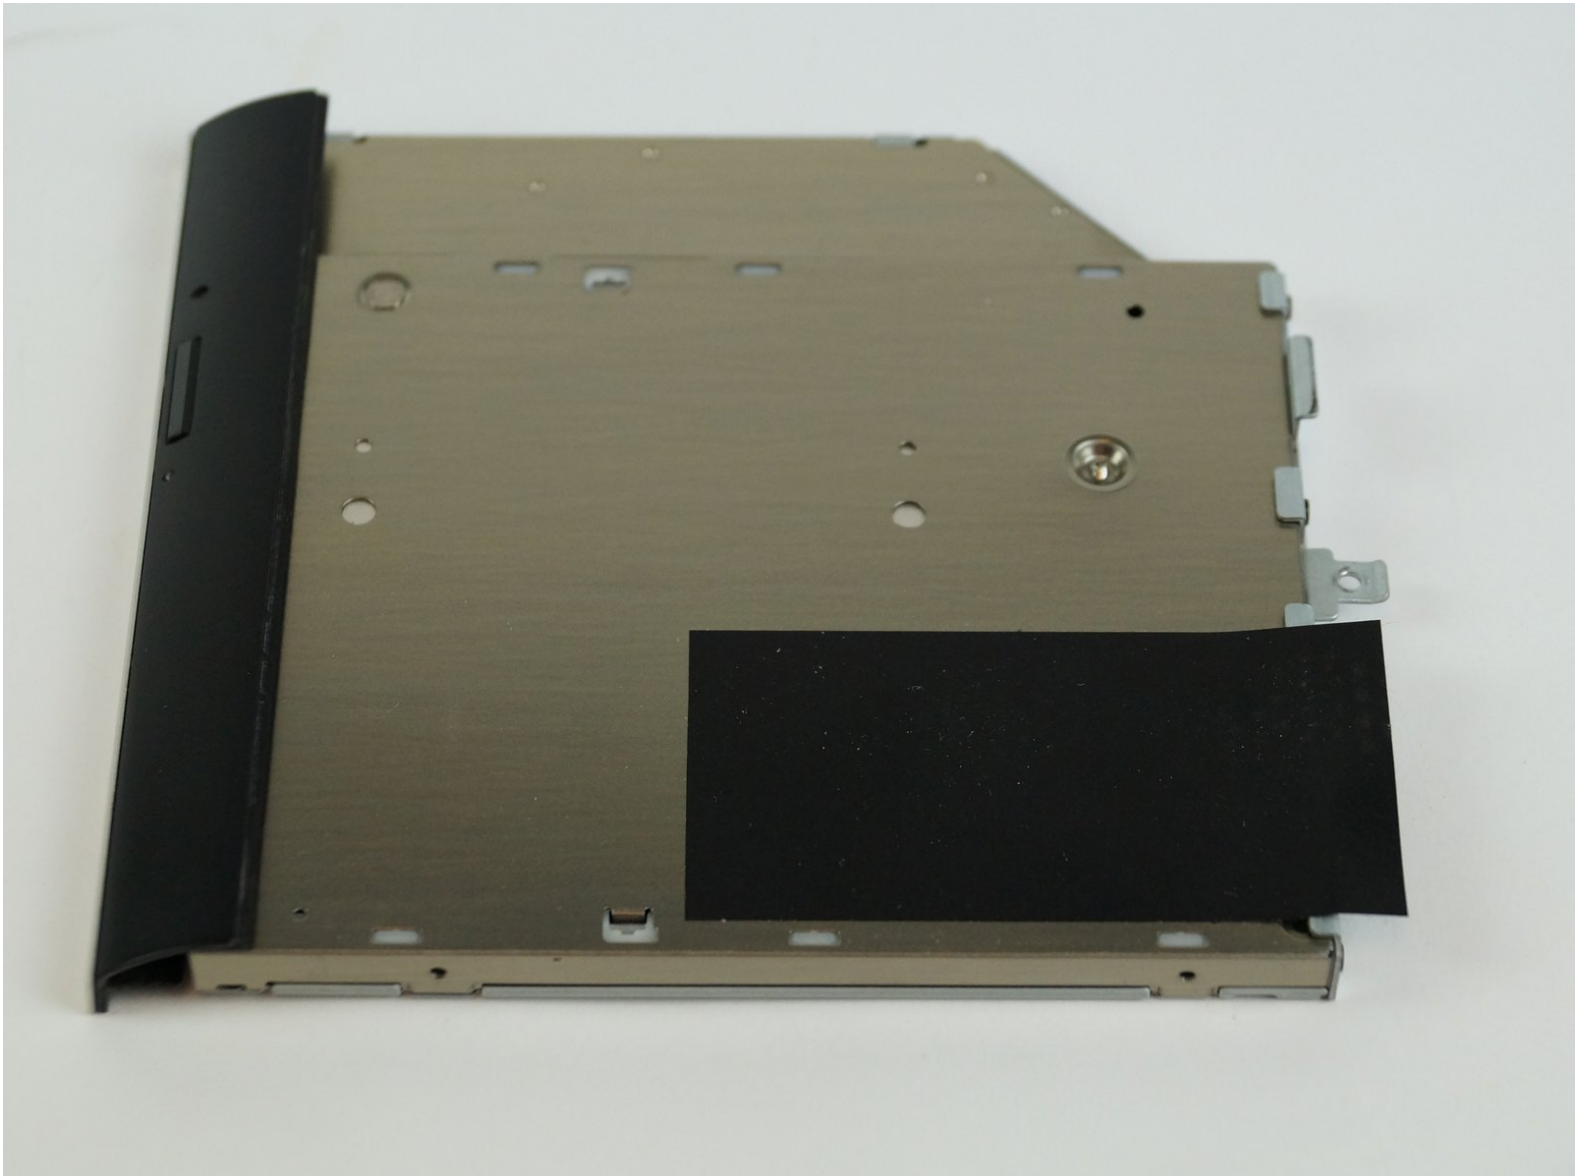

INTRODUCTION

This guide will show you how to remove and replace the laptop's CD/DVD Drive. This may be necessary if your drive suffers some sort of hardware failure such as not ejecting or the inability for it to read disks.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Case





- Turn the laptop off and unplug all cables.
- Flip over so the bottom is facing you.
- Remove the ten 3mm Torx T5 screws from the bottom cover.

Step 2




- Use a spudger to wedge between the laptop and bottom cover—lift upwards to pry open.
- Run the spudger along the perimeter of the bottom cover to remove.

Step 3 — CD/DVD Drive

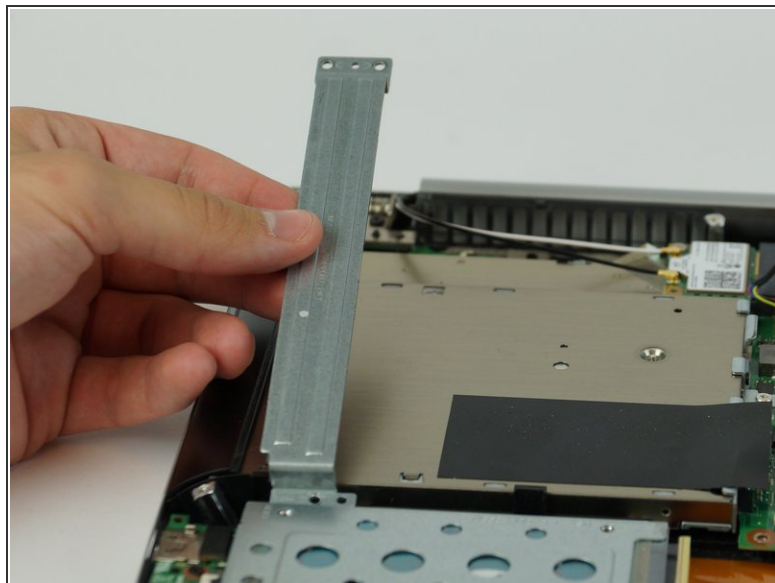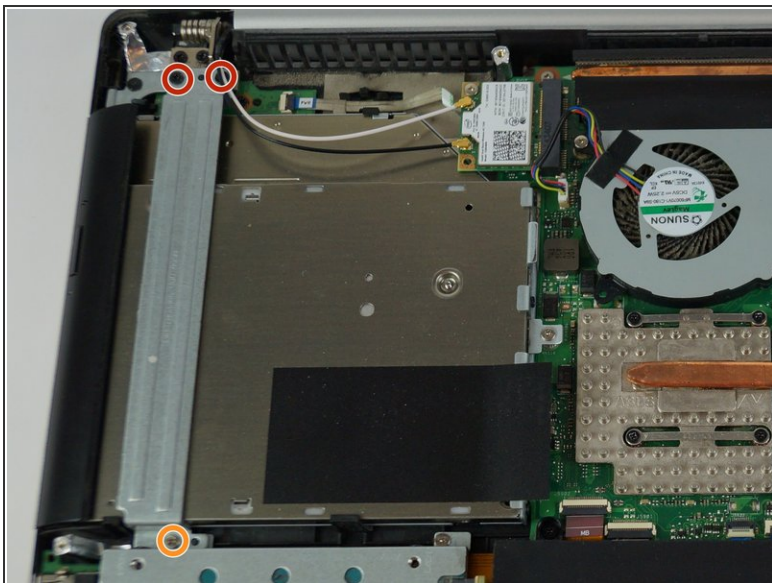


- Remove the two 4mm black Phillips #1 screws from the top of the CD/DVD bracket.
- Remove the single 4mm silver Phillips #1 screw from the bottom of the CD/DVD bracket.
- Remove the CD/DVD bracket.

Step 4

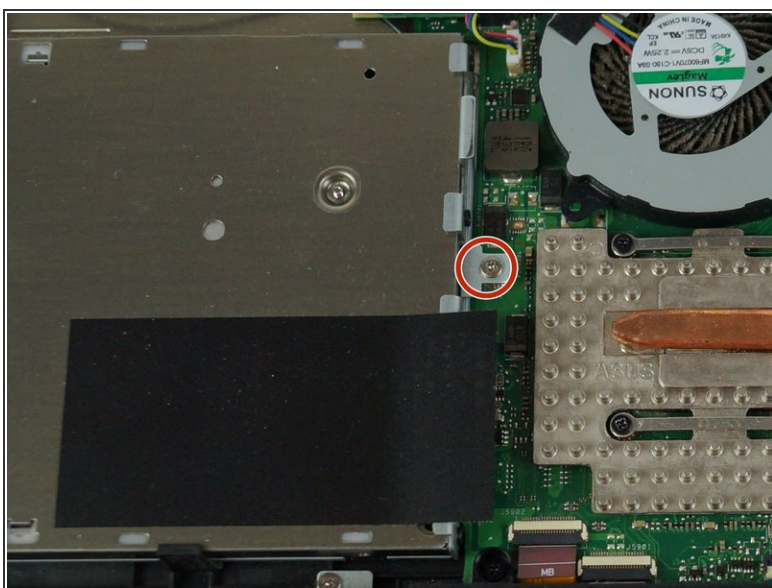

- Remove the single 4mm silver Phillips #1 screw.

Step 5

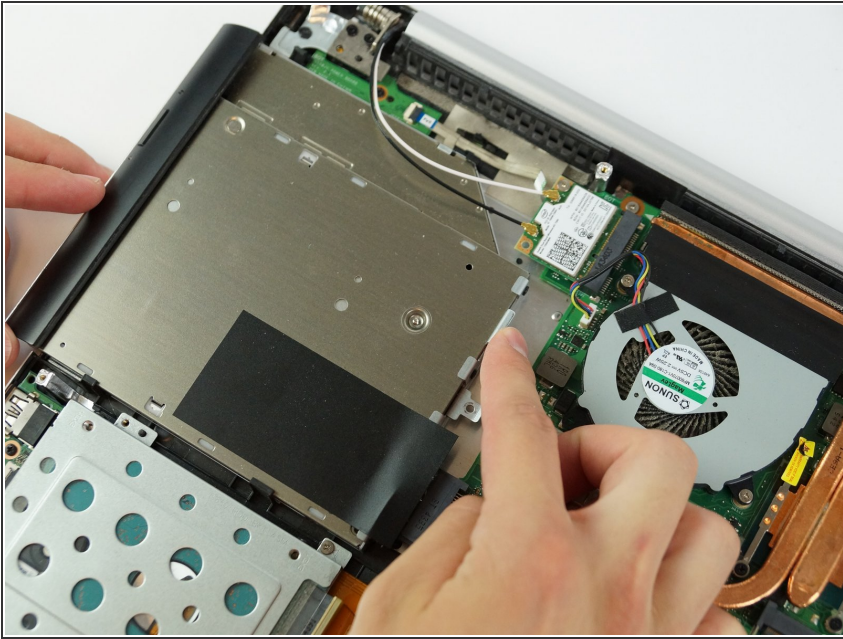

- Slide the drive out of the laptop using both hands.

To reassemble your device, follow these instructions in reverse order.