



# PowerBook G4 Aluminum 17" 1.67 GHz (High-Res) Memory Door Replacement

Written By: Andrew Bookholt



## INTRODUCTION

Remove your memory door to access the RAM chips.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)



### PARTS:


- [G4 Aluminum 17" Memory Door](#) (1)

## Step 1 — Battery




- Use your thumbs to push the two battery retaining tabs away from the battery.
- The battery should pop up enough to rotate it toward yourself and lift it out of the lower case.

## Step 2 — Memory Door

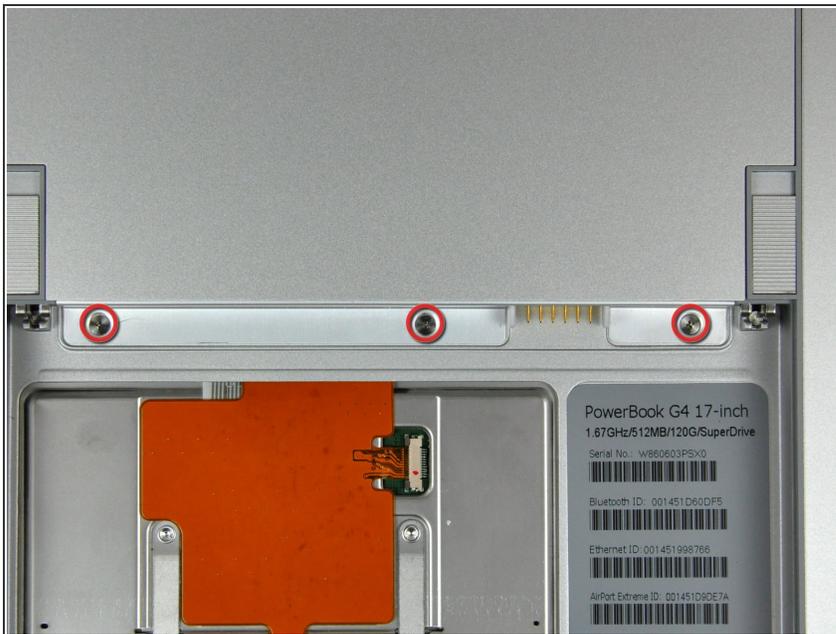

- Remove the three 2.3 mm Phillips screws securing the memory cover to the lower case.

## Step 3

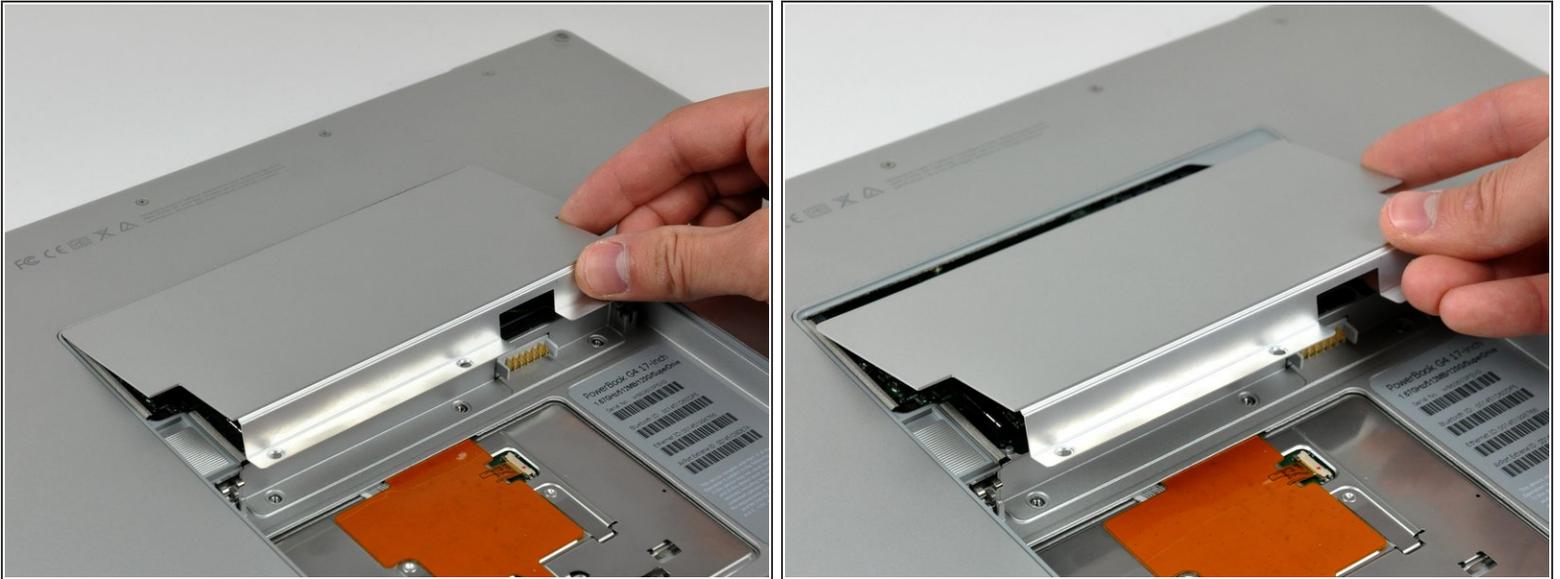

- Lift the memory cover slightly and pull it toward yourself to remove it from the lower case.

To reassemble your device, follow these instructions in reverse order.