


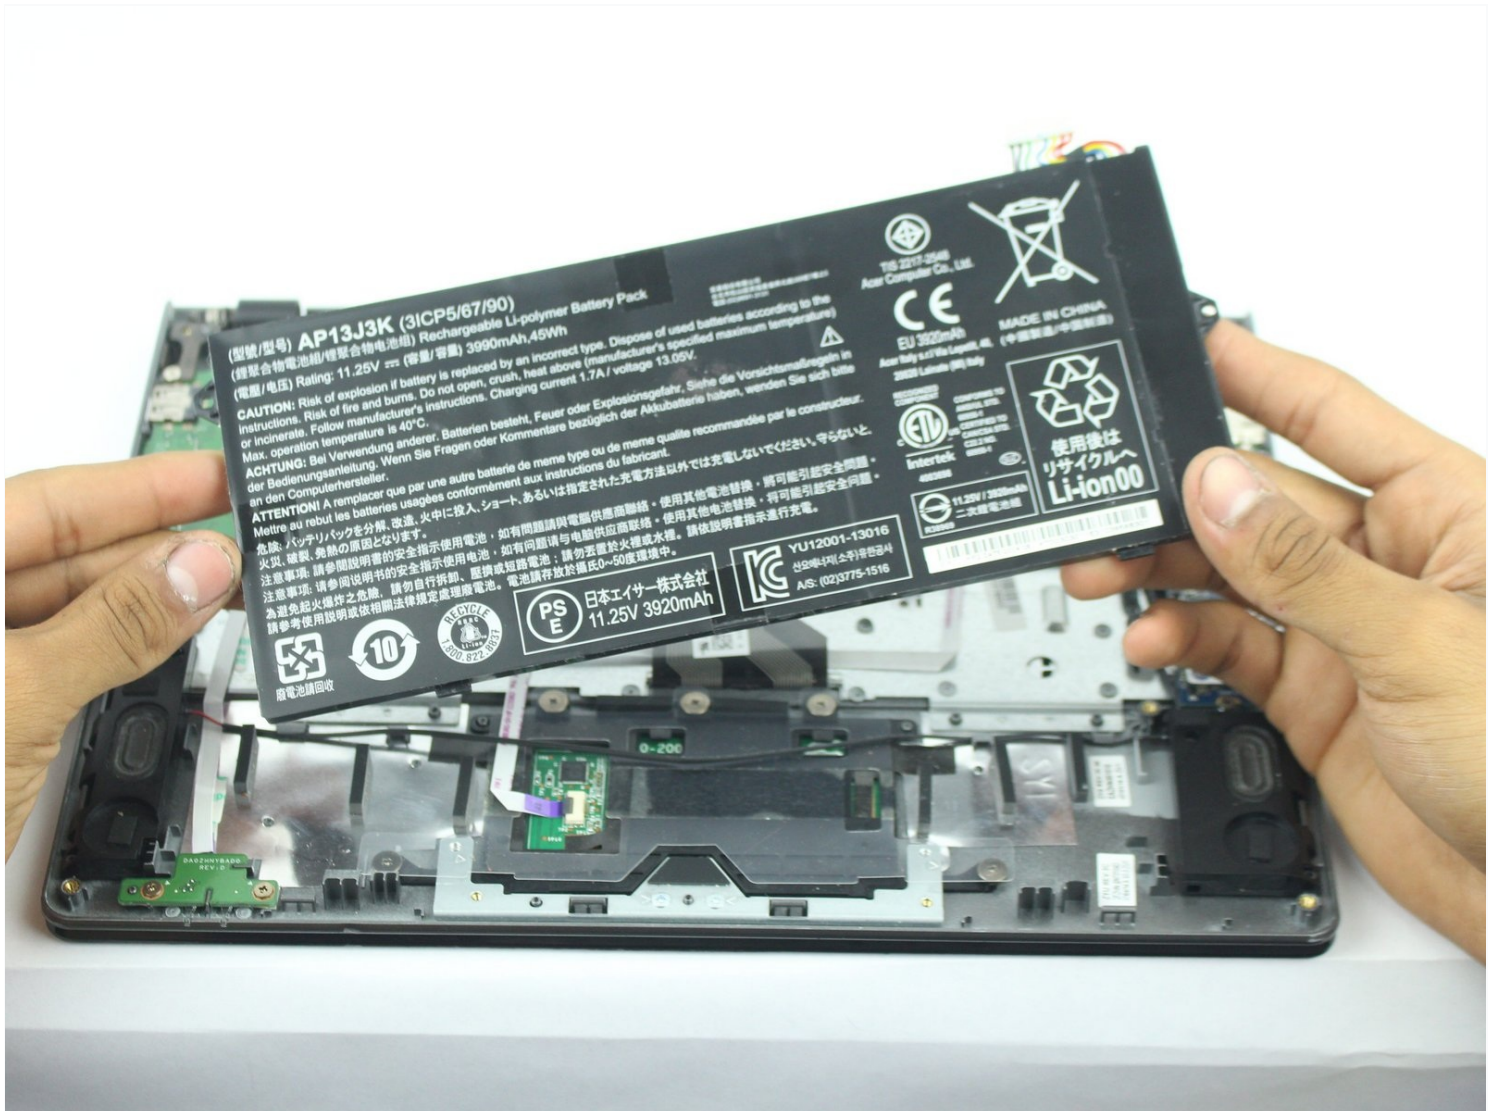

Acer Chromebook C720-2420 Battery Replacement

This guide will provide you with simple and...

Written By: Jessica Beckford



INTRODUCTION

This guide will provide you with simple and clear steps on how to replace a dead battery in an Acer Chromebook C720-2420.

TOOLS:

Phillips #00 Screwdriver (1)
iFixit Opening Tool (1)

PARTS:

Acer Chromebook AP13J7K Battery (1)
Acer C720P Chromebook Bottom Cover (1)

Step 1 — Back Cover Replacement



 Place your Chromebook upside down.

- Utilizing the precision magnetized Phillips #0 screwdriver, remove all thirteen 6.5 mm Phillips screws that secure the back cover.


 Before doing anything, make sure your Acer Chromebook is completely turned off.

Step 2




- Use the plastic opening tool to carefully remove the bottom.

Step 3 — Battery

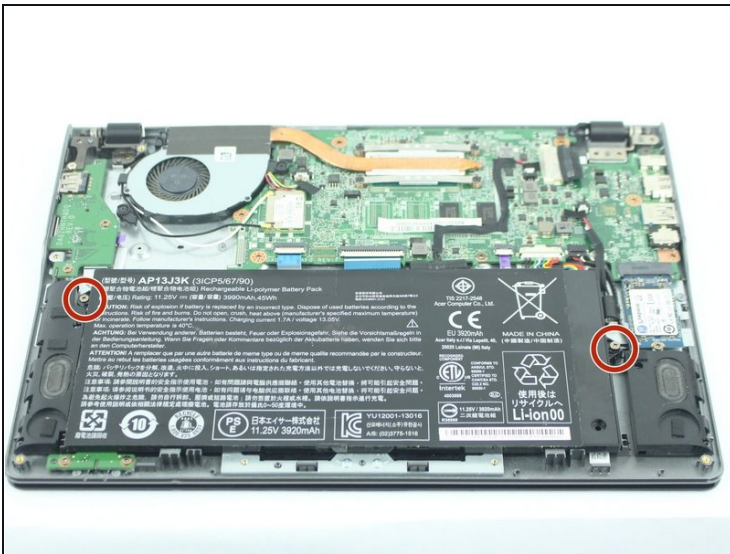


- Remove the two 3.6 mm Phillips screws holding the battery in place.

Step 4

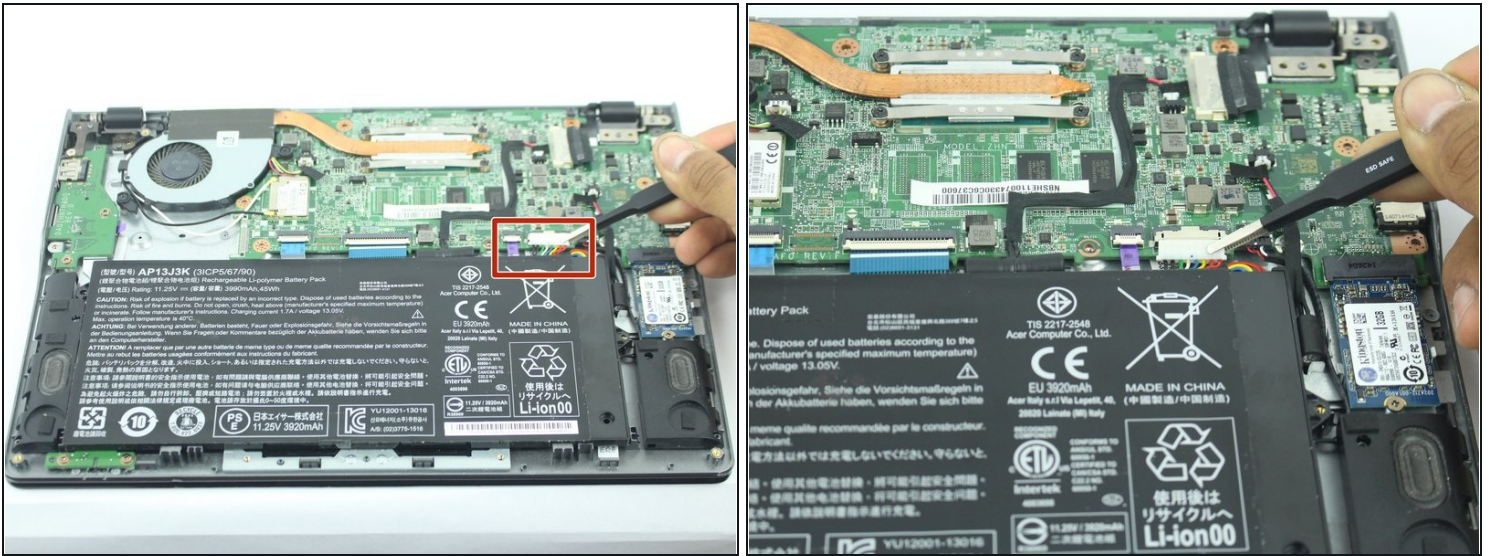

- Disconnect the connector that attaches the battery to the Chromebook with a pair of pliers or [tweezers](#).
 - ① Alternatively, you could use your hands, as it may be difficult to unhook the connector.

Step 5

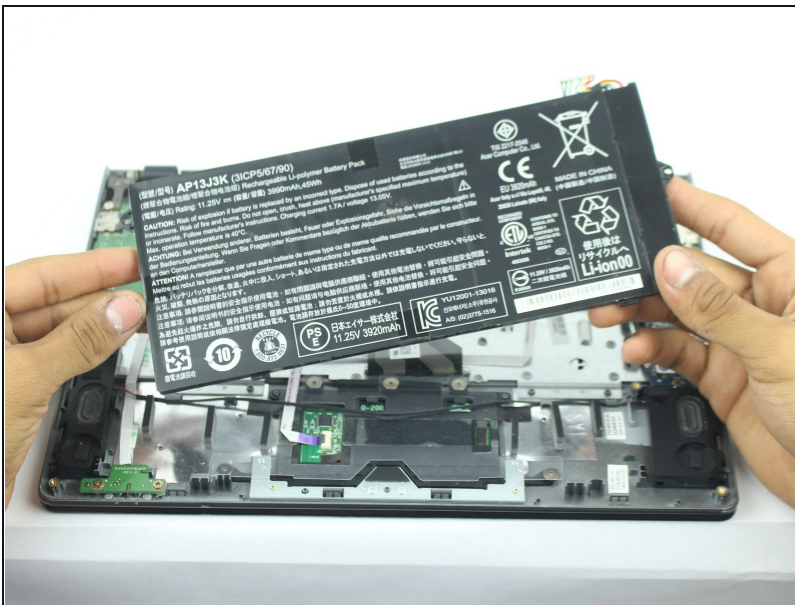

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

