


# **Dell Vostro 3458 Hard Drive Replacement**

Written By: Johnathan Hammond

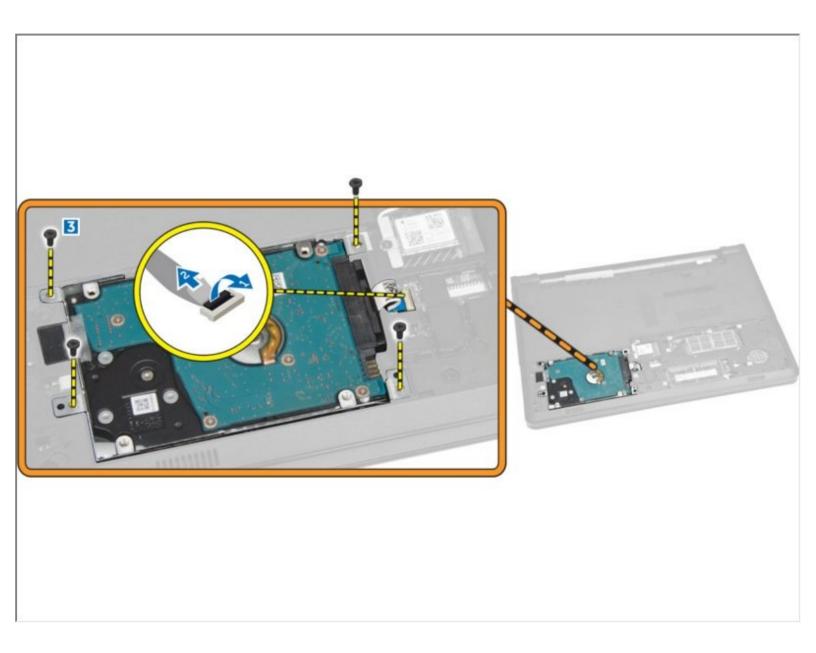

## **INTRODUCTION**


In this guide, we will be showing you how to remove and replace the Hard Drive.



# **TOOLS:**

• Phillips #0 Screwdriver (1)

## **Step 1** — Releasing the Battery

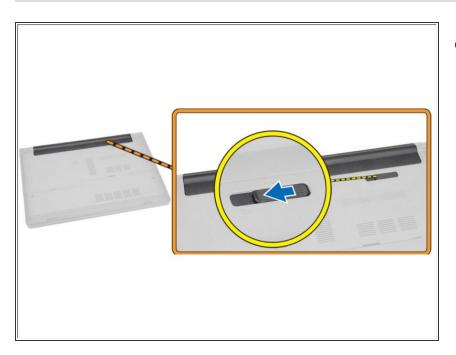


 Slide the release latch outwards to unlock the battery.

#### Step 2 — Lifting the Battery




 Lift the battery to remove it from the computer.

#### Step 3 — Remove the Screws

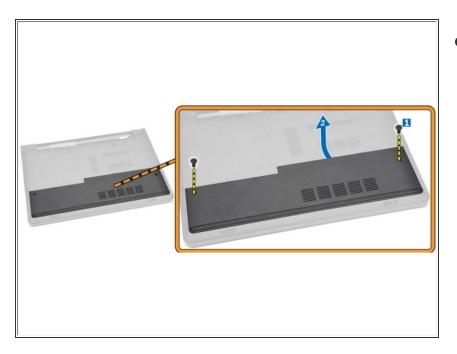


- Remove the screws that secure the access panel to the computer.
  - Lift the access panel away from the computer.

# Step 4 — Disconnecting the Cable

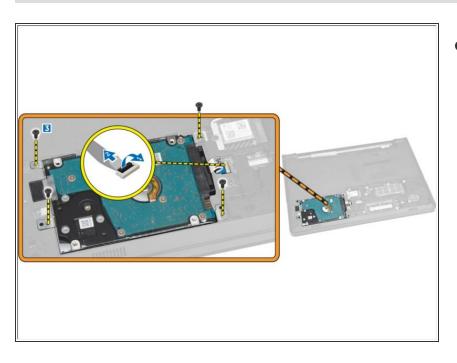


- Lift to release the tab.
  - Disconnect the hard-drive cable from the system board.
    - Remove the screws that secure the hard drive to the computer.

## Step 5 — Remove the Tape

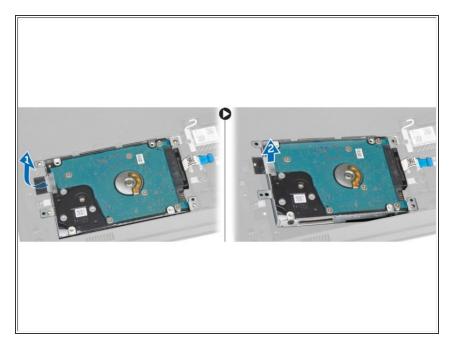

 Remove the tape and lift the hard drive to remove it from the computer.

#### Step 6 — Remove the Screws

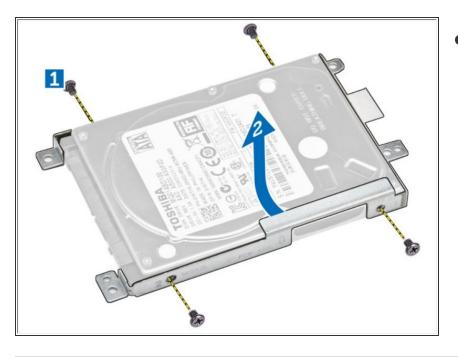

- Remove the screws that secure the hard drive to the bracket.
  - Lift the hard drive away from the bracket.

To reassemble your device, follow these instructions in reverse order.