



# Toshiba Satellite C55D-B5310 Hard Drive Replacement

If the hard drive in your laptop begins to make...

Written By: Crystal Loomis



---

## INTRODUCTION

If the hard drive in your laptop begins to make a loud clicking noise known as "the Click of Death", use this guide to remove and replace your hard drive.

---



### TOOLS:



- [Phillips #1 Screwdriver](#) (1)
  - [Magnetic Project Mat](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — CD/DVD Drive



- Use a Phillips #1 screwdriver (PH1 bit) to remove the single 7 mm screw that secures the CD/DVD drive.

## Step 2

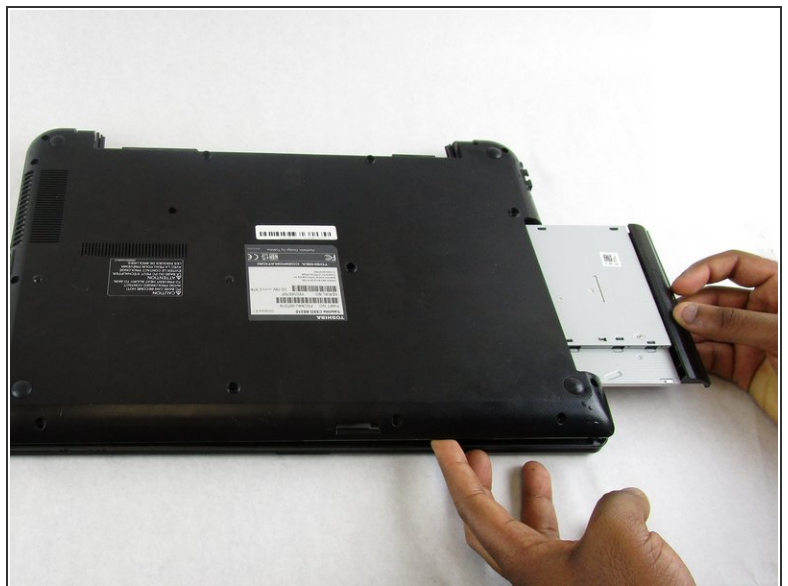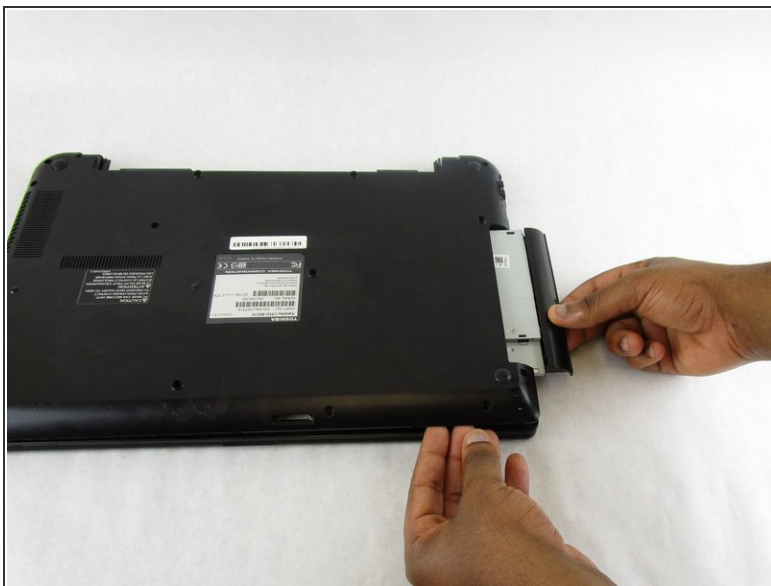

- Slide the CD/DVD Drive out of the laptop.



## Step 3 — Hard Drive



- Use a Phillips #1 screwdriver (PH1 bit) to remove the thirteen 7 mm screws that secure the bottom cover.


## Step 4



- Use a plastic opening tool to separate the back cover from the laptop.
- ⓘ It is recommended that you start from a corner, and run the tool along the edge of the cover.

⚠ Be careful not to bend or crack the plastic back cover.

## Step 5

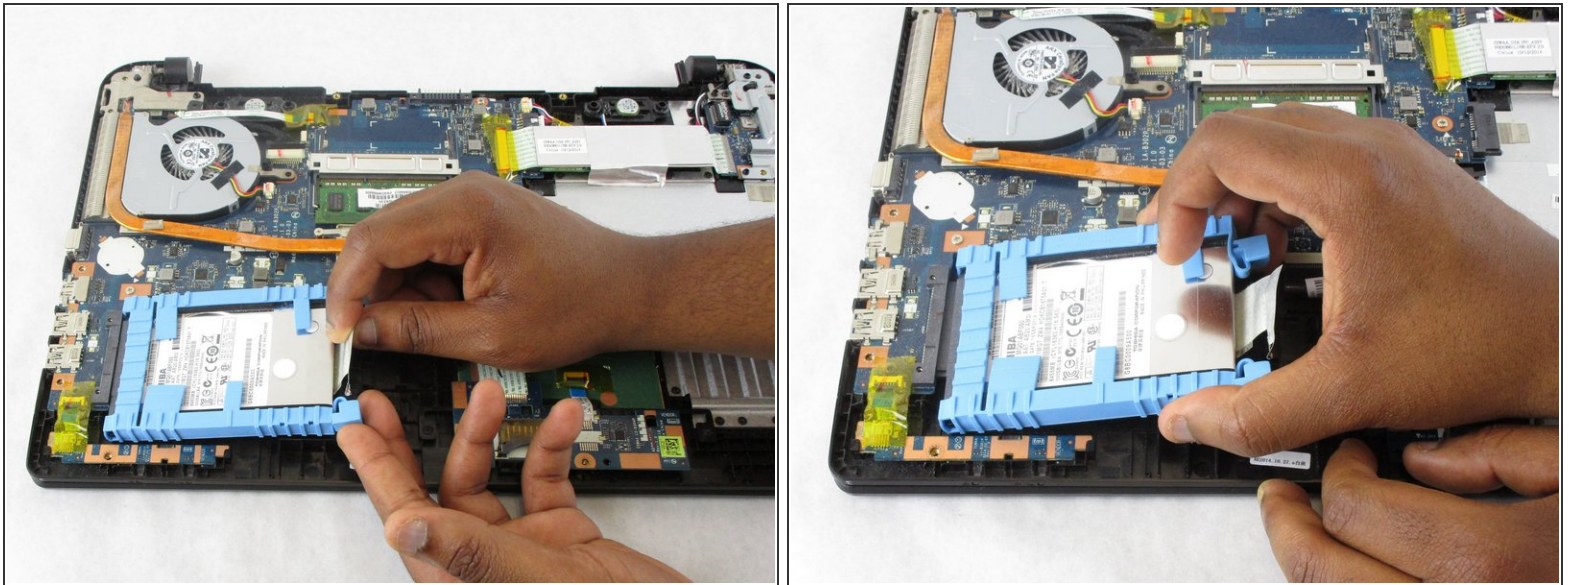

- Using the ribbon beneath the hard drive lift it upwards and pull the hard drive out.

## Step 6



- Remove the hard drive from the blue rubber mount.

To reassemble your device, follow these instructions in reverse order.