




# Memorex CD Alarm Clock Radio Speakers Replacement

Written By: Elijah Val Verde

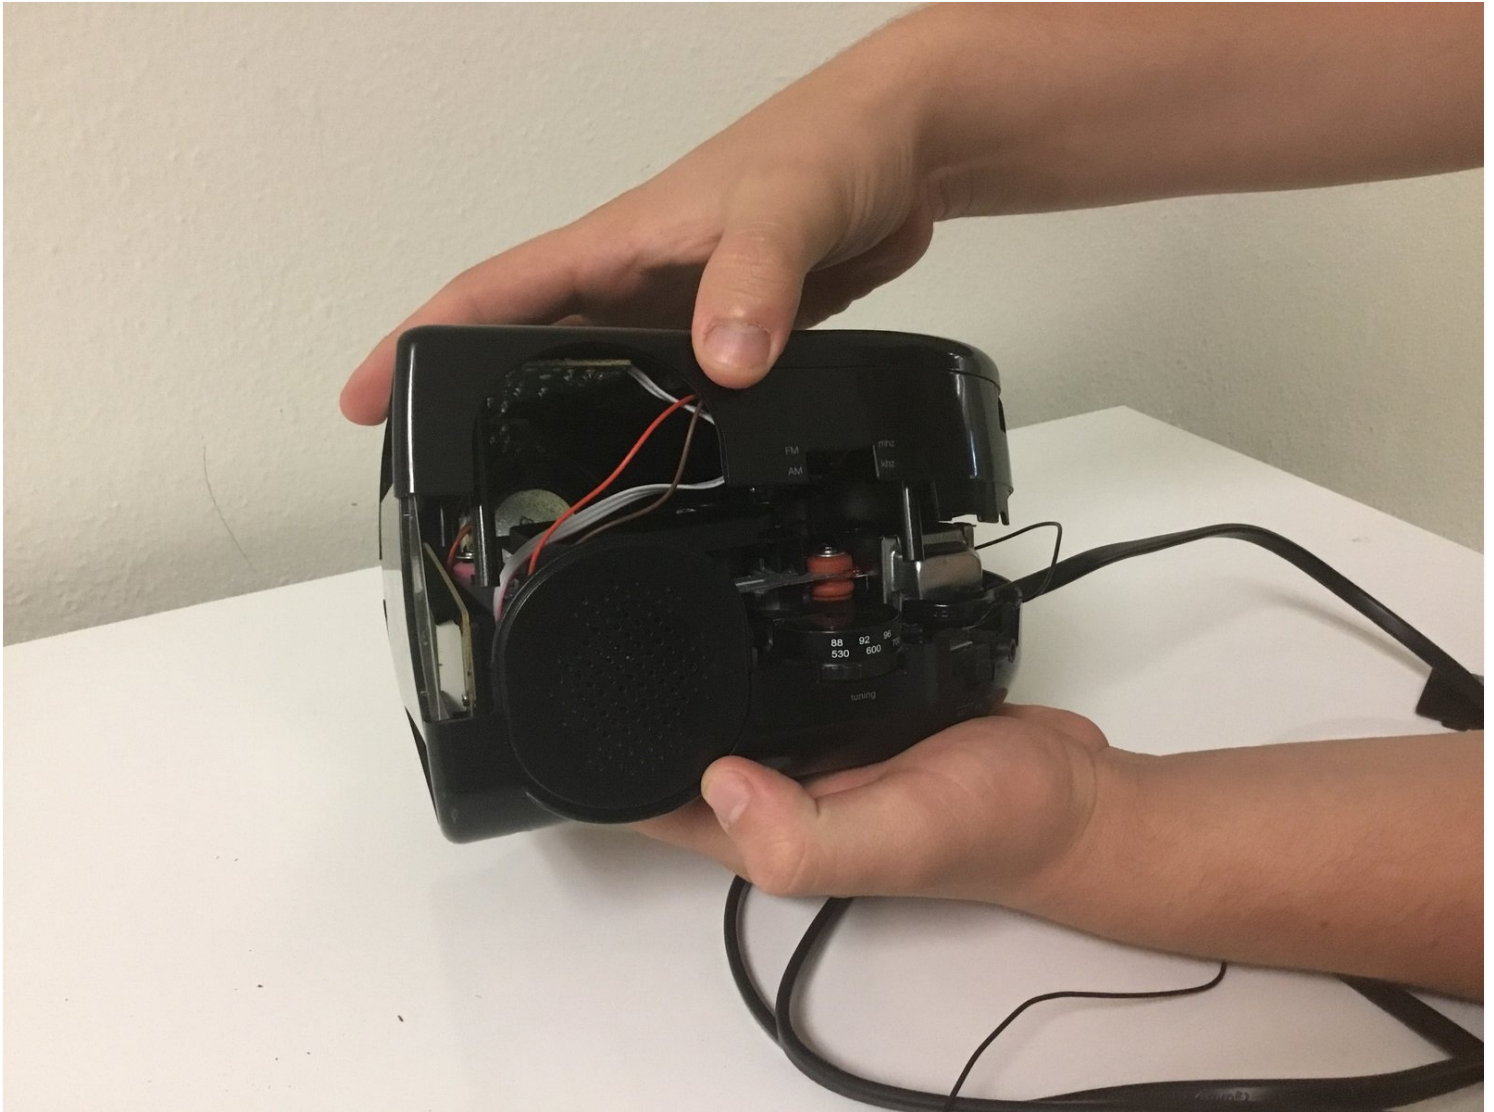


## 🔧 TOOLS:

Phillips #1 Screwdriver (1)  
Portable Soldering Iron (1)

## ⚙️ PARTS:

Memorex CD Alarm Clock Speakers (1)

### Step 1 — Memorex CD Alarm Clock Radio

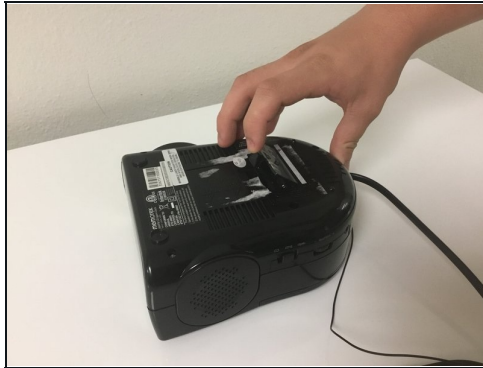

- Turn the clock radio over so the bottom is facing up.
- Pull the tab upward and remove the cover from the battery compartment.
- Remove the batteries.



### Step 2



- Remove the five screws on the bottom of the device with a screwdriver.
- Grasp the top and bottom and gently pull apart.





### Step 3 — Speakers

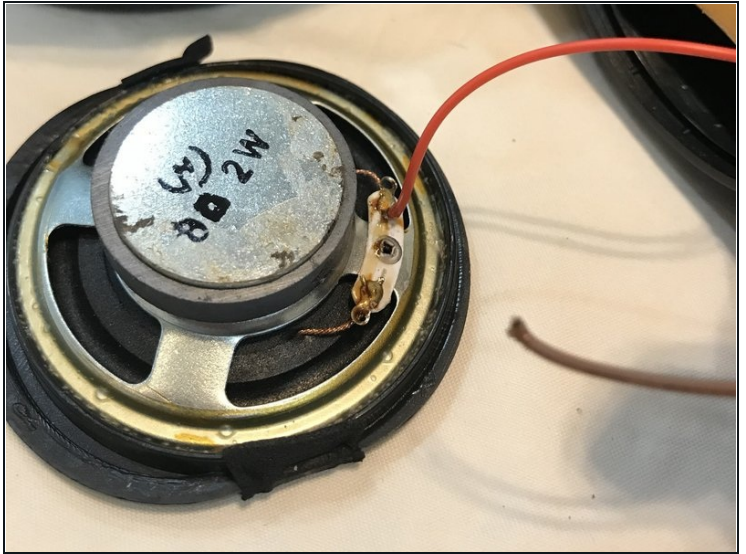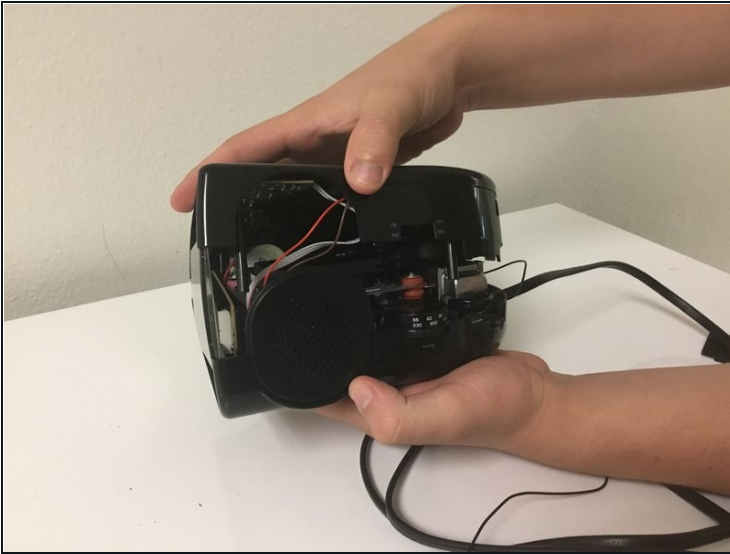

- Speaker will come out with a firm tug from its seated position.
- Remove speaker from alarm clock.

### Step 4

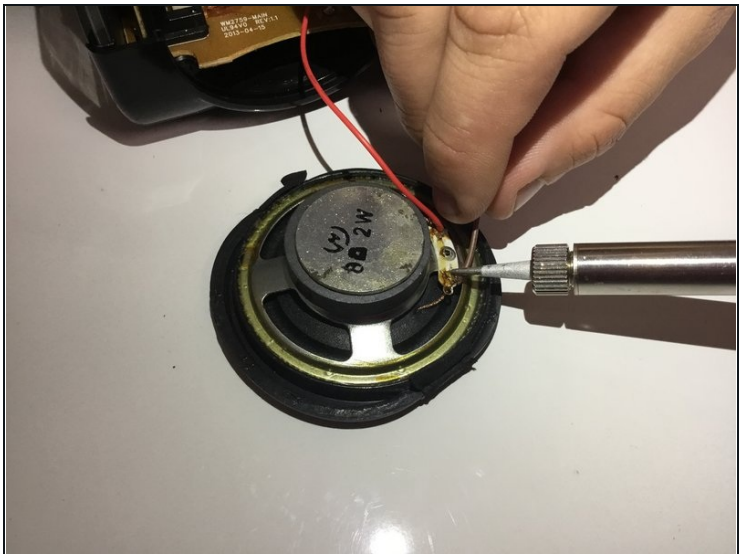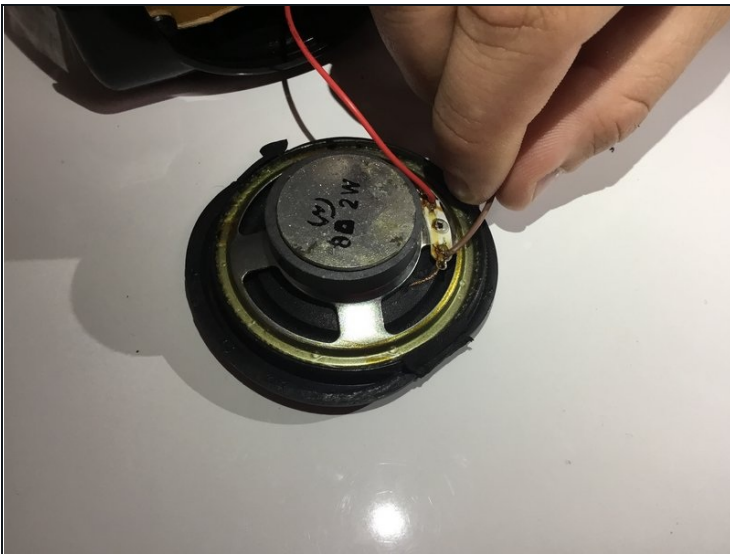

- Soldering will be required to install the wires to your new speaker.

---

To reassemble your device, follow these instructions in reverse order.