



FujiFilm AX655 LCD Replacement

How to disassemble and replace a damaged LCD on the Fujifilm Fuji Film AX655 Digital Camerz.

Written By: Sales Cameraparts4you



INTRODUCTION

Is your LCD damaged? It is time to replace it! This guide will show you all the steps required to replace your camera Screen Display. It is simple and a good DIY project. Save your money and fix your camera yourself.

TOOLS:


- [Phillips PH000 Screwdriver](#) (1)
 - [Latex or nitrile gloves](#) (1)
-

Step 1 — Step 1




- Remove Batteries
- Remove exterior Screws

Step 2 — Step 2

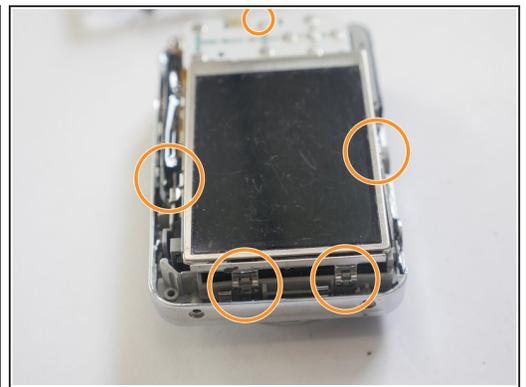

- Rear Housing Case
- Remove screw
- Release flex cable from Main Board
- Release the clamps from the notches to free the top rear plate

Step 3

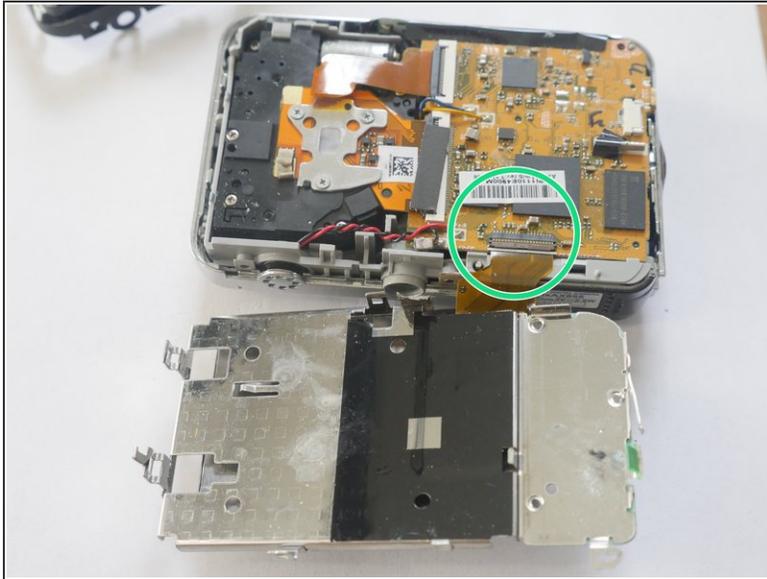

- Release the LCD flex cable from the ziff socket. Careful not to damage ziff clamp
- Next swap out your old LCD with your new LCD and reverse the steps.

To reassemble your device, follow these instructions in reverse order.