



Unnecto Drone M Disassembly

The Unnecto Drone M has several repairable components. This guide will show how to take it apart without damaging them.

Written By: Esteban Almeida



INTRODUCTION

This guide will show you how to carefully disassemble the Unnecto Drone M with easily available tools.



TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
 - [iFixit Plastic Opening Tool](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Unnecto Drone M Disassembly



- Place the phone facedown on a cleared work area
- Remove the back case by applying moderate force to the indentation in the lower left corner of the case.

Step 2



- Grip the top right corner of the battery.
- Remove the battery by pulling it outwards.

Step 3



- Remove the four screws on the back of the phone using a Philips 000 screwdriver

Step 4




- Separate the frame evenly using a plastic opening tool.
- ⓘ Be careful, as the frame is thin and can break easily.

Step 5



- Use a Phillips #000 screwdriver to remove the four screws that secure the motherboard.

Step 6

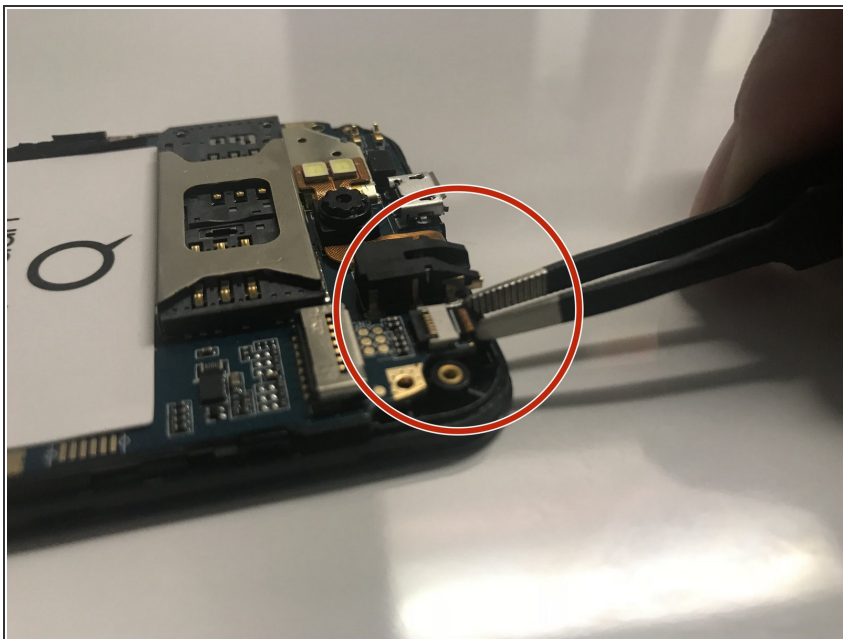

- Disconnect the ribbon cable from the motherboard using rounded, spade-tipped tweezers.

Step 7



- Peel the white circuit on left side of the frame by inserting fine-tipped tweezers between it and the frame.
- ⓘ The white circuit is flimsy and securely glued to the frame.

Step 8



- Set aside the circuit board from the screen protector.

To reassemble your device, follow these instructions in reverse order.