


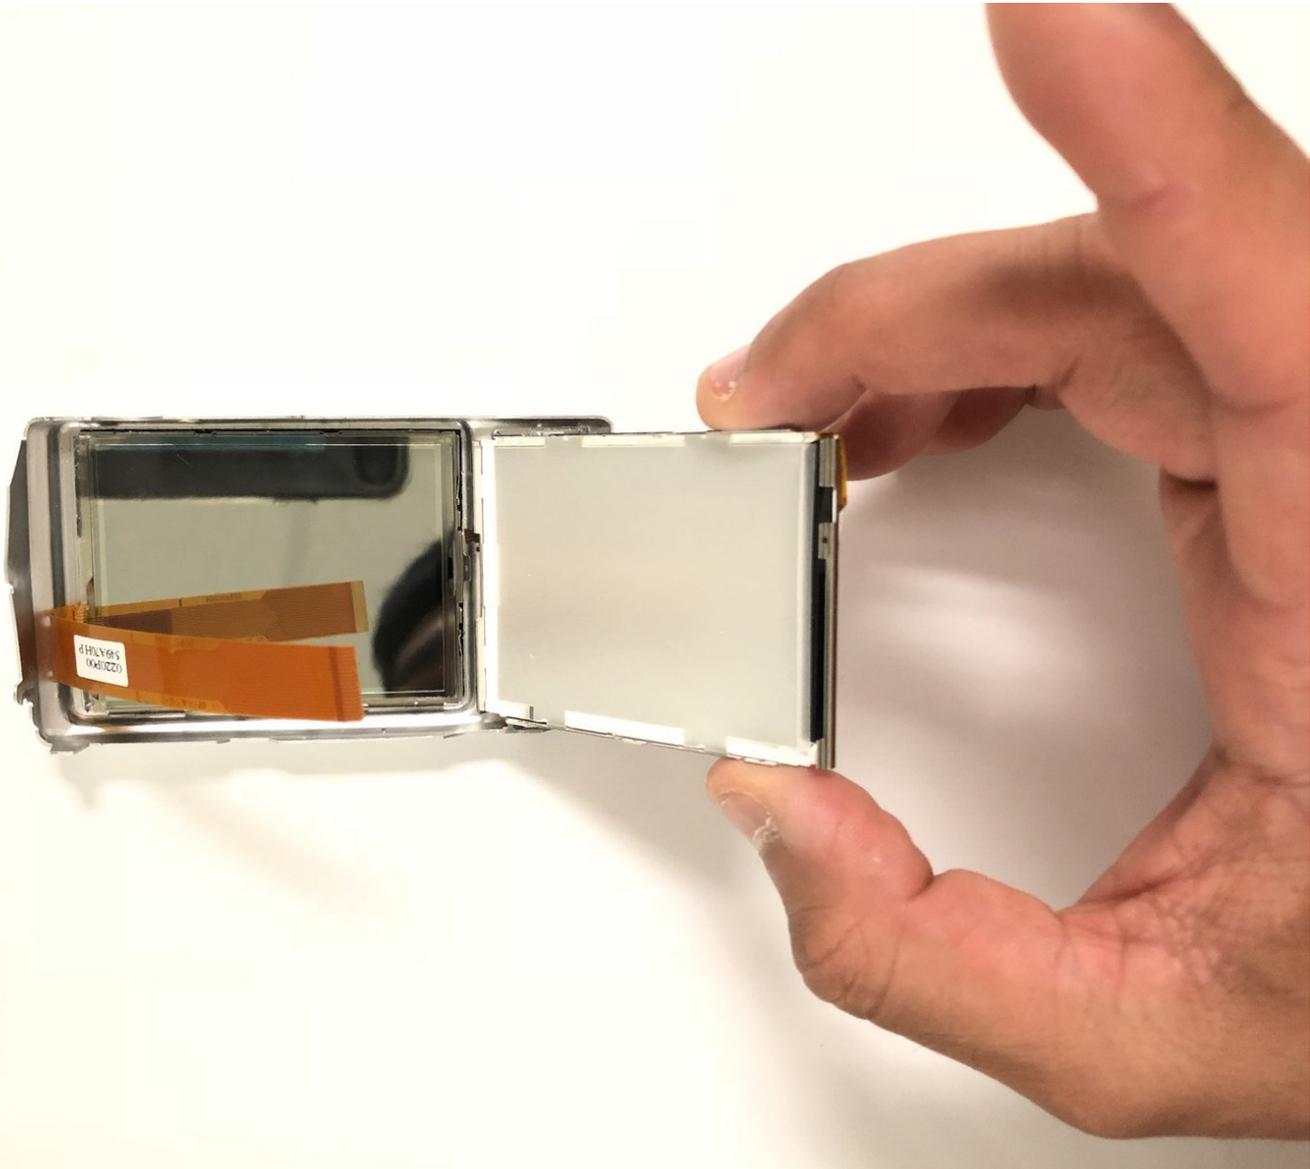

Panasonic Lumix DMC-FX9 Screen Replacement

This guide gives instructions for screen replacement for the Panasonic Lumix DMC-FX9.

Written By: Ever Escobar



**TOOLS:**

- [iFixit Opening Tool](#) (1)
- [Phillips #0 Screwdriver](#) (1)

**PARTS:**

- [LCD Screen Display for Panasonic Lumix DMC-FX9](#) (1)

Step 1 — Screen



- Make sure the power is off by making sure the switch is to the right. The power switch can be found on the top side of the camera.

Step 2





- Use the Philips #00 Screwdriver on the screw on the left side of the camera.
- There is another screw on the underside of the camera that is part of the left cover.

Step 3



- Use the Philips #00 Screwdriver to remove the two screws on the right cover of the camera.

Step 4

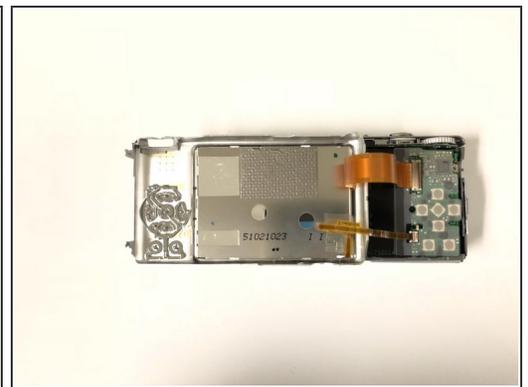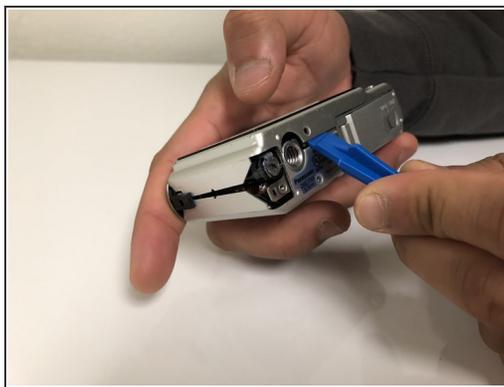


- Use the Philips #00 Screwdriver to remove the screws on the bottom side of the camera.
- Make sure to grasp the camera because these are the last two screws that hold the camera in place.
- Carefully place the opening tool between the two covers and gently apply force upward to separate the covers.

Step 5




- There are two digitizer cables that connect the LCD Screen to the camera motherboard.
- The digitizer cables are held down by retaining flats.
- Carefully use the opening tool to push the retaining flats upward to allow the digitizer cables to disconnect.

Step 6

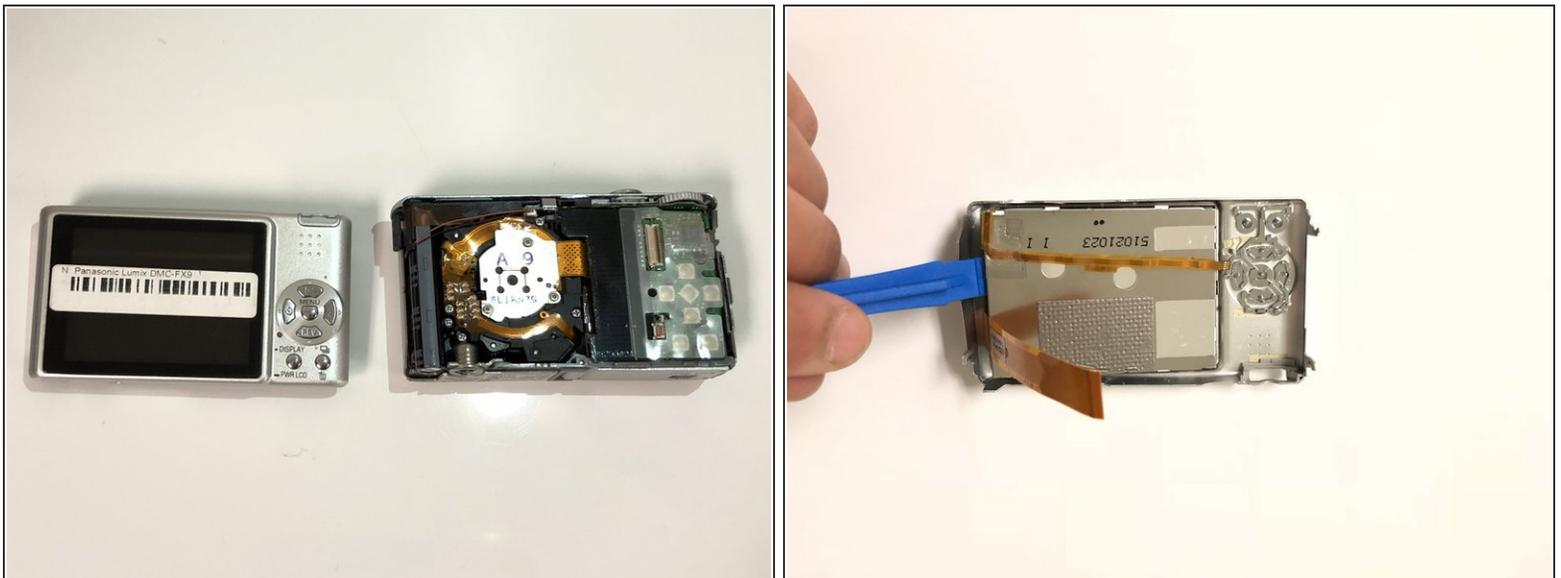

- Carefully use the opening tool to remove the LCD Screen from the glass frame.

Step 7

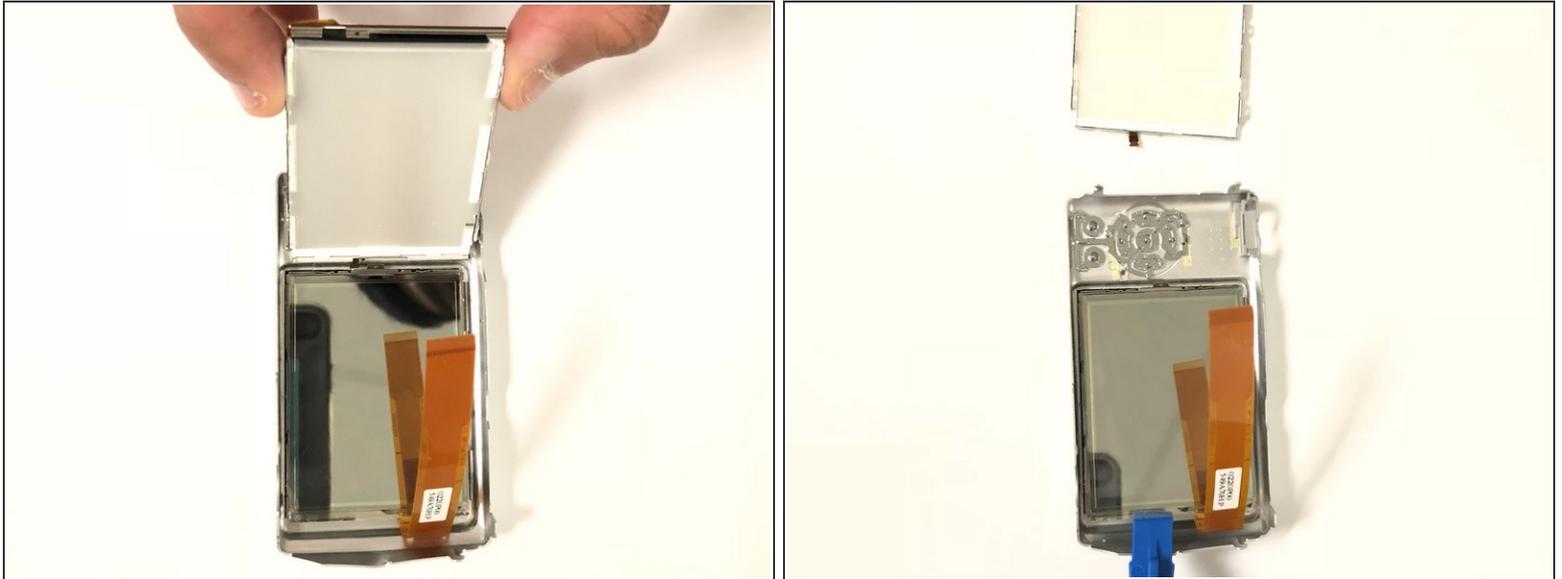

- Carefully use the opening tool to separate the screen from the frame.

To reassemble your device, follow these instructions in reverse order.