



# Toshiba Satellite C55D-B5310 CD/DVD Drive Replacement

How to replace the CD/DVD drive in a Toshiba Satellite C55D-B5310.

Written By: Crystal Loomis



---

## INTRODUCTION

If your CD/DVD Drive fails to read media inserted, use this guide to remove and replace the CD/DVD Drive.



### TOOLS:


- [Magnetic Project Mat](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — CD/DVD Drive



- Use a Phillips #1 screwdriver (PH1 bit) to remove the single 7 mm screw that secures the CD/DVD drive.

## Step 2

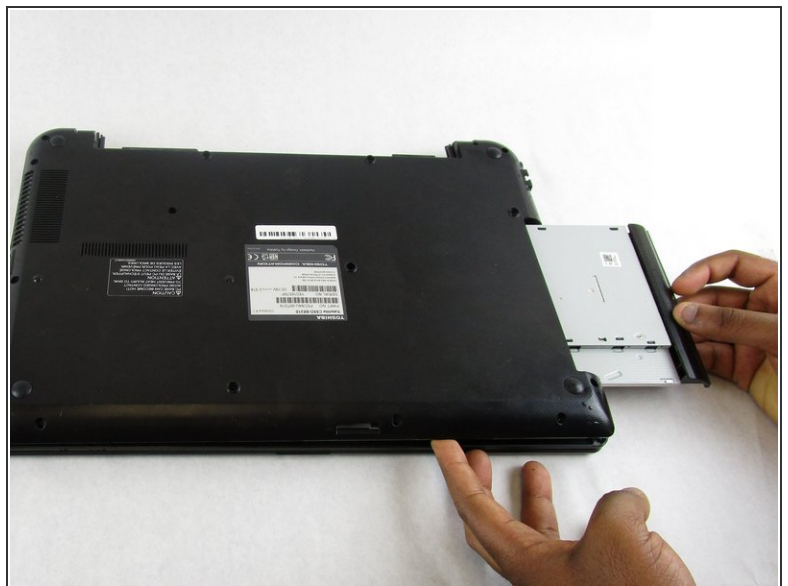

- Slide the CD/DVD Drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.