 




Panasonic Lumix DMC-FX9 Memory Card Replacement

This guide will show how to remove and replace the memory card.

Written By: Kim Dung Nguyen

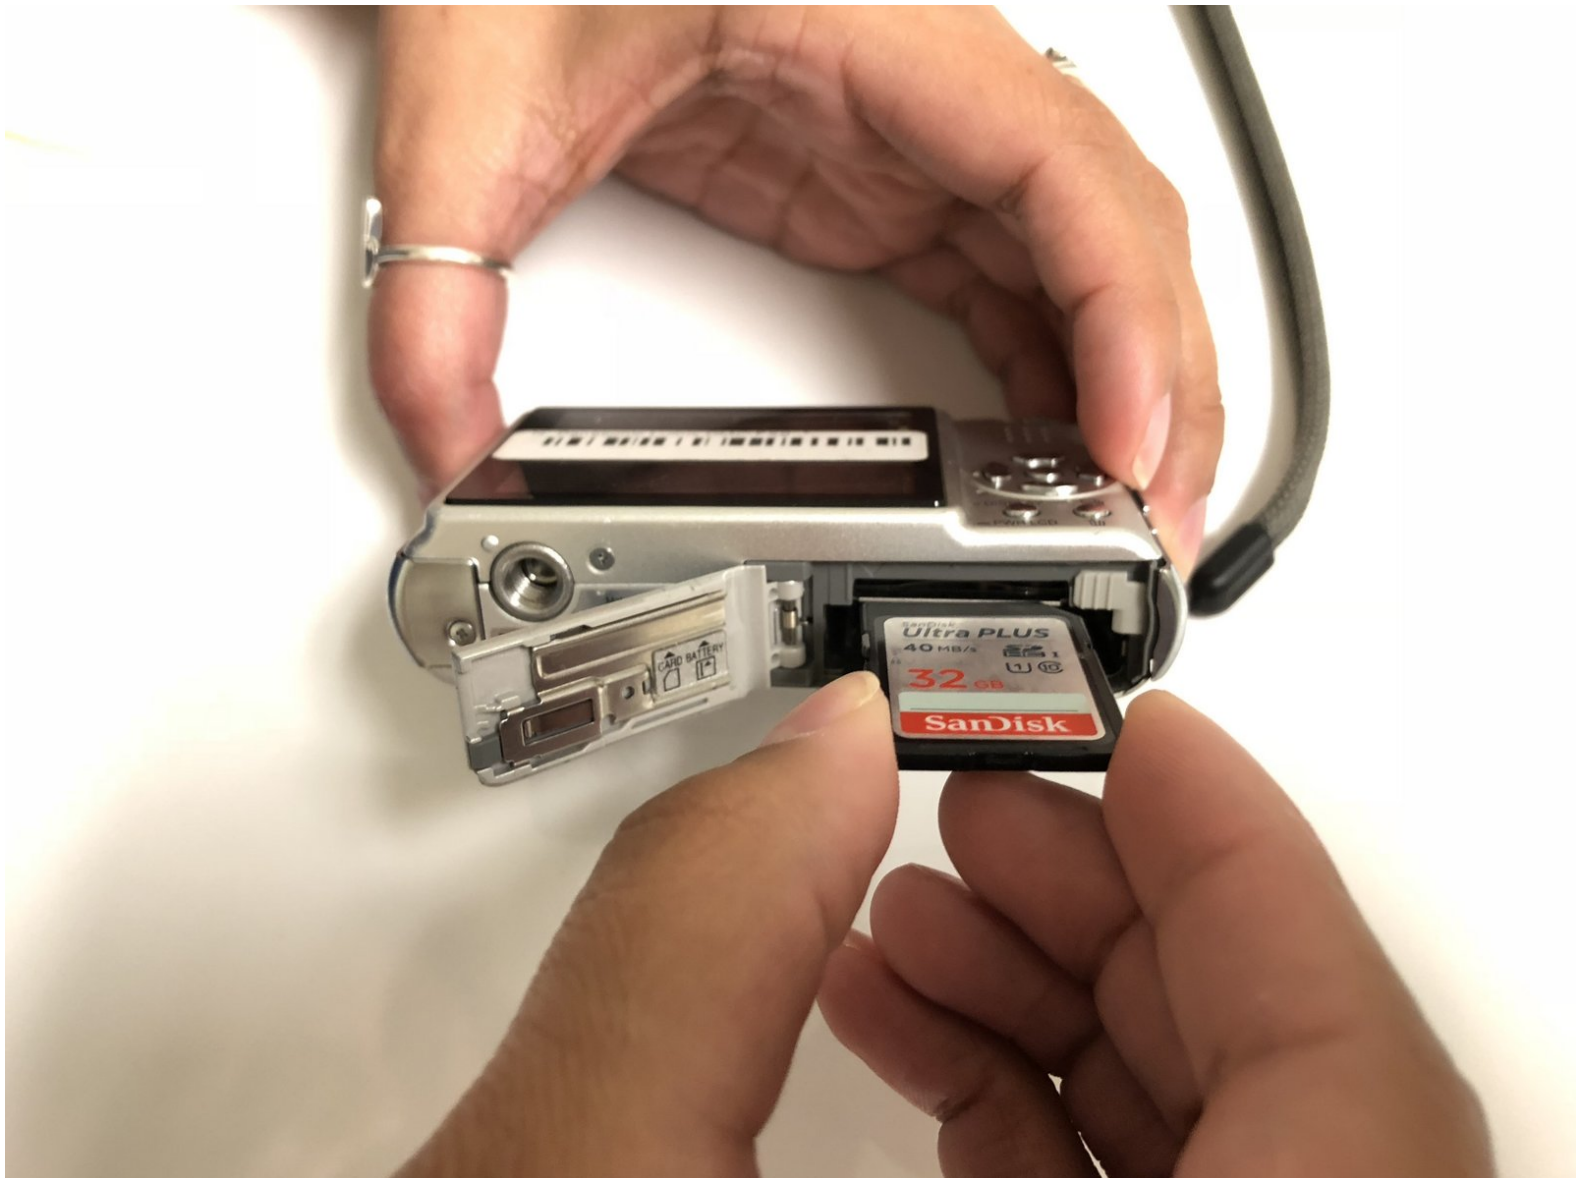



TOOLS:

 
 
- [Fingers](#) (1)
-

Step 1 — Memory Card



- Locate the battery cover on the bottom of the camera.
- Slide the tab to the left and lift to open the battery cover.

Step 2

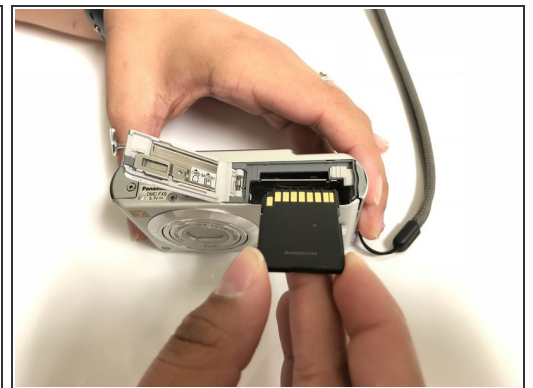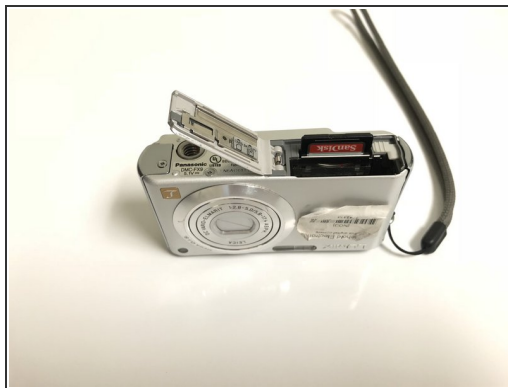

- Push down on memory card until the card clicks and releases.
- Pull up on memory card to remove from slot.

To reassemble your device, follow these instructions in reverse order.