



Alcatel Pop 4 Plus Speaker Replacement

This guide will show you how to replace the speaker the Alcatel Pop 4 Plus.

Written By: Maalik Poleon



INTRODUCTION

This guide will show you how to replace your Alcatel Pop 4 Plus speaker. This guide involves removing the back cover and the secondary cover where the speaker is located. Then you just pop it out and put in the new speaker.



TOOLS:


- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)



PARTS:

- [Alcatel POP 4 Plus Speaker](#) (1)

Step 1 — Battery

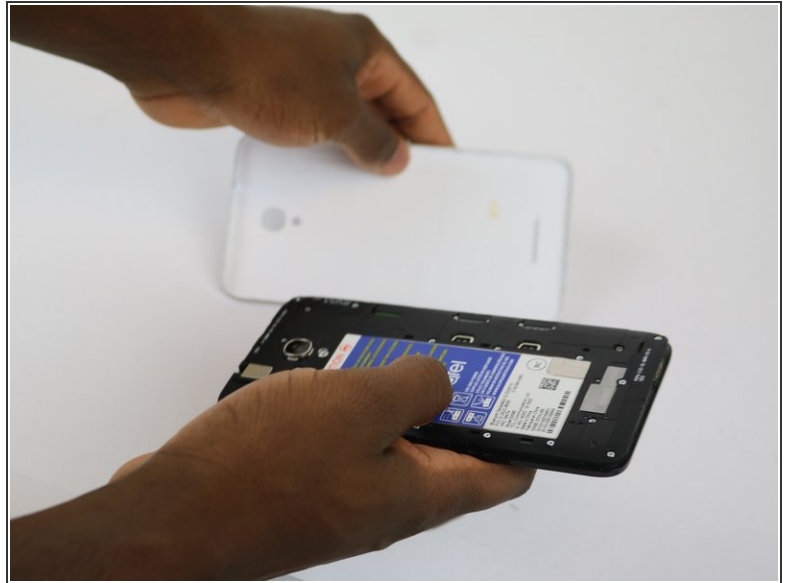

- Remove the back cover by sliding your fingernail in the groove around the edge of the phone and prying it off.

Step 2



- Remove seventeen 3mm Phillips #000 screws from the mid-frame.

Step 3



 
- Use the flat end of the spudger, or your fingernail, to pry off the mid-frame.

Step 4



- Use the flat end of the spudger to disconnect the battery from the motherboard.
- Use the flat end of the spudger tool to pry out the battery.

Step 5 — Speaker

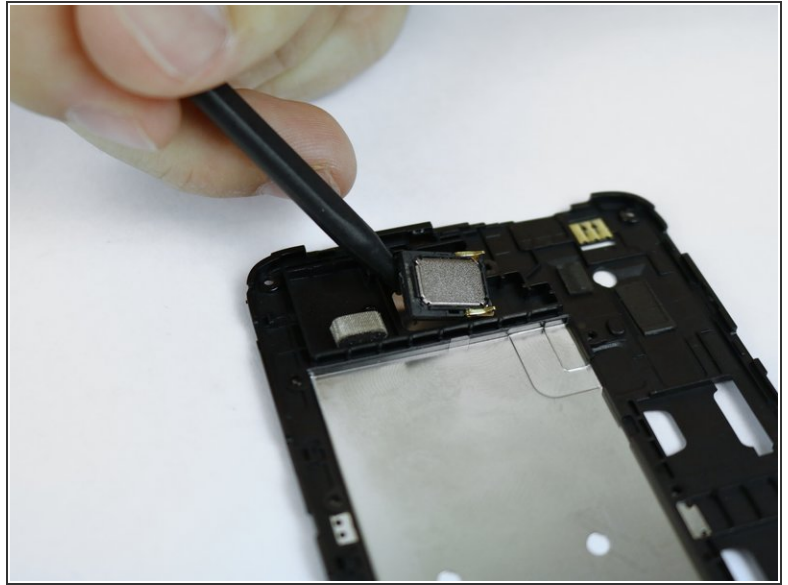

- Use a spudger to pry the speaker from the mid-frame.

To reassemble your device, follow these instructions in reverse order.