



Alienware P18G M14X R1 Back Cover Replacement

How to replace the Alienware P18G M14X R1 back cover.

Written By: Andonaq Grozdani



INTRODUCTION


Prerequisite Only



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Cover

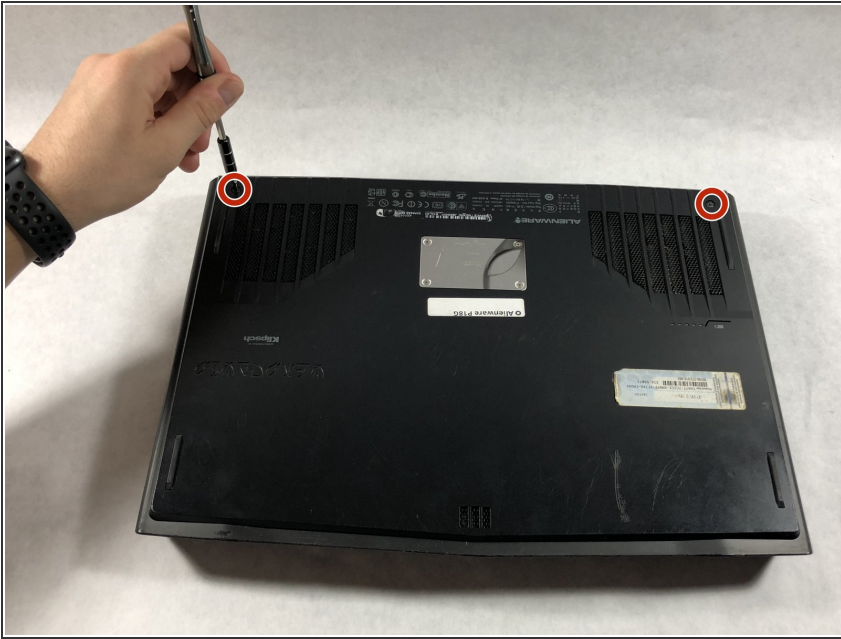

- Loosen the top left and top right 6.5mm PH1 screws that hold down the back cover.
- ⓘ The screws will not be able to be removed from the back cover. They can only be loosened or tightened.

Step 2



- Slide back cover forward using your thumbs.

Step 3



- Lift up the cover and set aside exposing the internals of the computer.

To reassemble your device, follow these instructions in reverse order.