



Dell Inspiron 1200 Memory Modules Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Modules.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Loosen the Screw



⚠ Follow the instructions in ["Before Working Inside Your Computer."](#)


- Loosen the captive screw (labeled "M") in the memory module cover, and lift the cover away from the computer.

Step 2 — Popping the Memory Module

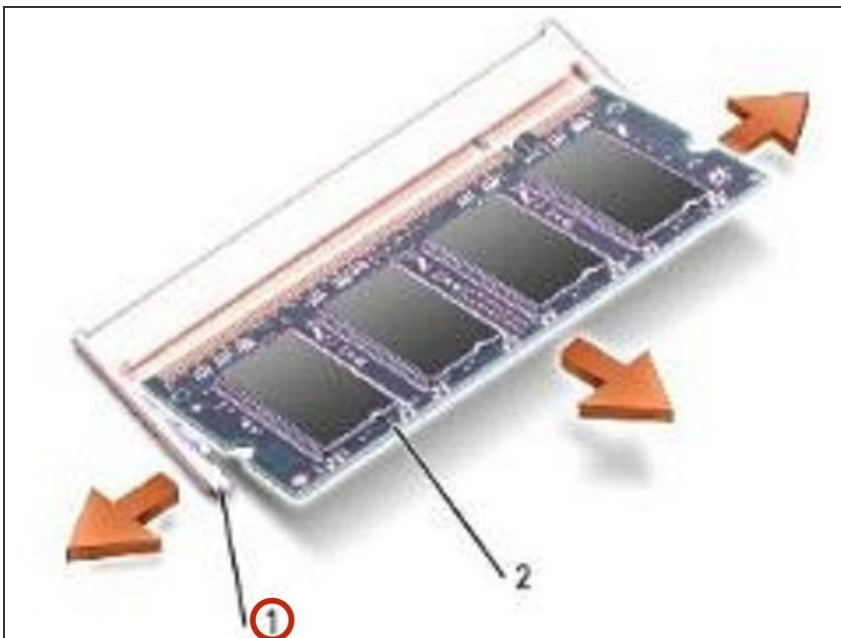


- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.

Step 3 — Removing the Memory Module

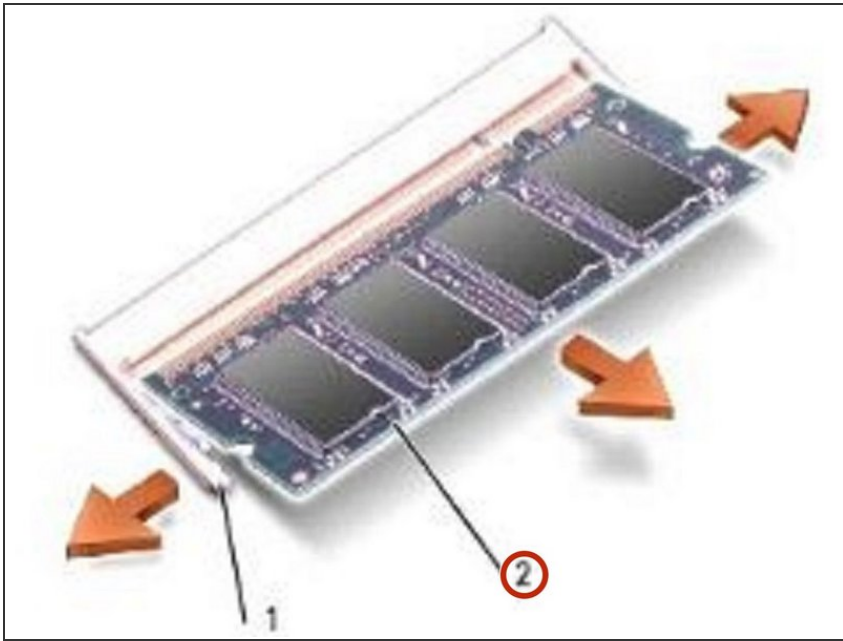


- Remove the module from the connector.

Step 4 — Align the Notch

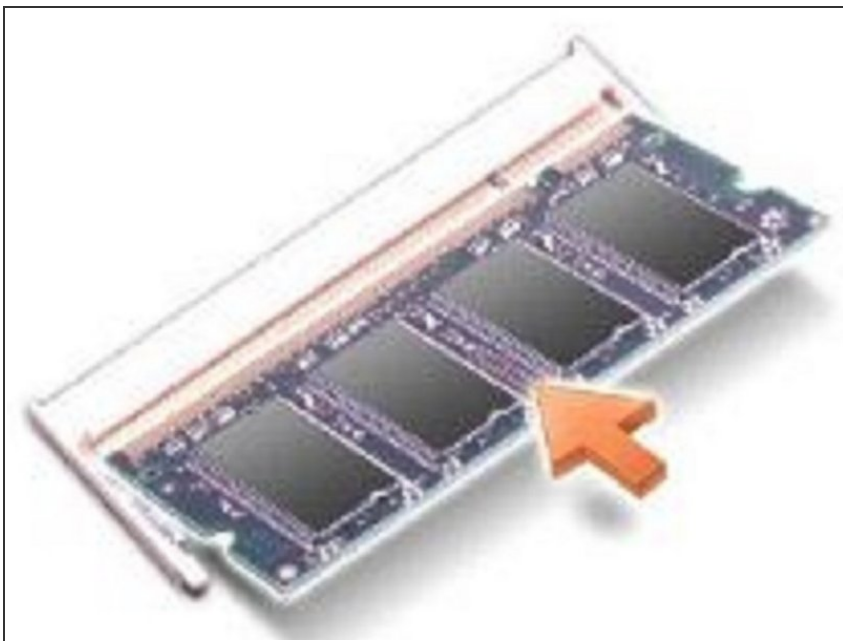

- ⓘ NOTE: If the memory module is not installed properly, the computer may not boot properly. No error message indicates this failure.
- Align the notch in the module edge connector with the tab in the connector slot.

Step 5 — Installing the Module

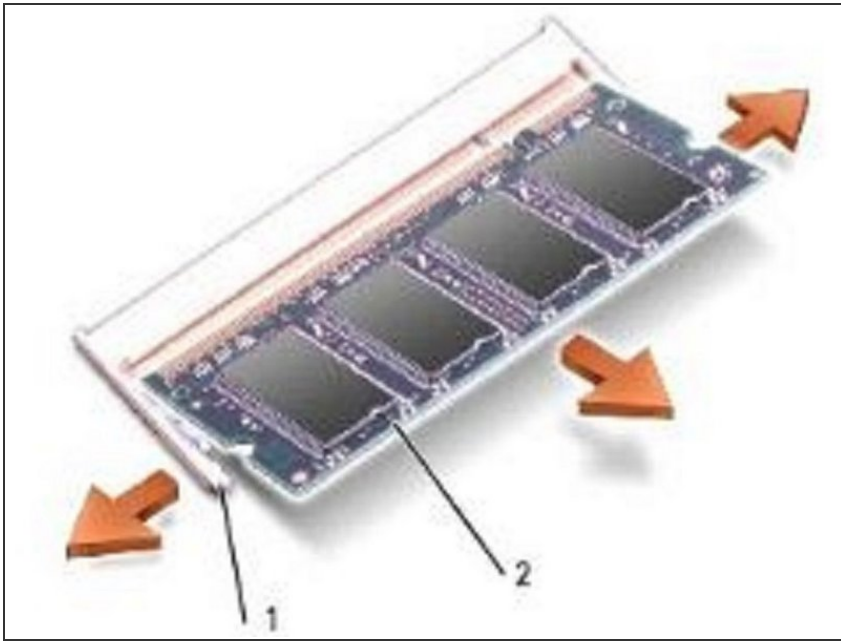

- Slide the **NEW** module firmly into the slot at a 45-degree angle, and rotate the module down until it clicks into place. If you do not feel the click, remove the module and reinstall it.

Step 6 — Replace the Cover



- Replace the cover and tighten the captive screw.