

HP Envy dv6-7363cl Battery Replacement

Reader will be able to successfully replace...

Written By: dylananthony



INTRODUCTION

Reader will be able to successfully replace their battery in the device. Charging cable must be unplugged from device before attempting.



HP TouchPad Battery (1)

Step 1 — Battery



• Flip the device upside-down so that its bottom is facing up.

Step 2



• Push the lever underneath the battery to the left.

Step 3



• Lift the battery up out of its socket.

To reassemble your device, follow these instructions in reverse order.