



HP Elitebook 2740p RAM Replacement

Simple way to upgrade your computer's RAM or replace RAM that is damaged.

Written By: Cameron Whittle



INTRODUCTION

The computers RAM, or Random Access Memory, is important in helping your computer run quickly and efficiently. Replacing damaged RAM or simply upgrading to newer/faster RAM is very beneficial to extending a computers life.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM





- Place the laptop face down in front of you.
- Use a Phillips #0 screwdriver to remove the three 3 mm screws from the back of the case.
- Remove the back panel.

Step 2

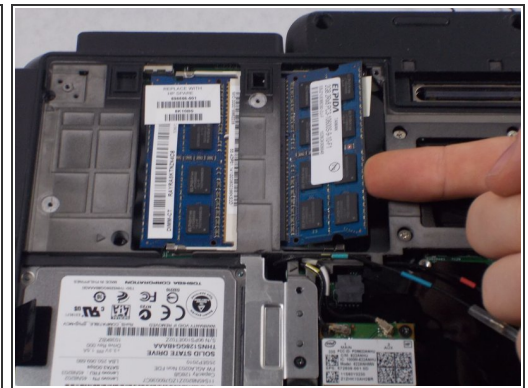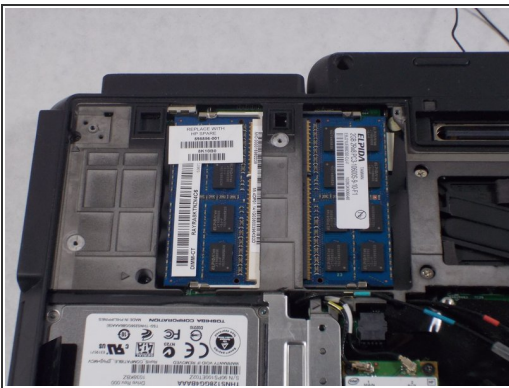

- Press outward on the plastic clips to release the RAM.
- Gently pull the RAM stick out of the SODIMM slot.

Step 3

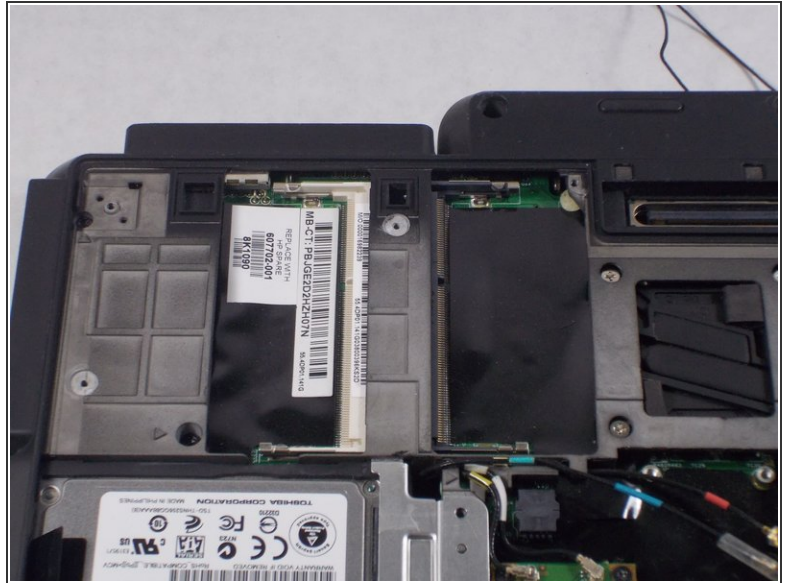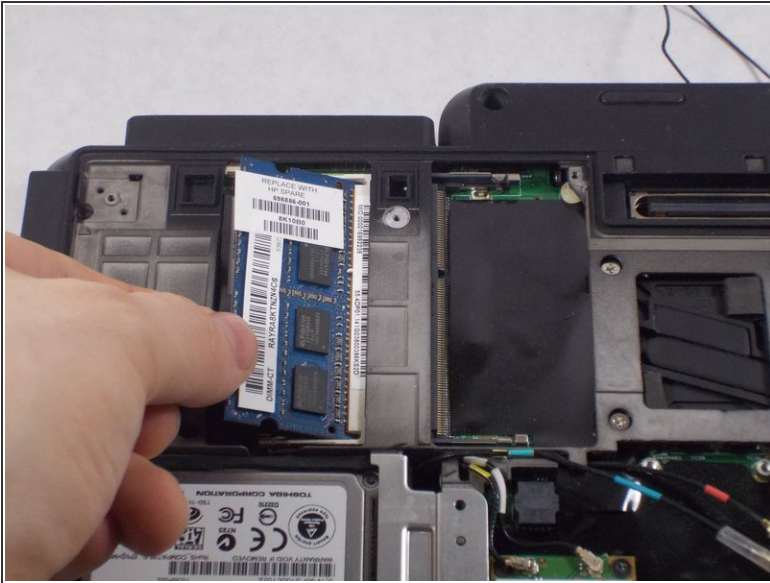

- Repeat step 2 for the second stick of RAM and remove it.

To reassemble your device, follow these instructions in reverse order.