

Dell Precision M4600 Keyboard Trim Replacement

Written By: Johnathan Hammond



This document was generated on 2020-12-03 12:33:13 AM (MST).



This document was generated on 2020-12-03 12:33:13 AM (MST).

Step 1 — Battery



- Slide the battery release latch into the unlock position.
 - Remove the battery from the system.

Step 2 — Keyboard Trim



- Using a plastic scribe, pry under the keyboard trim to release it from the computer.
 - Work your way around the sides and bottom edge of the keyboard trim.
 - Lift up to remove the keyboard trim from the unit.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-12-03 12:33:13 AM (MST).