




How to clean out a Black and Decker Toast R Oven

Clean the Black and Decker Toast R Oven.

Written By: Jonathan

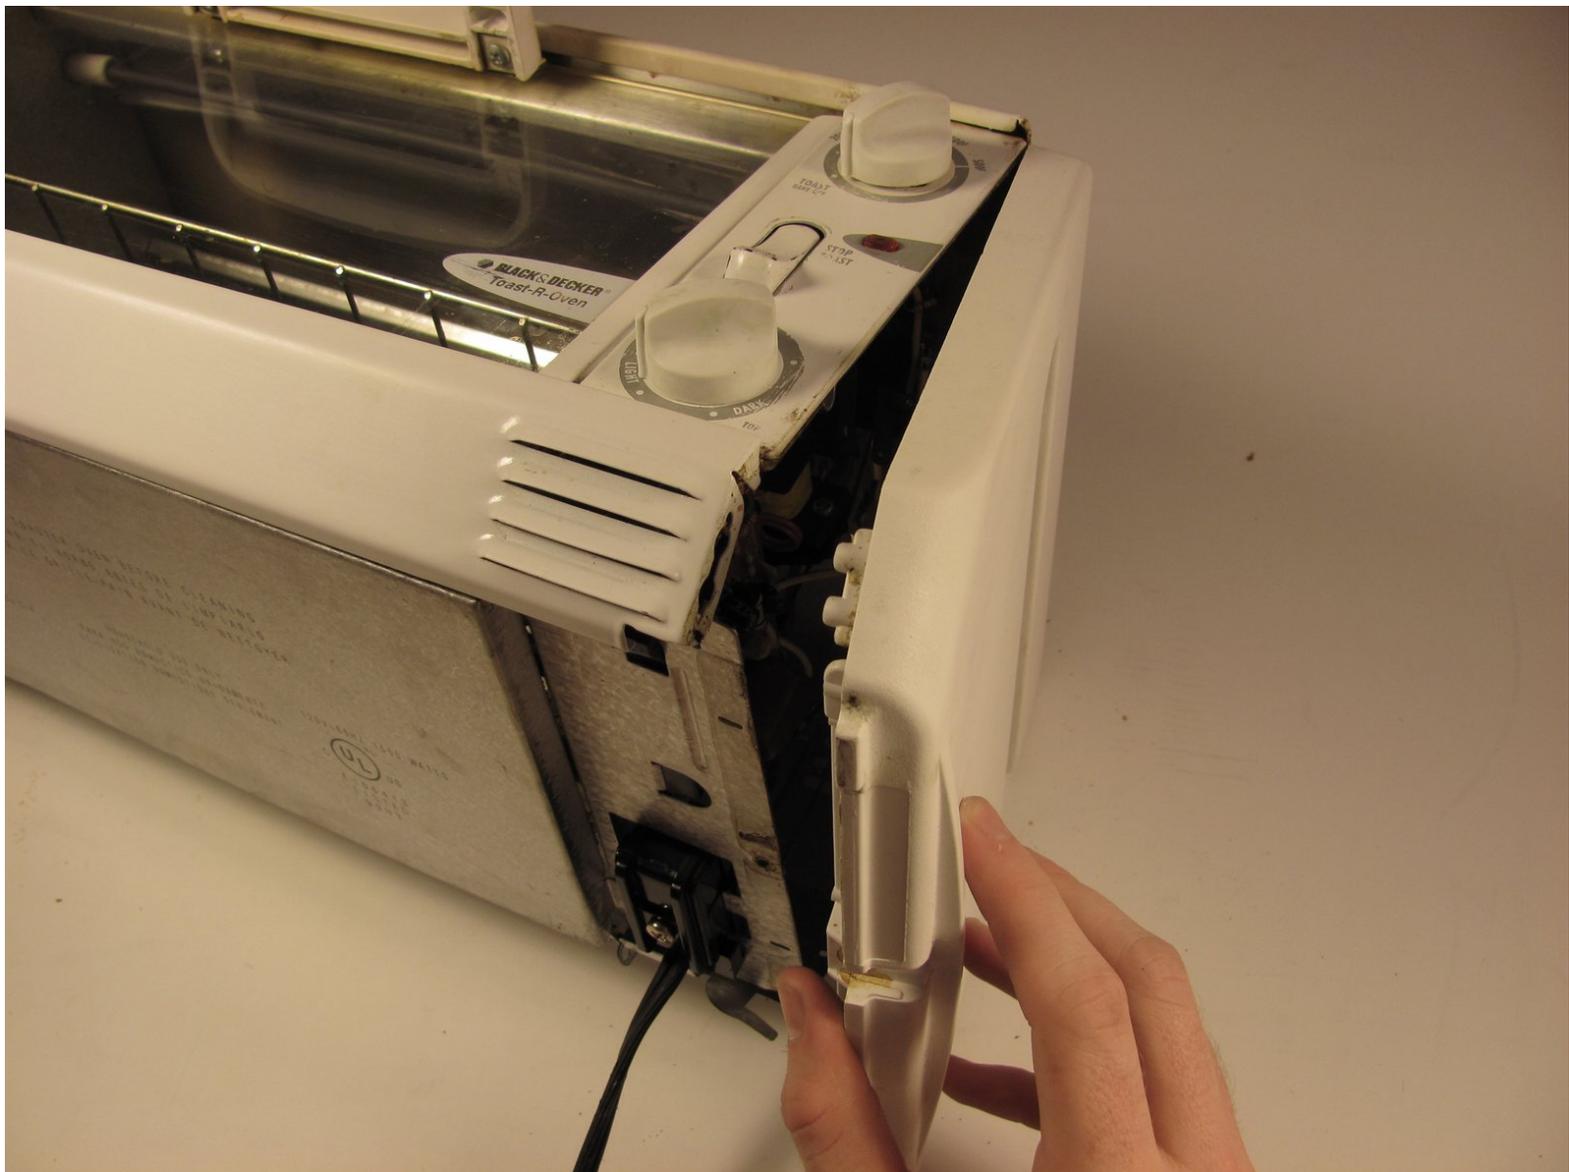


INTRODUCTION

Sometimes a burning smell can come from the toaster. This could be caused by crumbs stuck in the unit so it's suggested that you deep clean the Black and Decker Toast R Oven.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Large Needle Nose Pliers](#) (1)
-


Step 1 — How to clean out a Black and Decker Toast R Oven

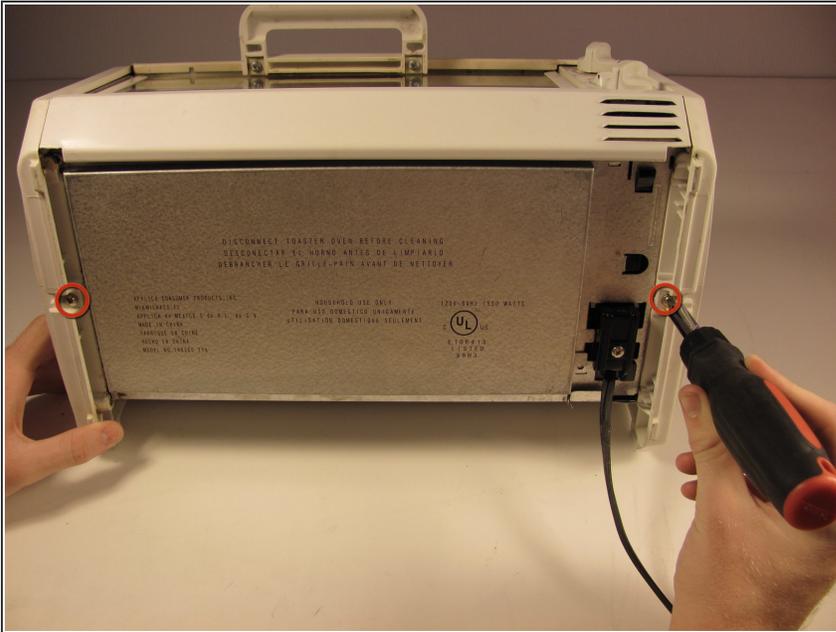

⚠ Make sure that the toaster is unplugged before you begin.

- Turn the toaster over with its backside face down.
- Remove the two Phillips #4 1cm screws that attach the side panels.

Step 2

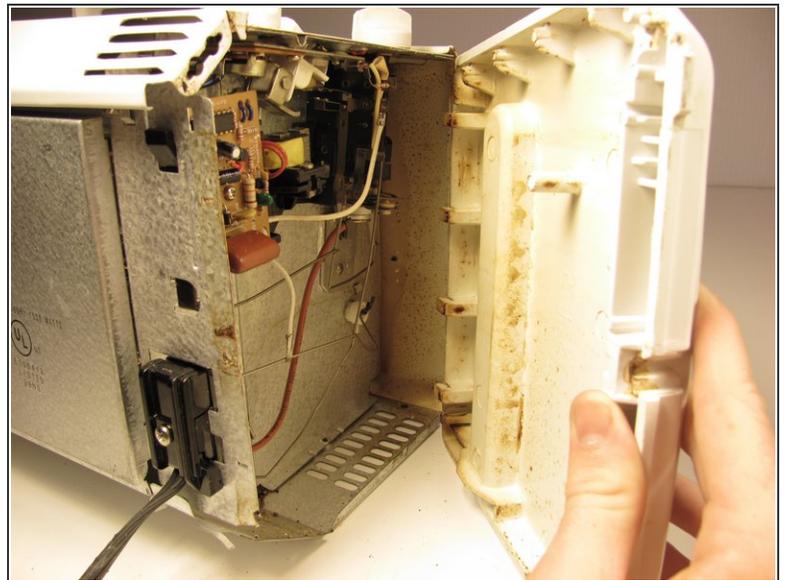

- Pull downwards (towards the bottom of the unit) and outward to remove the side panels.

Step 3



- Remove the metal vent piece that is below the door.
- ⓘ This should slide off easily once both of the side panels are removed.

Step 4




- Remove the two Phillips #4 1 cm screws, which connect the bottom panel to the unit.

Step 5



- Remove the crumb tray (the bottom, metal panel) from the toaster unit.

Step 6

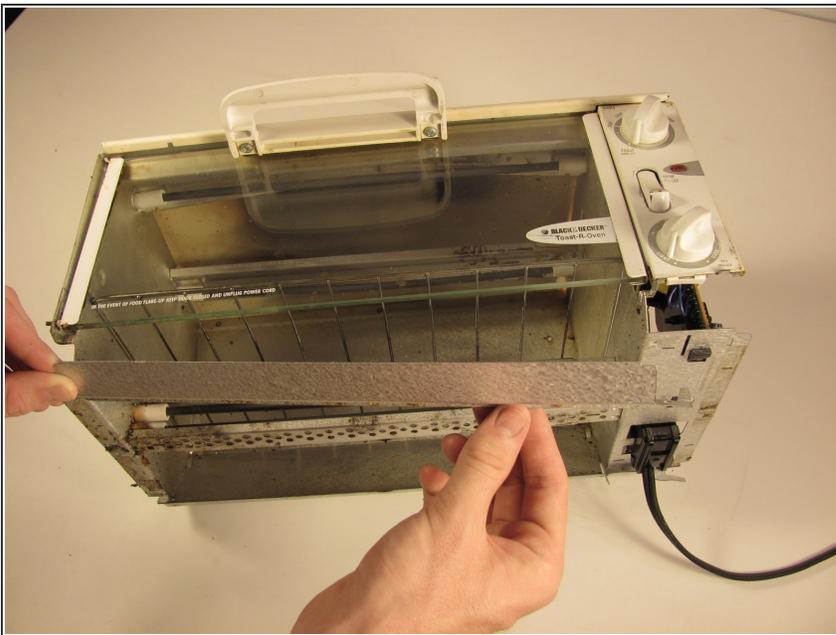


- Remove the aluminum strip from the bottom of unit; this is the piece that is directly under the door.

Step 7




- Remove the knobs by pulling them upward; they should slide right off.
- When placing the knobs back on the unit, make sure the semicircle notch fits correctly in the hole so that the knobs don't fall off.

Step 8

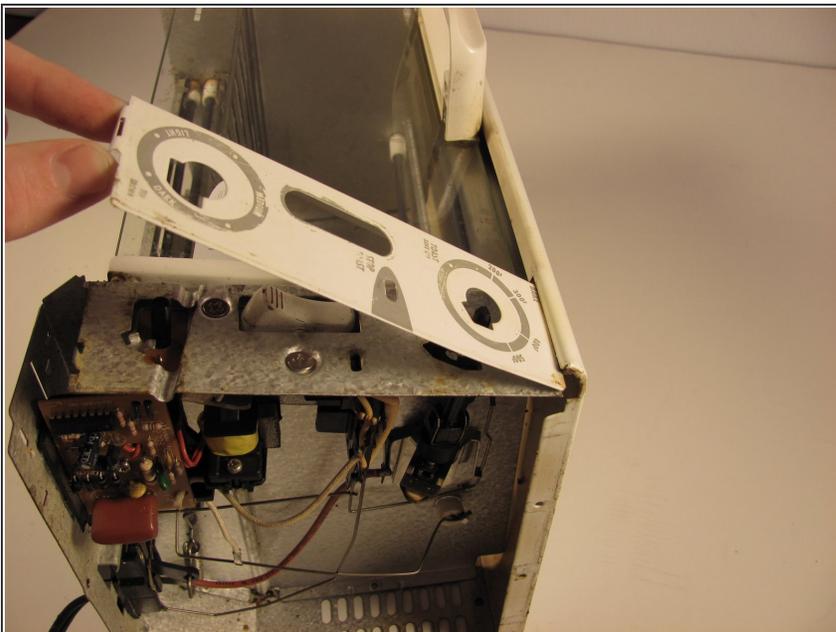

- Unhook the bottom of the the display panel from the toaster unit.
- ⓘ It will be a little tough to pry off, but don't be afraid to be forceful. You can use your hands, or pliers, to bend the metal piece backwards.

Step 9

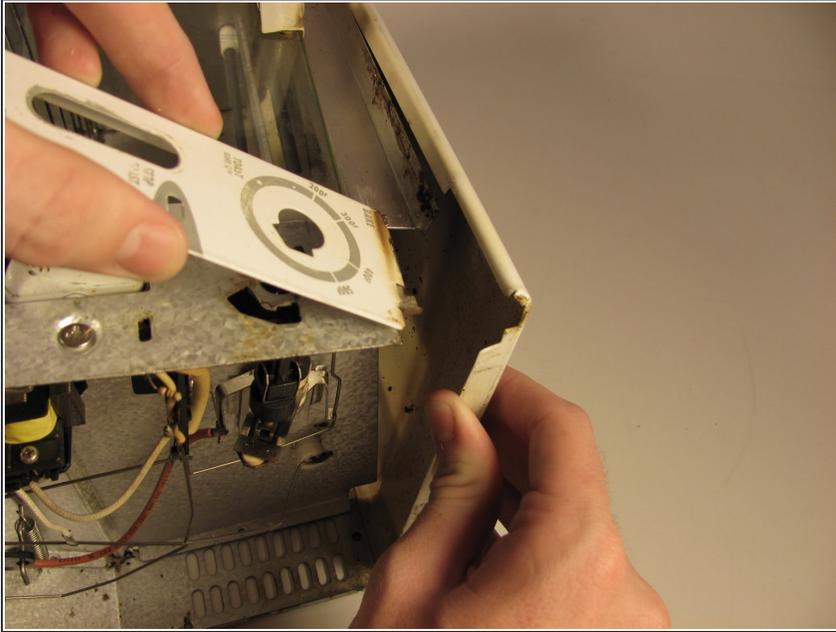


- Begin to detach the back panel from the toaster unit.
- Then, unhook the rest of the display panel.
- ⓘ This will also be a little tough to get off, but don't be afraid to be forceful.

Step 10




- Finish removing the outside cover by lifting the lid upward.

Step 11

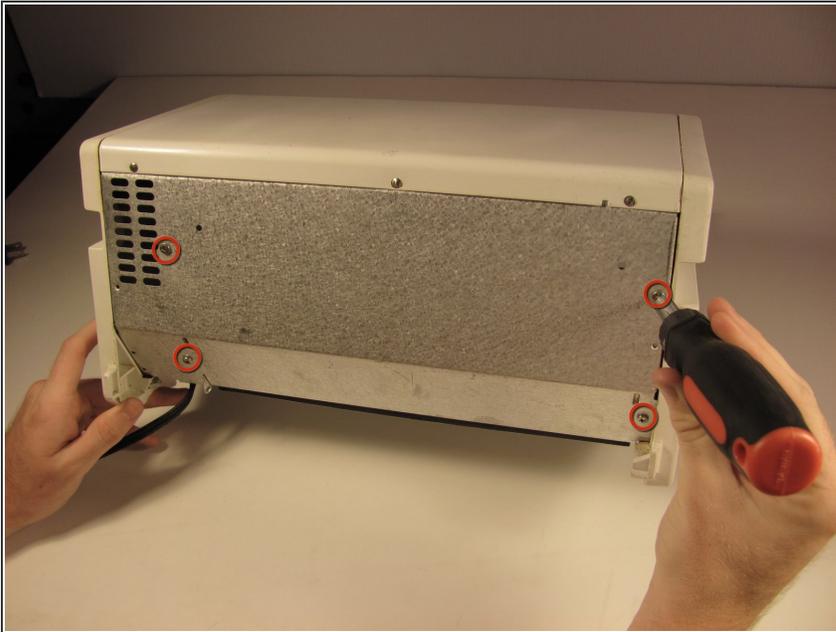


- Remove the four Phillips #4 1 cm screws from the back of the unit.

Step 12

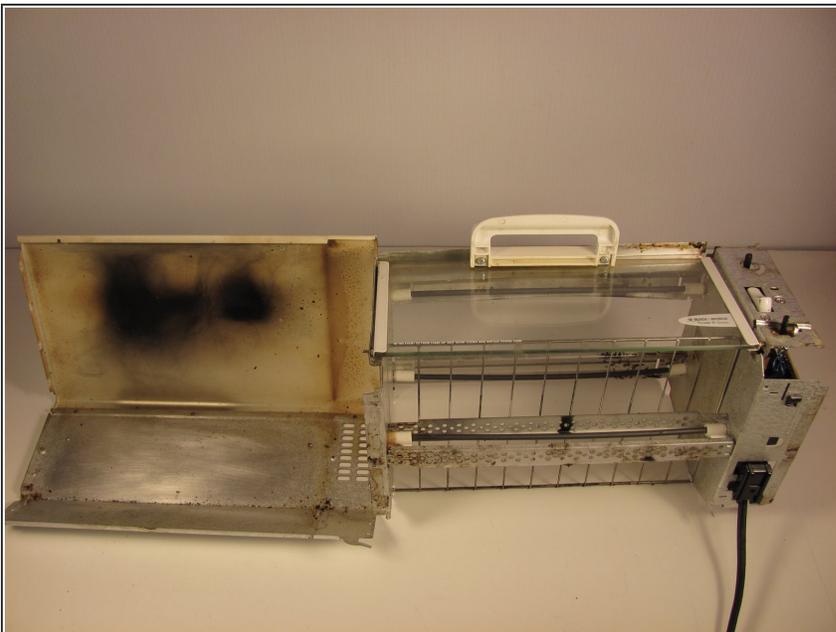

- Now, you can clean the outside units of the toaster oven.

Step 13

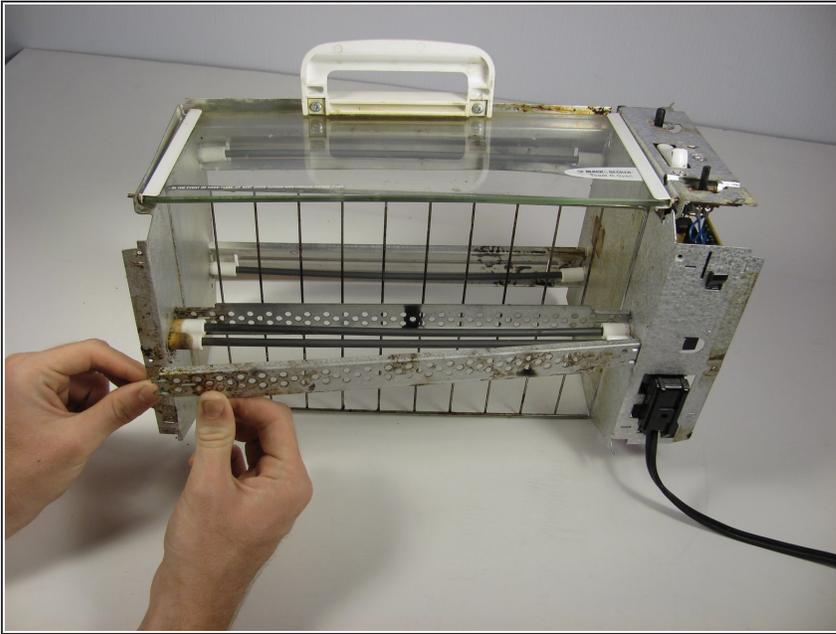

- Remove the the heating coil protection bar from the toaster unit by first pulling out the left side.

To reassemble your device, follow these instructions in reverse order.