


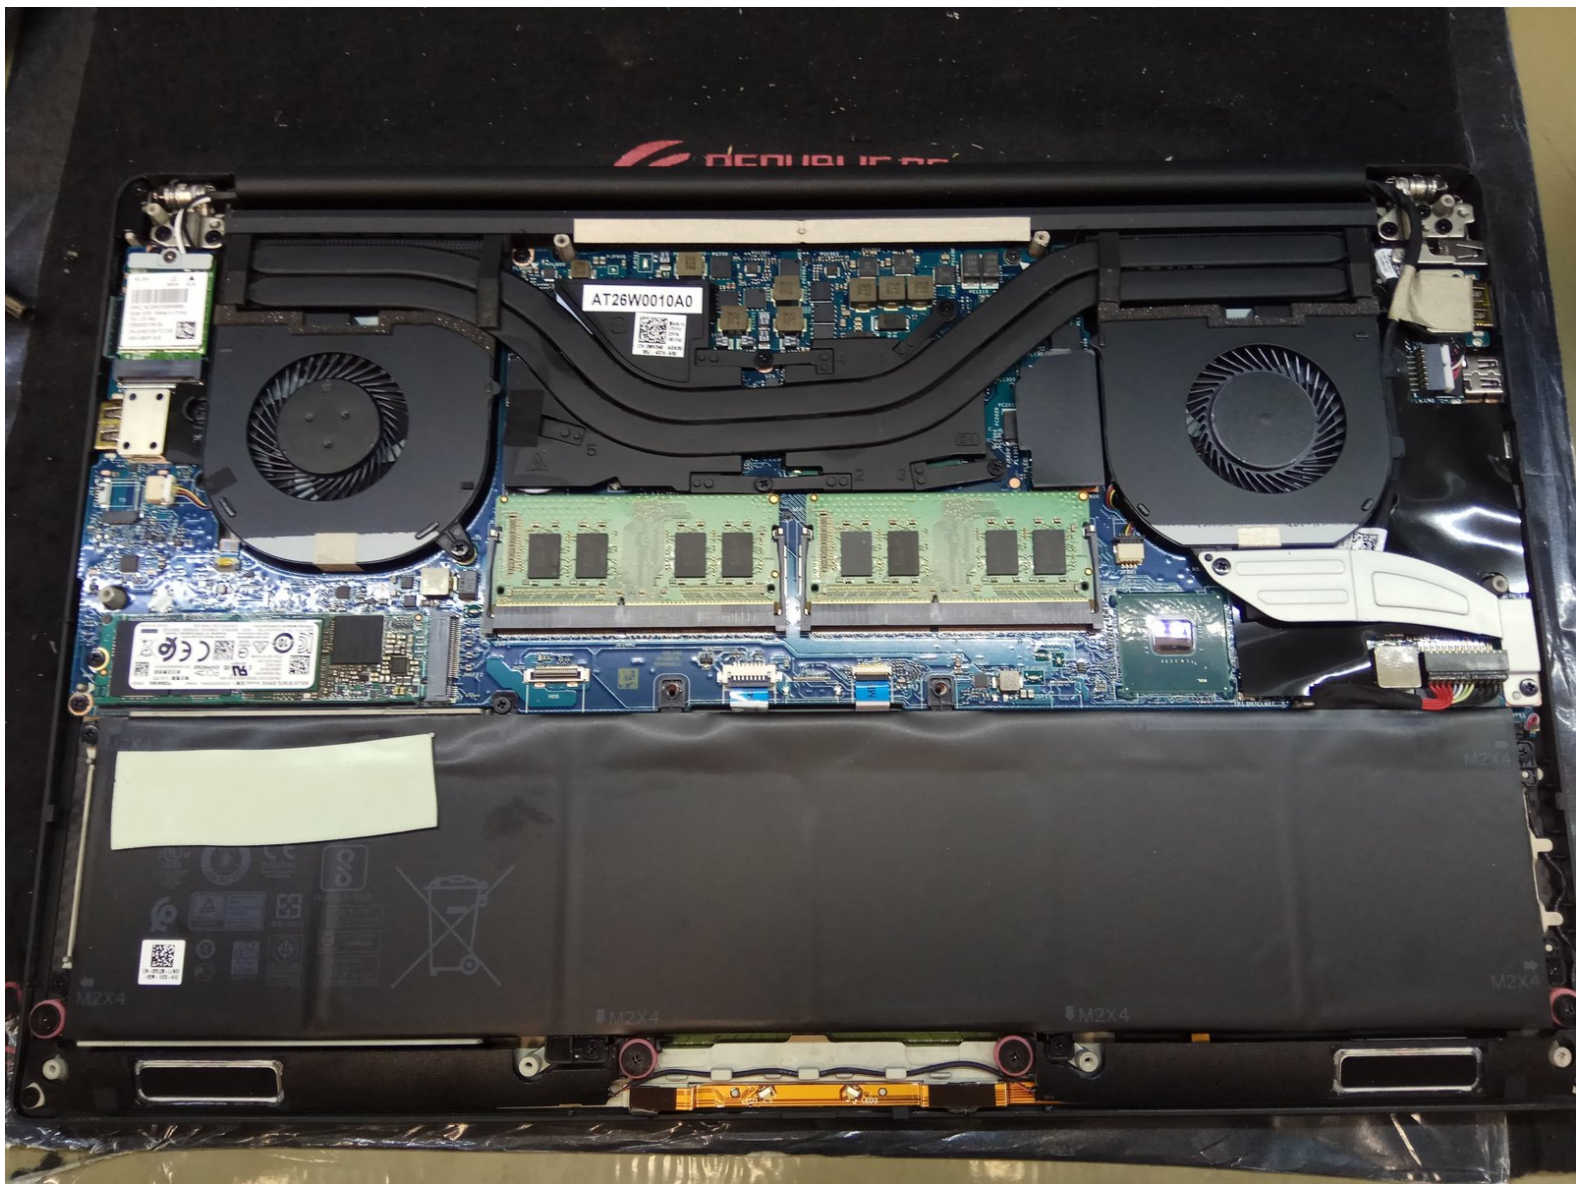

Dell XPS 15 9570 Unboxing, Battery & RAM Removal

Written By: IT FIX



INTRODUCTION

CPU: i7-8750H 2.20 GHz

Chipset: Coffee Lake

Memory: Micron 16GB

Hard Drive: Toshiba M.2 PCIe NVMe 256GB

Graphics: Nvidia GTX 1050-Ti

OS: Windows 10 Pro



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Dell 6GTPY 97 Wh Replacement Battery](#) (1)

Step 1 — Dell XPS 15 9570 Unboxing, Battery & RAM Removal



- Here's an unboxing of the device, followed by how to remove the battery and RAM from your 9570.