




Ematic FunTab 3 Speaker Replacement

Replace the damaged speaker in your Ematic FunTab 3

Written By: Amanda Davis

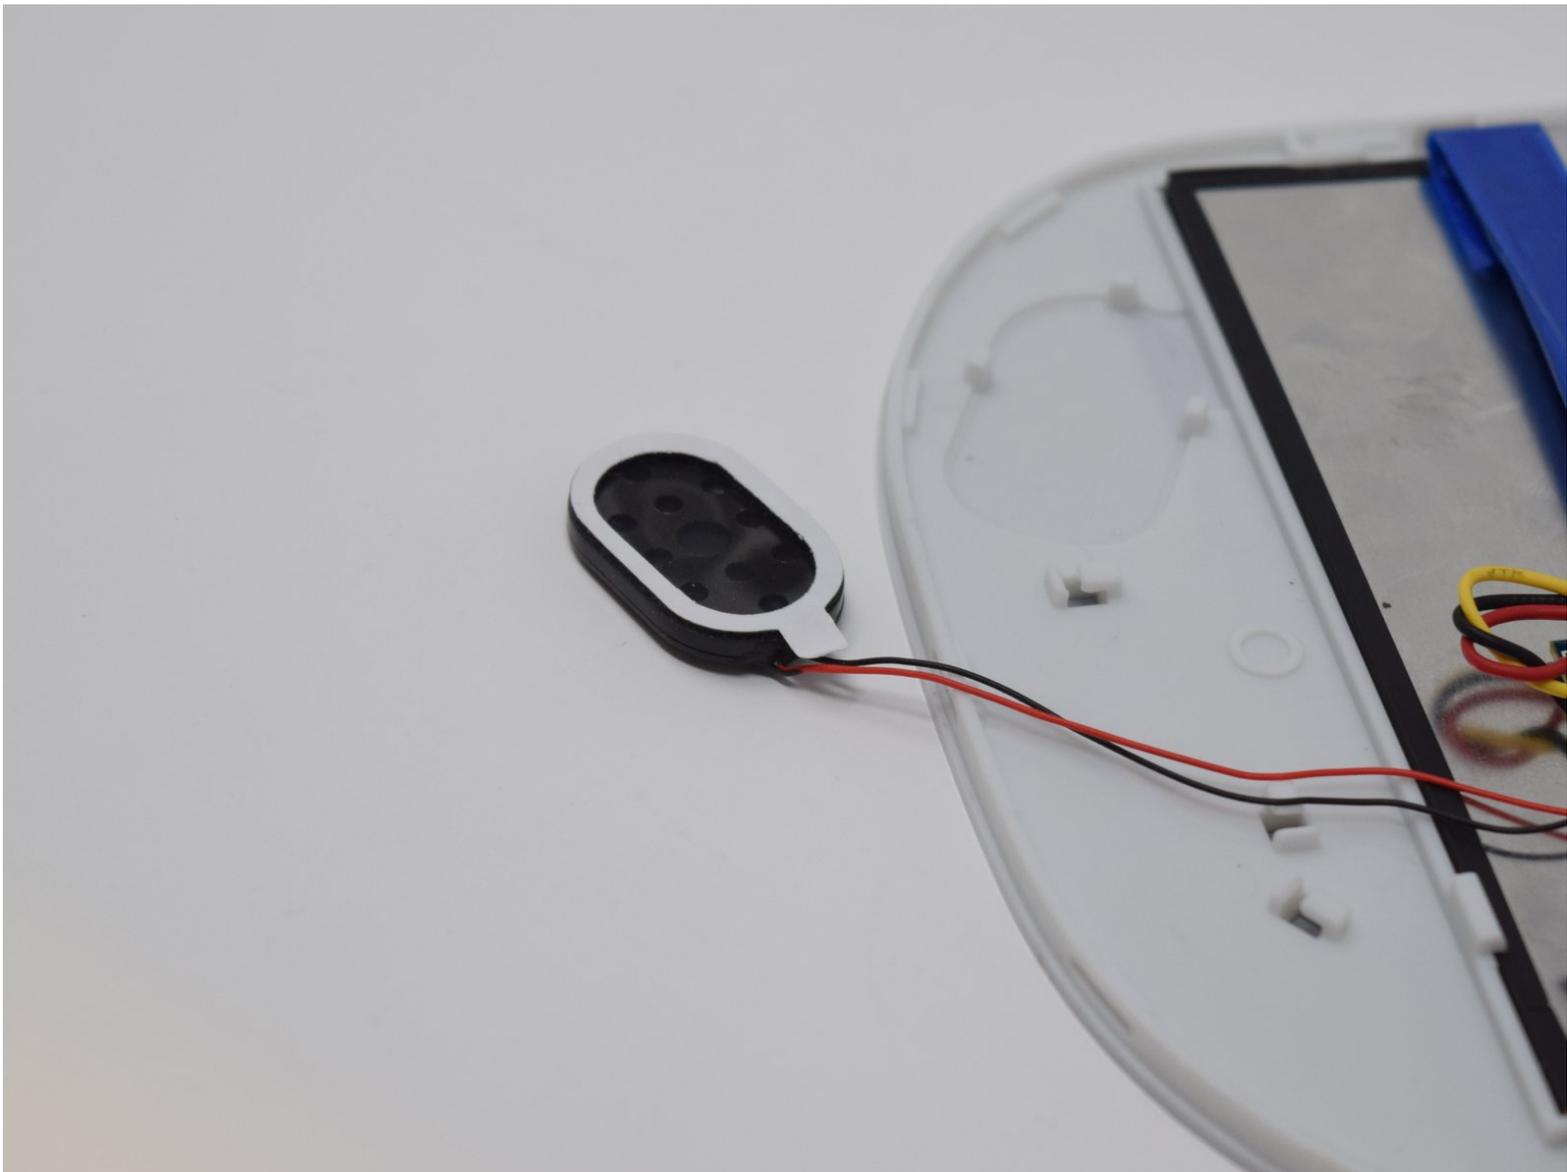

INTRODUCTION

If the volume of your audio is low or the audio is distorted your speaker may be damaged and in need of replacement. This guide will show you how to replace the speaker.

TOOLS:

- [Soldering Iron](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



 Turn off the device before starting

 To prevent damage, open the device on the side without the buttons.


- Insert the hooked end of the plastic opening tool in the gap between the screen and the back panel on the edge of the device.
- Slide the plastic opening tool down the long side of the device.
- Insert tool again and slide it down the long side of the case a second time.

Step 2




- Pull the back panel away from the screen.

Step 3 — Speaker

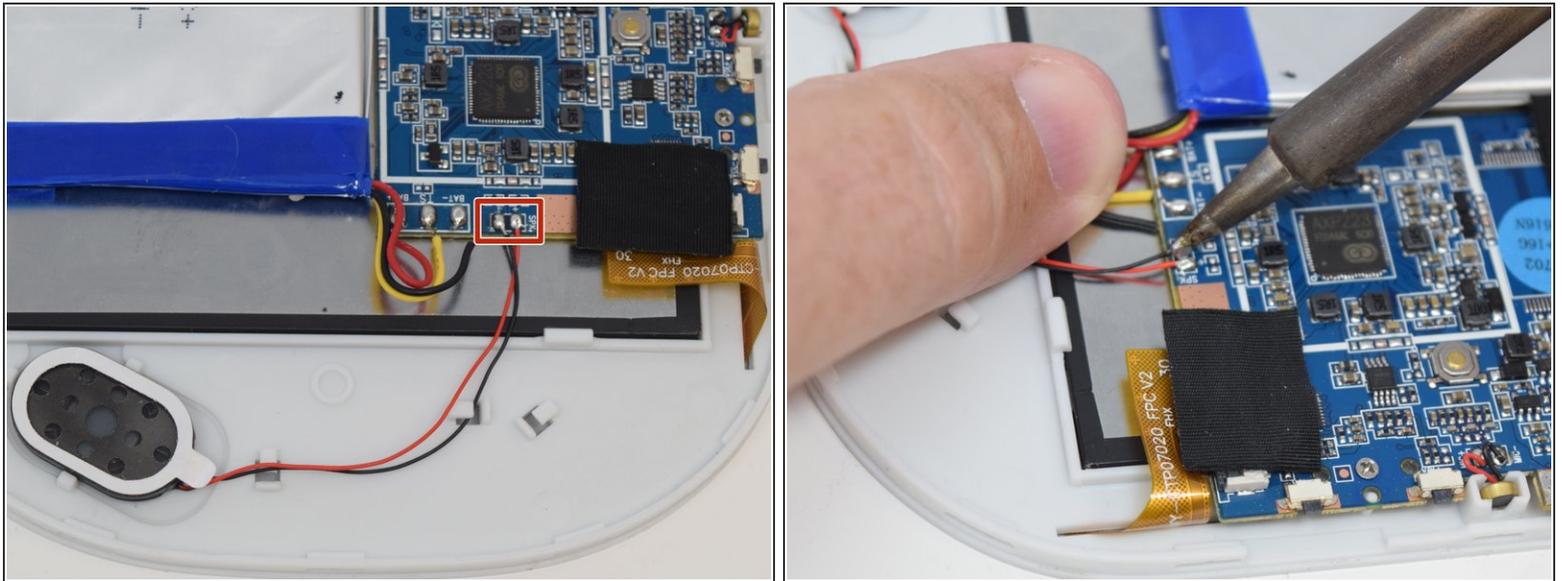

- Remove the wires from the motherboard using a soldering iron tool. Here is a link on [How To Solder and Desolder Connections](#).

Step 4

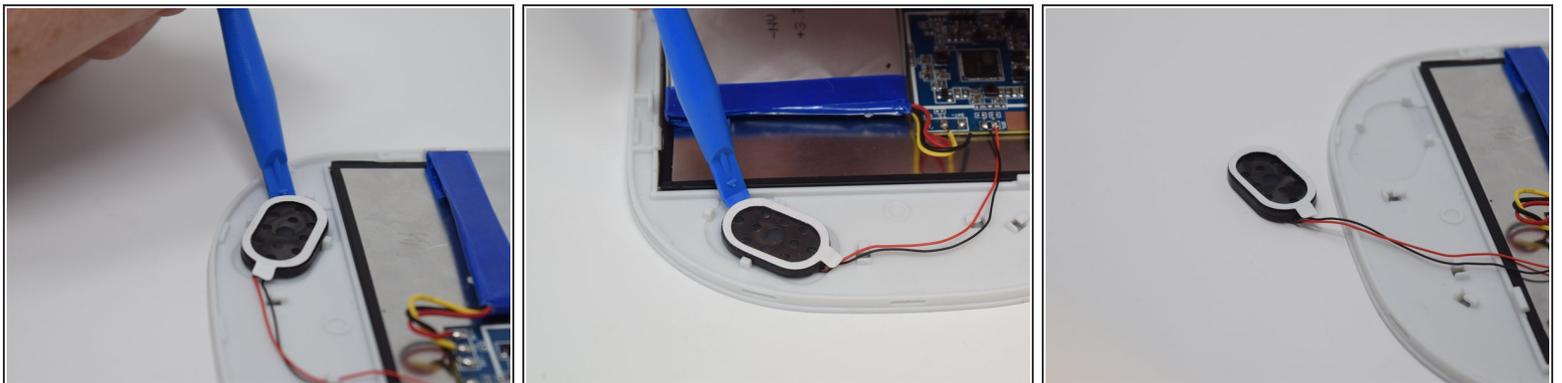

- After the connections are desoldered, remove the speaker by prying it up using a plastic opening tool.
- ⓘ There is glue on the back of the speaker. Some more force may be required.

To reassemble your device, follow these instructions in reverse order.