




Black and Decker Toast R Oven Knobs Replacement

Remove and replace knobs and/or faceplate on oven.

Written By: Jonathan

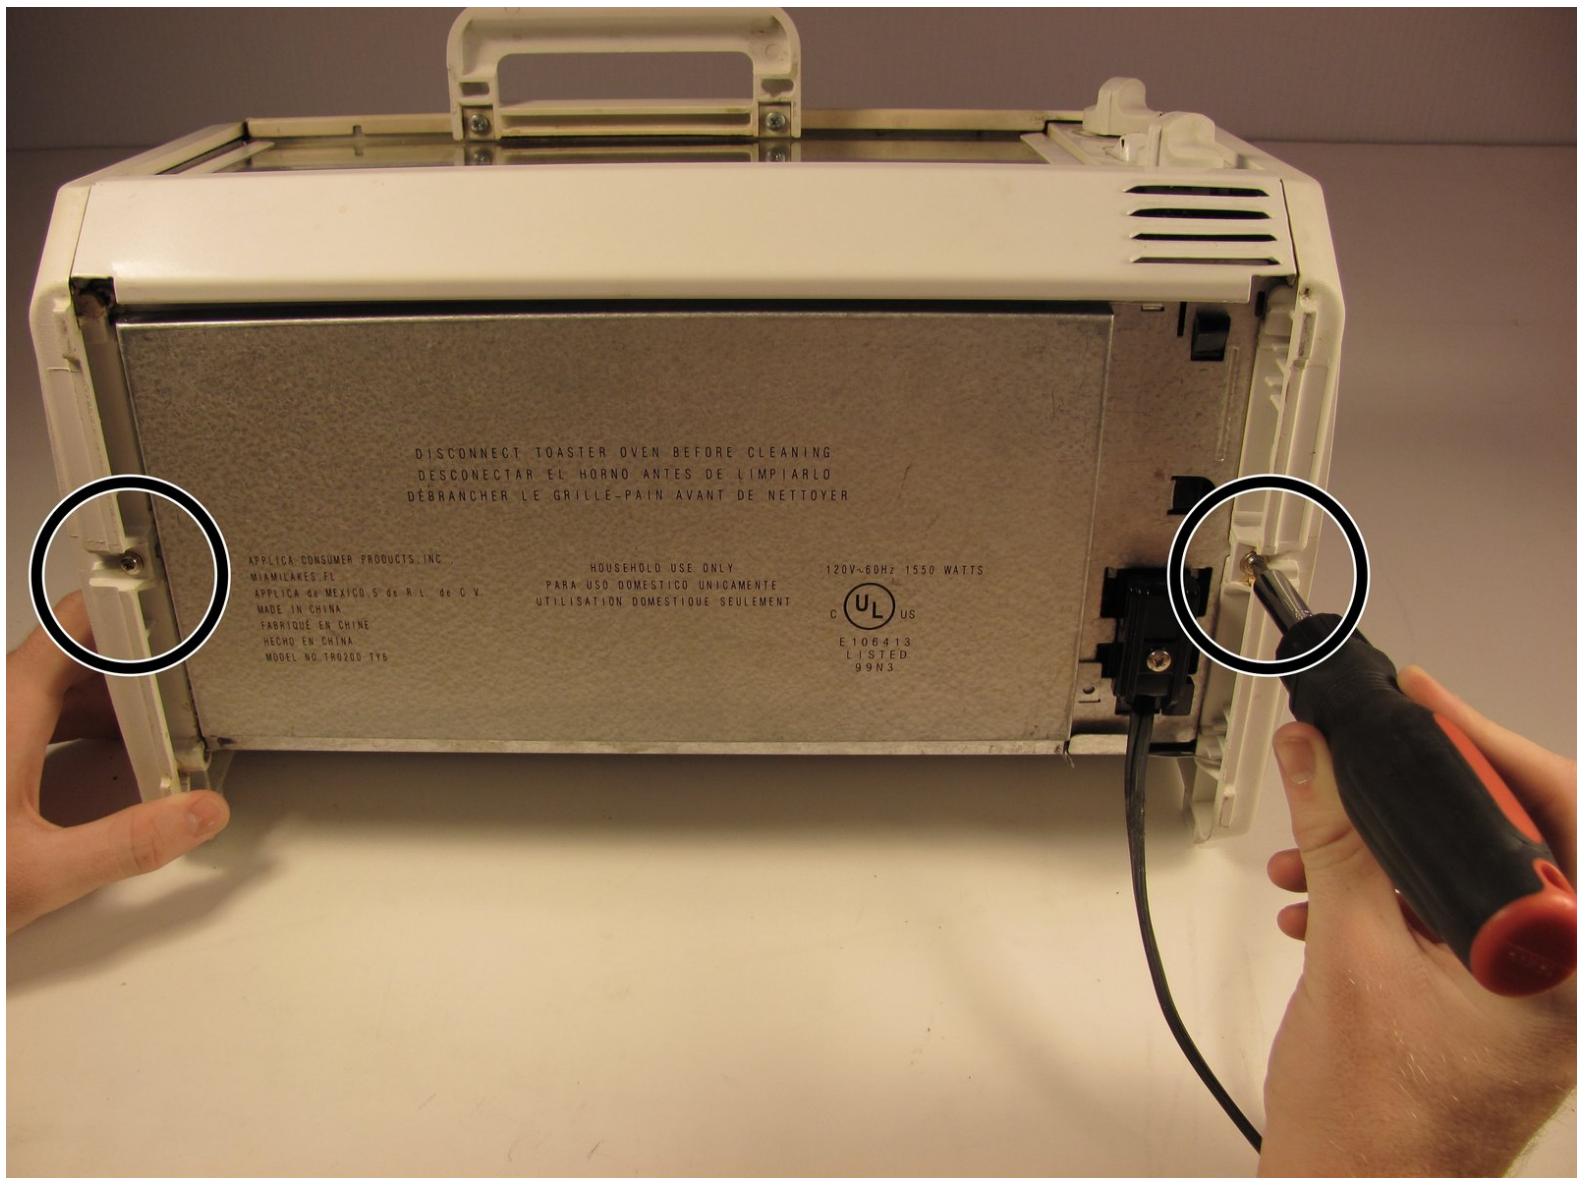

INTRODUCTION


Before replacing knobs you will have to disassemble oven to take off the knobs and faceplate.




TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-



Step 1 — Knobs

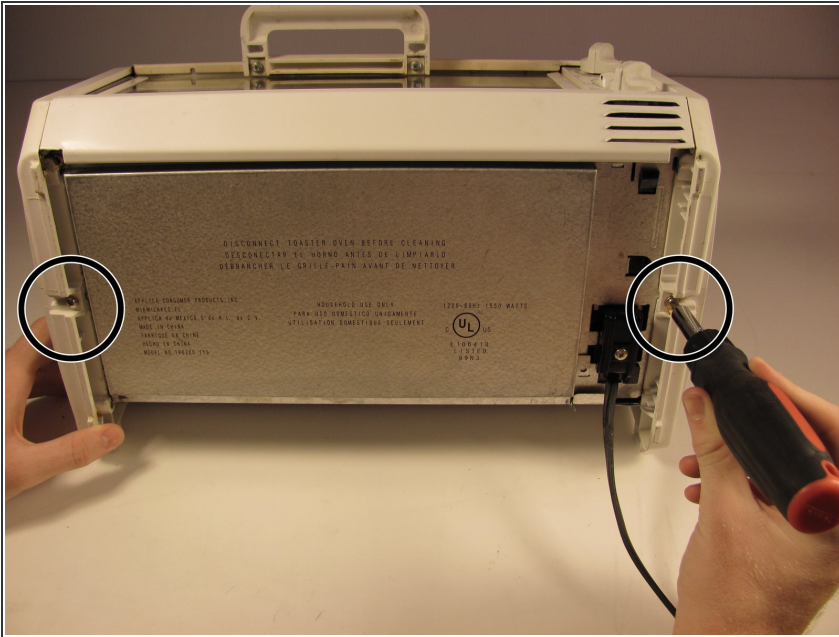

 Make sure that the toaster is unplugged before you begin.

- Turn the toaster upside down and remove the two Phillips #4 1 cm screws attached to the side panels.

Step 2

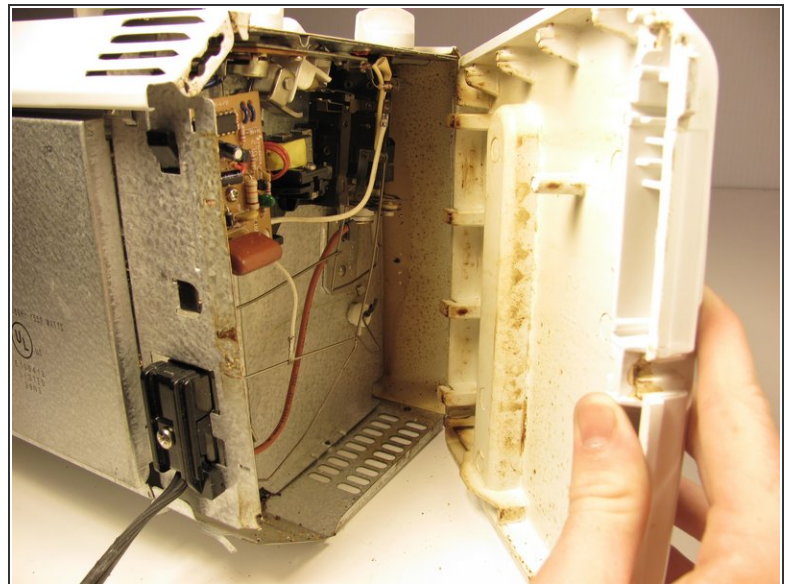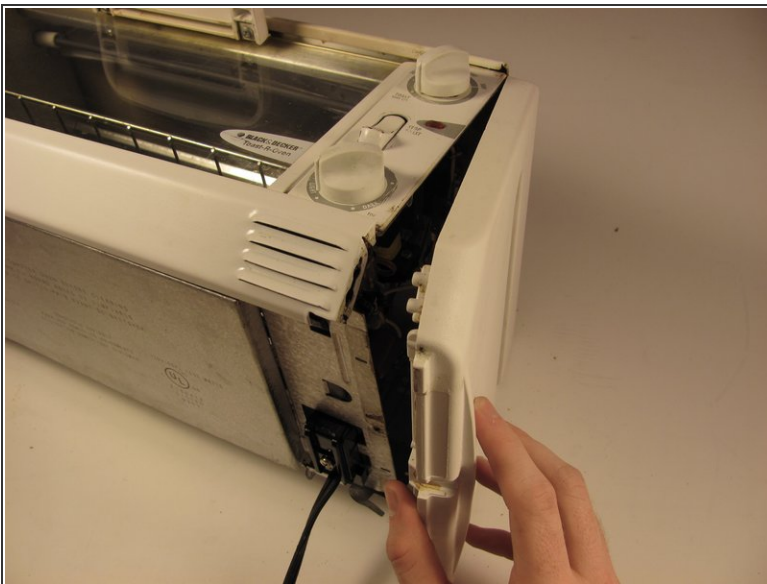


- Pull down and out to remove side panels from the unit
- Repeat for the other side.

Step 3




- Remove the bottom vent.
- ⓘ This should come off fairly easy.

Step 4

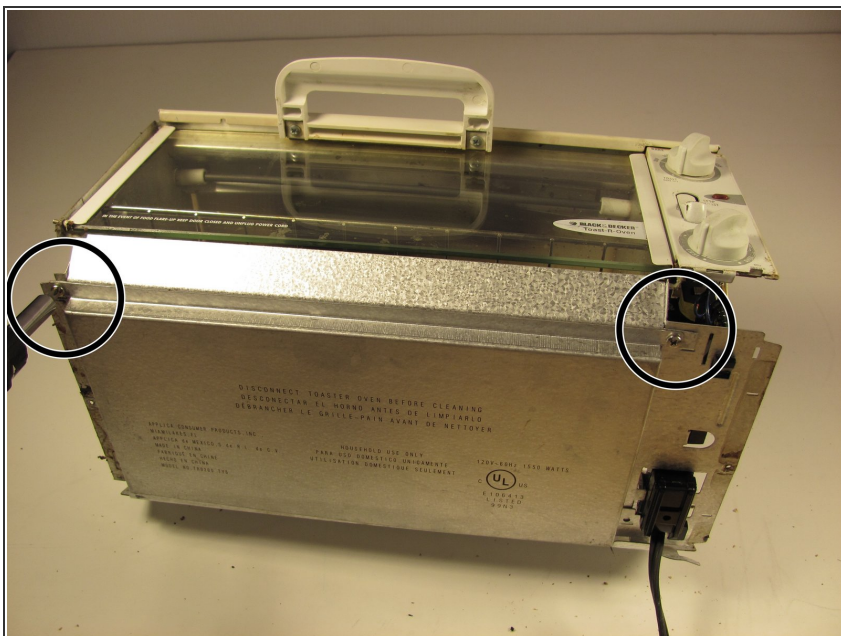


- Remove the two Phillips #4 1 cm screws that connect the bottom panel to the unit.

Step 5

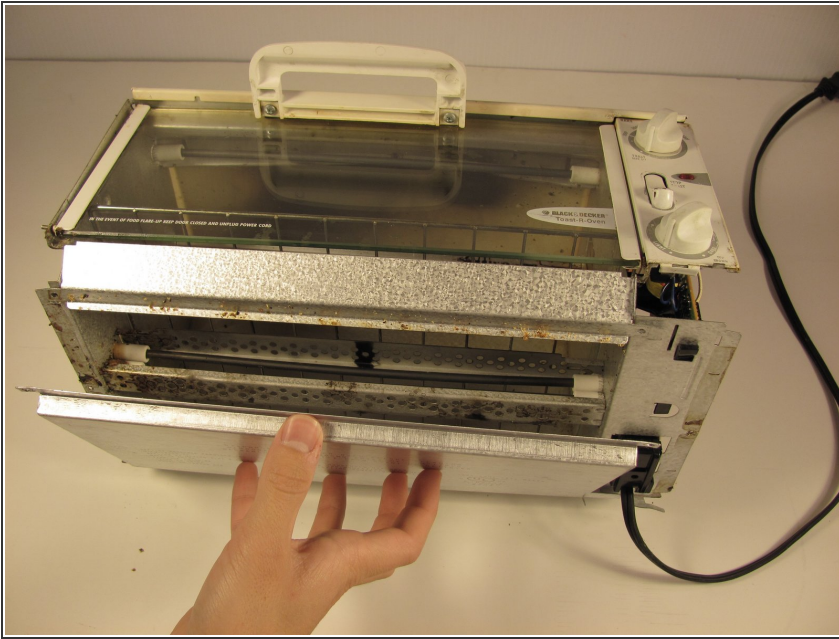

- Remove the crumb tray (bottom metal panel) from the toaster unit.

Step 6

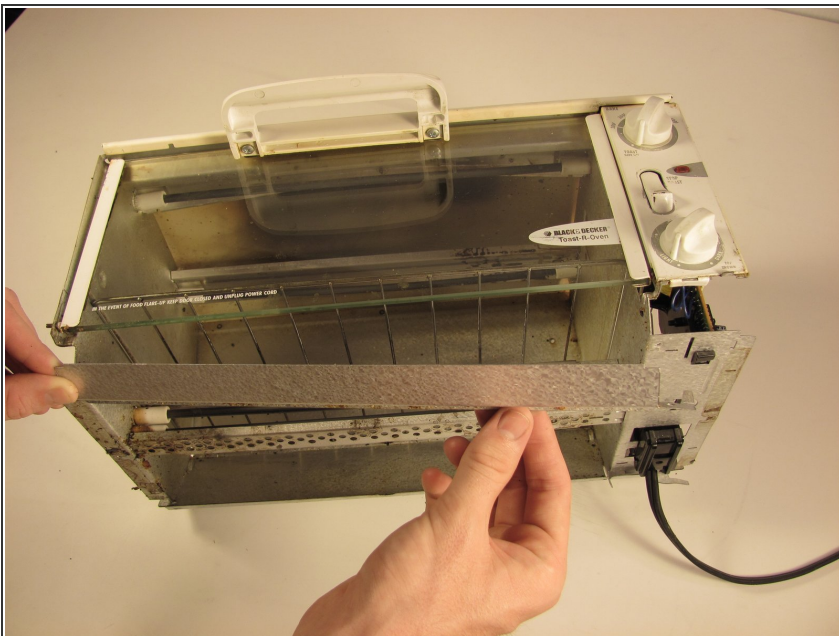


- Remove the aluminum strip on the bottom of the unit.

Step 7




- Remove knobs by pulling up on them.

Step 8

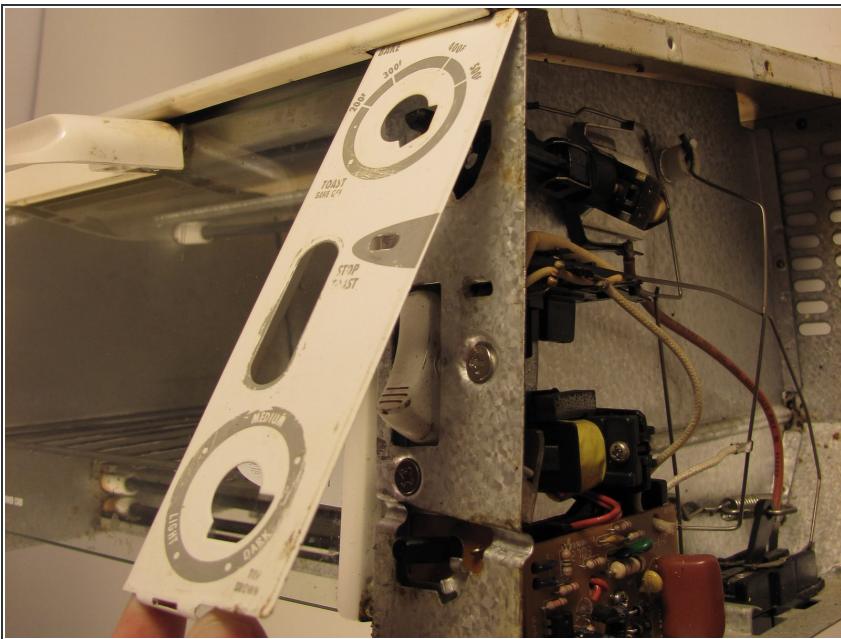

- Unhook the bottom of the display panel from the toaster unit.
- ⓘ It will be a little tough to pry off, but don't be afraid to be forceful.

Step 9

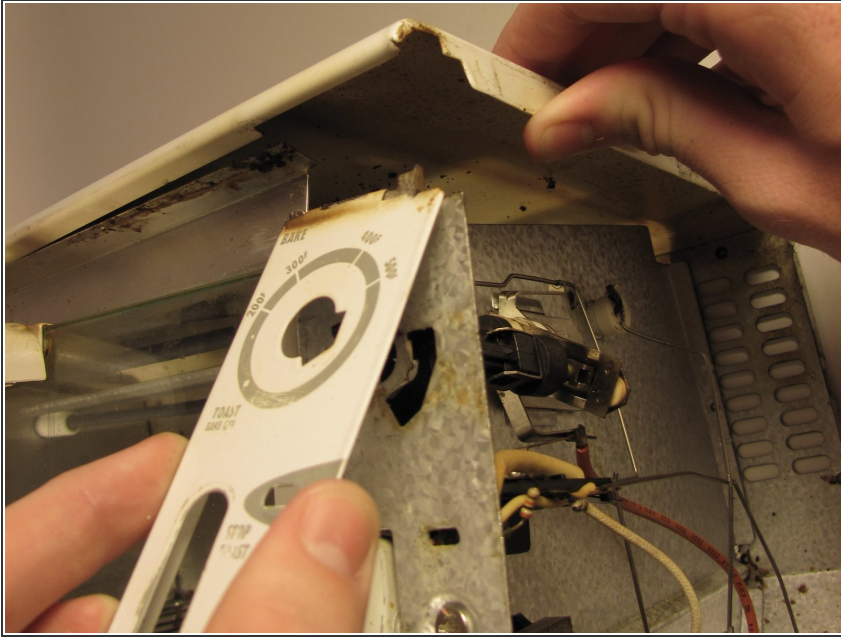

- Begin to detach the back panel from the toaster unit and unhook the rest of the display panel.
- ⓘ This will also be a little tough to get off, but don't be afraid to be forceful.

To reassemble your toaster, follow these directions in reverse.