



HP Chromebox J5N50UT Bottom Cover Replacement

Replace the bottom cover of your HP Chromebox (model number J5N50UT).

Written By: Ashley Marvin



INTRODUCTION

If the bottom cover of your HP Chromebox is damaged, it is easy to replace. This guide will take you through the steps of replacing the bottom cover. For this guide, you will need the Phillips #1 screwdriver and a plastic spudger.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Bottom Cover



⚠ Before removing the bottom cover, ensure that your computer is powered down and ensure that all external devices are disconnected. If you are unsure whether the computer is off or in hibernation mode, turn the computer on, then shut it down through the operating system.

- Position the device upside-down on a flat, level surface with the USB ports facing you.

Step 2

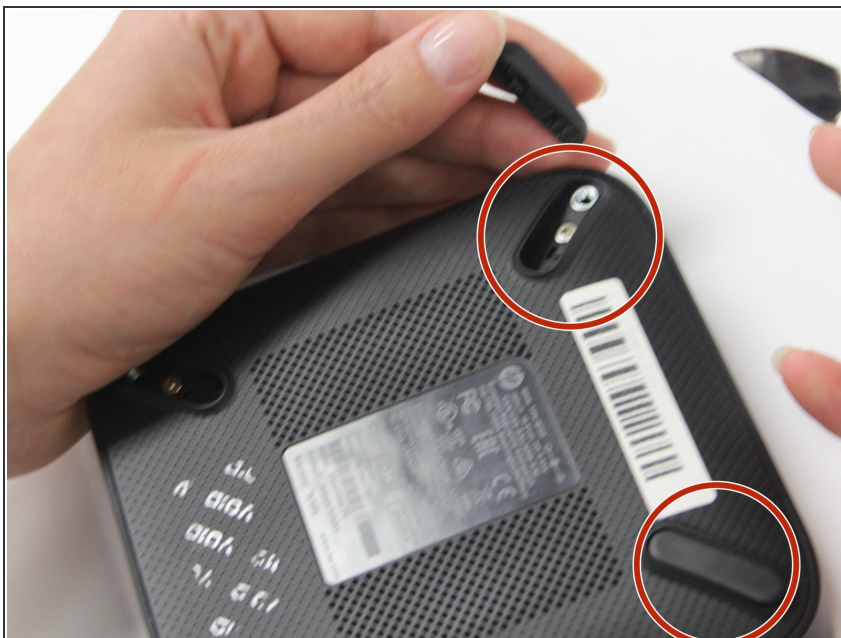

- Using your metal spudger, lift and remove the 4 rubber “feet” from each corner.

Step 3



- Using your Phillips head screwdriver, remove the four Phillips M2.5×4.0 screws that secure the bottom cover to the computer. In this step the usage of the magnetic mat will be helpful to keep up with the screws.

Step 4



- Insert the flat end of your metal spudger under the bottom cover near the USB ports, then pry the bottom cover off the computer.

To reassemble your device, follow these instructions in reverse order.