



# Crock-Pot Express Crock Multi-Cooker Power Cord Replacement

How to replace a Crock-Pot Express Crock Multi-Cooker power cord.

Written By: William Kelly



## INTRODUCTION

This guide will inform the user on how to replace a damaged power cord. It can also be used to show how to check for proper connection.

## Step 1 — Power Cord



- Remove the power cord from the wall outlet first, disconnecting power from the device.


## Step 2



- Orient the device with with the LED facing away from the user allowing access to the input jack of the power cord.



### Step 3

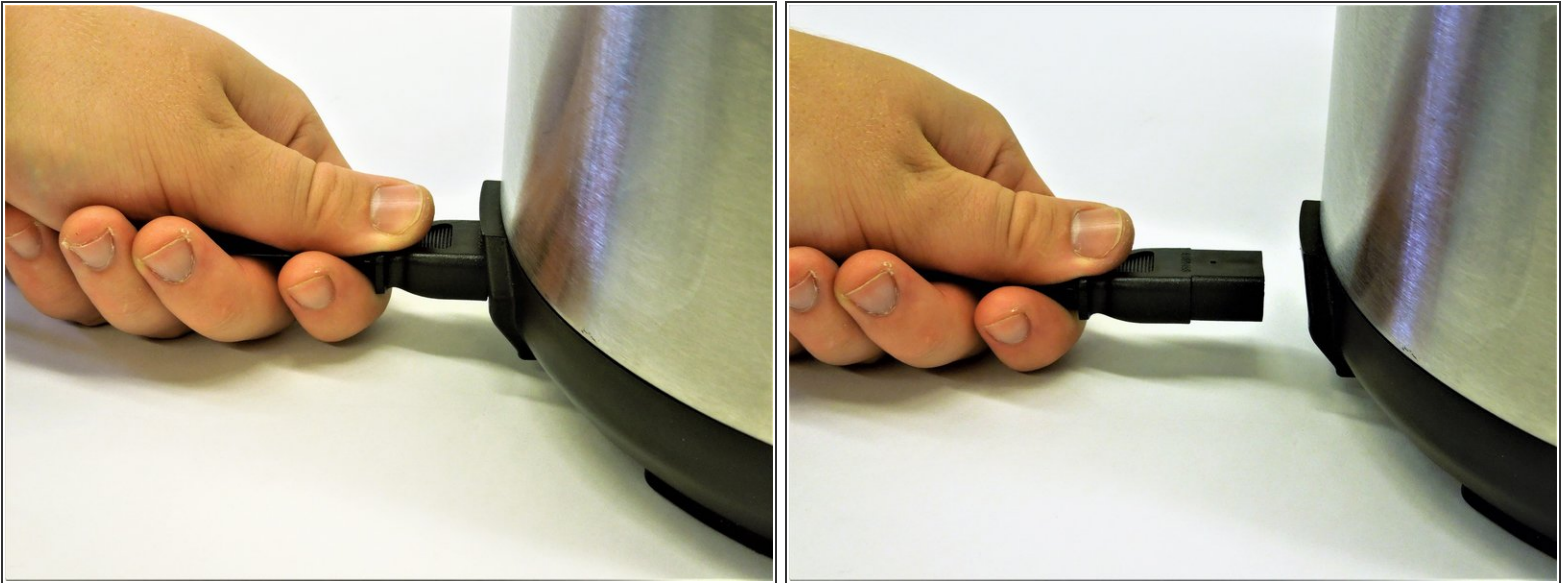

- Grasp the power cord input connector firmly with forefinger and thumb.
- Without tugging, apply pulling force until the connector is free from device

To reassemble your device, follow these instructions in reverse order.