



Crock-Pot Express Crock Multi-Cooker Bobber Valve Replacement

How to replace your bobber valve (float valve) to seal your Crock-Pot Express Crock Multi-Cooker.

Written By: William Kelly



INTRODUCTION

If your Crock-Pot Express Crock Multi-Cooker does not seal properly, use this guide to replace your bobber valve.



PARTS:

- [Crock-Pot Express Crock Multi-Cooker Bobber Valve gasker](#) (1)
-

Step 1 — Lid



- Orient the crock pot where the lid locked and unlocked icons are visible.
- Grasp the handle firmly and turn the lid clockwise until the arrow and the lid unlocked icon are facing each other.
- Remove the lid.

Step 2 — Bobber Valve



- Flip the lid over and expose plastic washer.

Step 3



- Pull the plastic washer off the bobber valve and allow the bobber valve to fall out

To reassemble your device, follow these instructions in reverse order.