



Crock-Pot Express Crock Multi-Cooker Steam Release Valve Replacement

How to replace a Crock-Pot Express Crock Multi-Cooker steam release valve.

Written By: William Kelly



INTRODUCTION

If the steam release valve is broken or damaged in any way it will not seal and can cause a safety hazard when trying to open a pressurized pot.

If replacement of the Steam Release Valve does not solve problem try replacing [Steam Release Valve Cover](#).



PARTS:

- [Steam Release Valve](#) (1)
-

Step 1 — Lid



- Orient the crock pot where the lid locked and unlocked icons are visible.
- Grasp the handle firmly and turn the lid clockwise until the arrow and the lid unlocked icon are facing each other.
- Remove the lid.

Step 2 — Steam Release Valve



- Orient the lid face up, allowing access to the steam release valve.

Step 3



- Securely grasp the steam release valve and pull firmly perpendicular to the lid to remove the valve.

To reassemble your device, follow these instructions in reverse order.