



# Crock-Pot Express Crock Multi-Cooker Condensation Collector Replacement

How to replace a Crock-Pot Express Crock Multi-Cooker condensation collector.

Written By: William Kelly



---

## INTRODUCTION

The condensation collector extracts excess moisture. A missing or damaged condensation collector can lead to a pot that leaks water.



### PARTS:

- [Crock-Pot Multi-Cooker Condensation Collector](#) (1)
-

## Step 1 — Condensation Collector



- Locate the condensation collector on the back of the pot, opposite of the LED Display.

## Step 2



- Check the collector for signs of damage.

### Step 3



- If the collector is damaged e.g. cracked, remove it by gently pulling out from the pot and replace it with a new collector.

To reassemble your device, follow these instructions in reverse order.