



# Dick smith 2 channel dvd player Disassembly

full teardown of the Dick smith 2 channel dvd player

Written By: holam723







## TOOLS:


- [Pro Tech Toolkit](#) (1)
-

## Step 1 — remove main shell

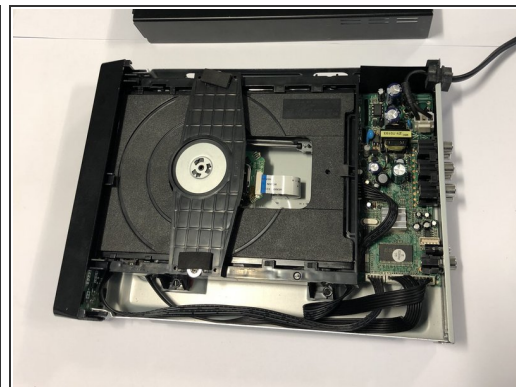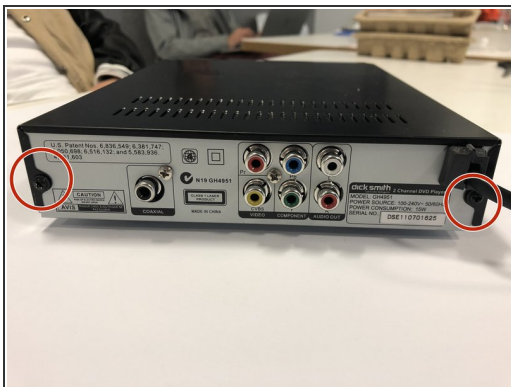

- Take off these two black screws at the edges and lift the top shell of the main body.




## Step 2 — remove power cable

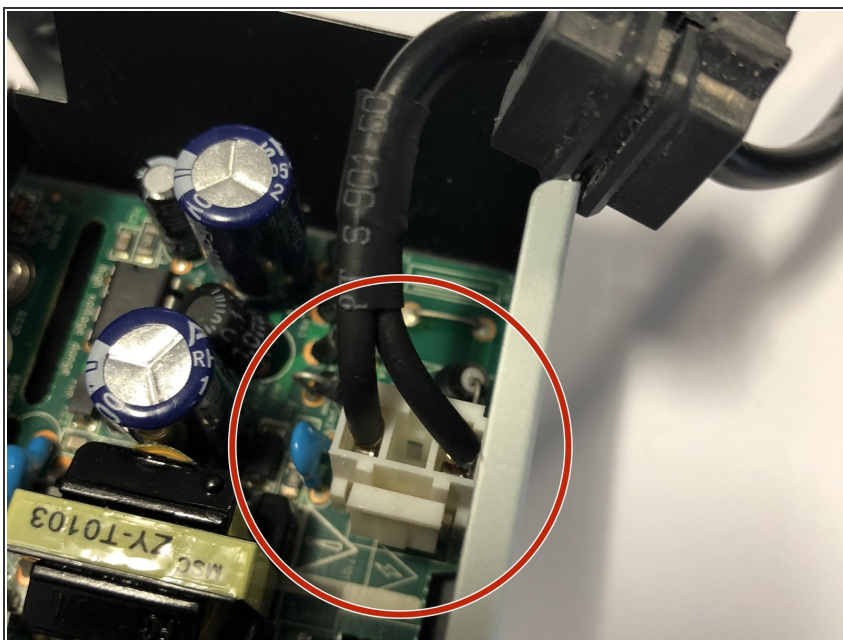

- unplug the power cable from the main circuit board.






### Step 3 — remove front shell

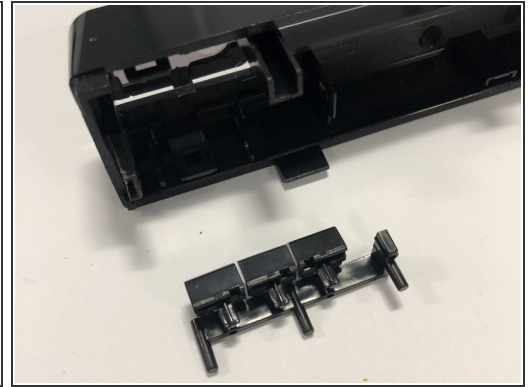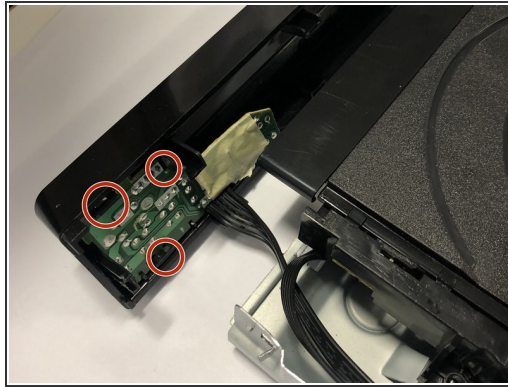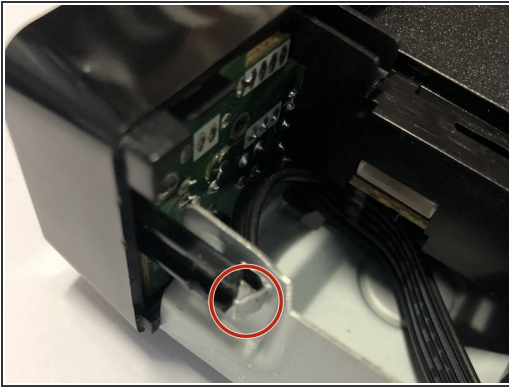

- unbent the metal piece holding the front shell and pull it out, take off the button circuit and the push button component.

### Step 4 — remove the loader

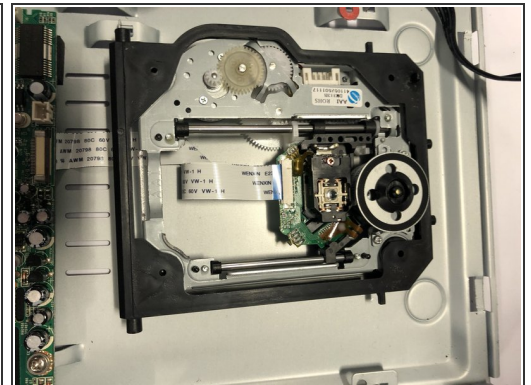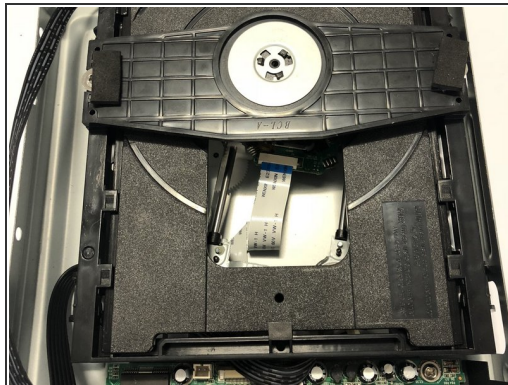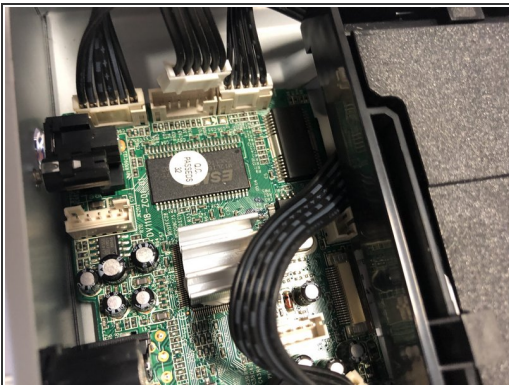


- unplug all cables from the main circuit and lift the loader from the body only leaving the laser lens.

## Step 5 — remove laser lens



- unplug the cable connecting the laser lens and the main circuit and lift the laser lens away from the main body.



## Step 6 — disassemble of the loader

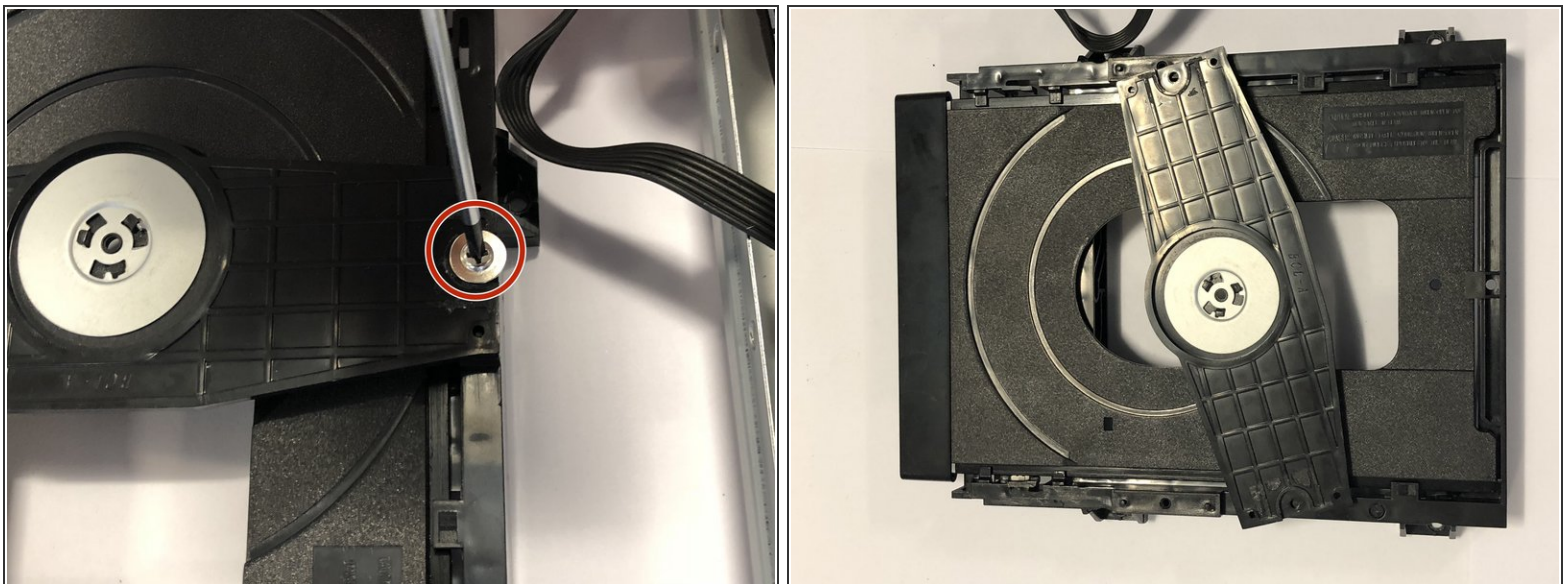

- unscrew the two screw that holds the cover and lift the cover away from the loader.





## Step 7 — disassemble of the laser lens

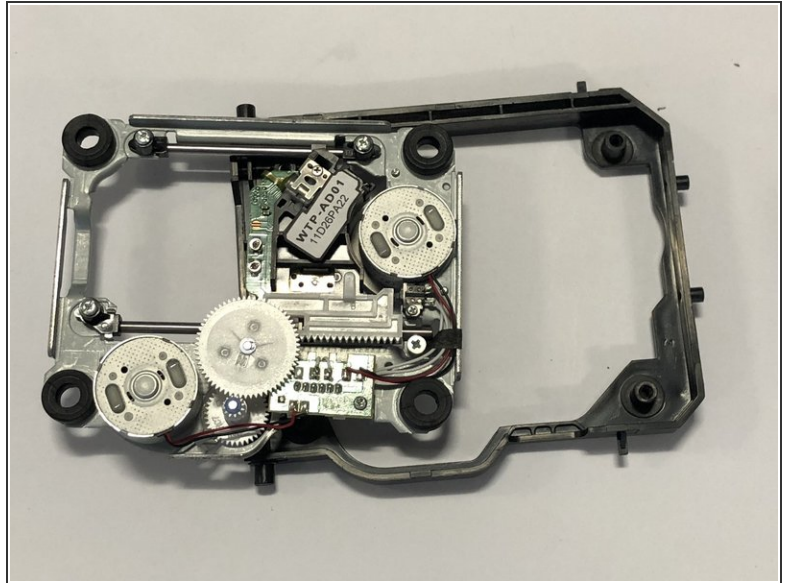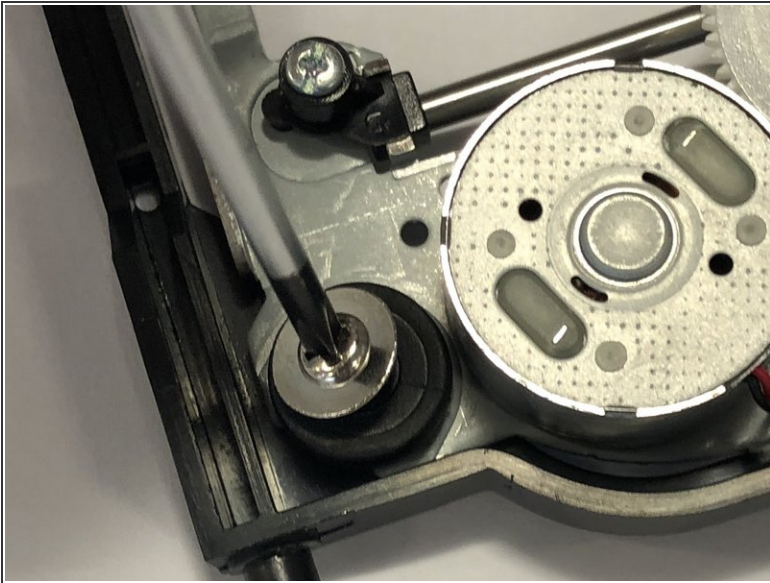


- unscrew all four screws on the dvd reader and lift it away from the holder.

## Step 8 — remove main circuit board

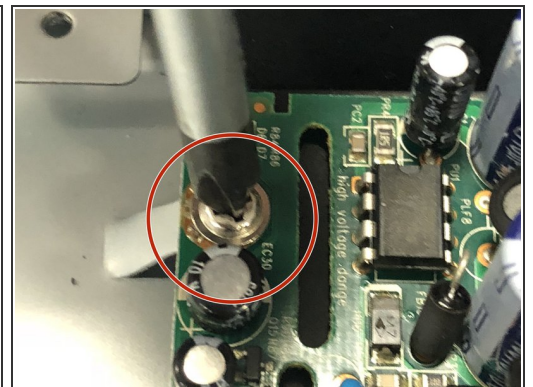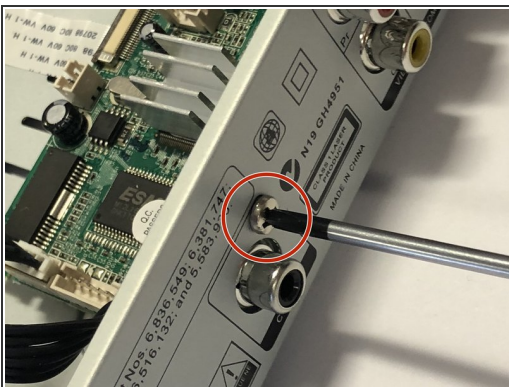

- unscrew two screws at the back of the body and one on the board, then lift the circuit board away from the main body.

## Step 9 — result

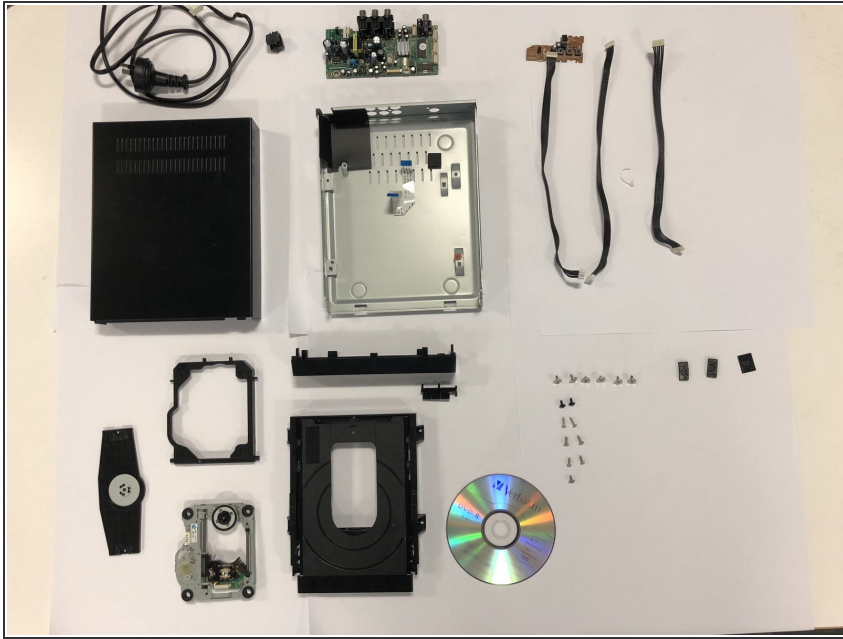 

- all the parts after the teardown