




# Philips DVP5992-F7 Power Cord Replacement

This guide will teach you how to replace the power cord on your Philips DVP5992-F7.

Written By: Dyllon Phuong

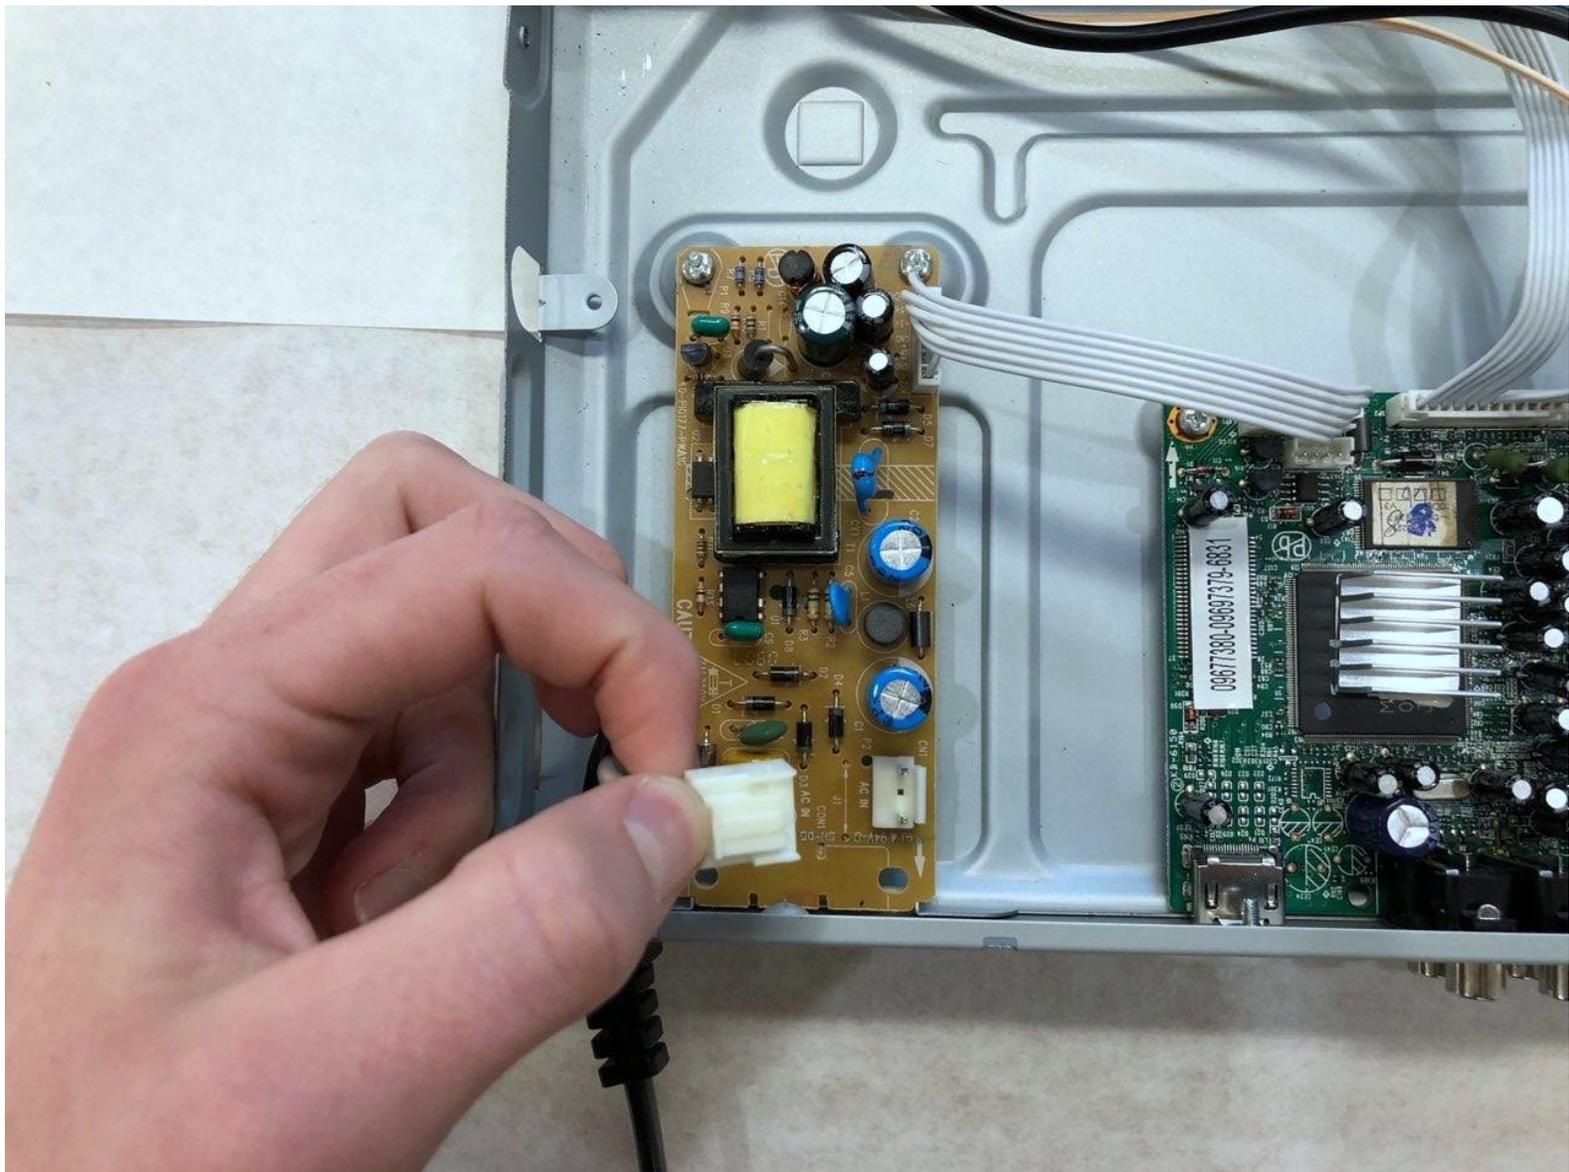

---

## INTRODUCTION

Power cords can become easily broken or frayed, which can cause potential risks. This guide will teach you how to replace a damaged or broken power cord for the Philips DVP5992-F7.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Power Cord



- Remove the three 6.4 mm Phillips #1 screws on the back of the device with a Phillips head screwdriver.
- Remove the 6.4 mm Phillips #1 screws on each side of the device.

## Step 2



- Remove the top plate of the DVD by firmly grasping the player on both sides.
- Shift the top plate towards the backside of the player.
- Lift the back half of the top plate up to remove it from the player.

## Step 3



- Locate the power cable connector inside the DVD player.
- Pinch down on both sides of the cable connector.
- Gently pull upwards on the cable connector while wiggling it to remove it from the DVD player.

To reassemble your device, follow these instructions in reverse order.