



# Crock-Pot Express Crock Multi-Cooker Steam Release Valve Cover Replacement

How to replace a Crock-Pot Express Crock Multi-Cooker steam release valve cover.

Written By: Zachary Parker



---

## INTRODUCTION

If the steam release valve is broken or damaged in any way it will not seal and can cause a safety hazard when trying to open a pressurized pot.

If replacement of the Steam Release Valve Cover does not solve problem try replacing [Steam Release Valve](#).



### PARTS:

- [Steam Release Valve Cover](#) (1)
-

## Step 1 — Lid



- Orient the crock pot where the lid locked and unlocked icons are visible.
- Grasp the handle firmly and turn the lid clockwise until the arrow and the lid unlocked icon are facing each other.
- Remove the lid.

## Step 2 — Steam Release Valve Cover



- Flip the lid over to expose the underside and the steam release valve cover.



### Step 3



- Securely grasp the steam release valve cover. Twist and pull firmly to remove the valve cover.

To reassemble your device, follow these instructions in reverse order.