




Canon Vixia HF R62 Outer Casing Replacement

Disassemble the outer shell of your Canon Vixia HF R62 Camcorder to replace the casings or access the internal components.

Written By: Jeffrey Harn

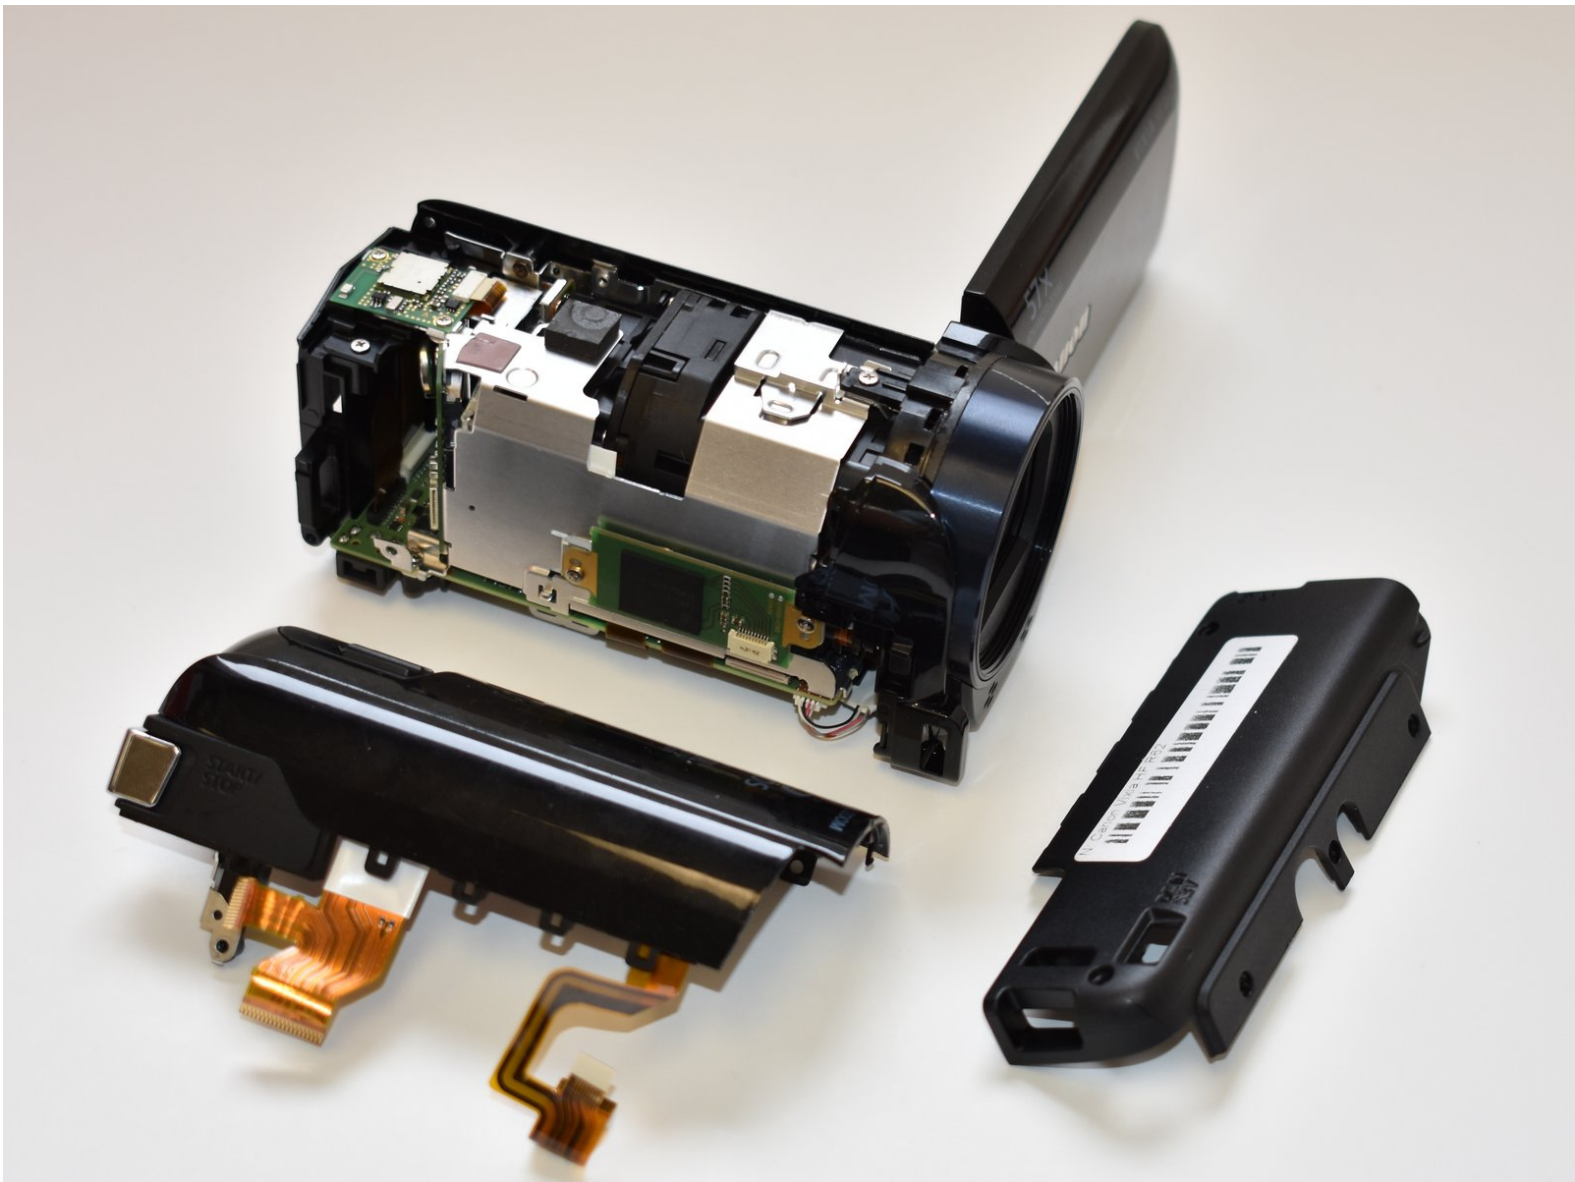

INTRODUCTION

This guide is the pre-requisite to all guides involving the replacement or repair of the internal components of the camera. Before you begin, please note that some screws will be covered with foam protectors.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Outer Shell



- Remove the strap by undoing the Velcro and pulling it through the thread points.
- Remove the external battery pack by pressing down on the slide release and sliding it out.

Step 2




- Remove the three 5mm Phillips #000 screws on the bottom of the device.

Step 3




- On the side of the device, remove the following Phillips #000 screws:
 - One 3mm screw
 - One 5mm screw

Step 4

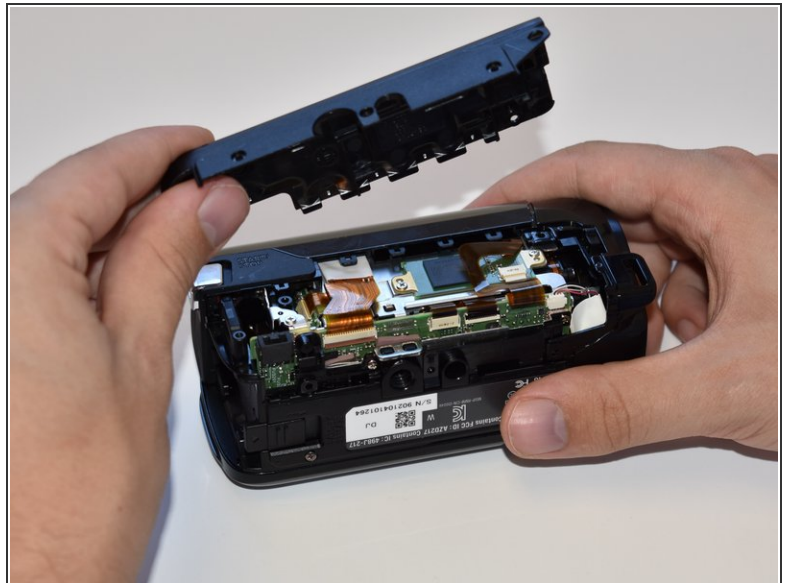

- Remove the panel opposite the display by pulling up perpendicular to the side.

Step 5

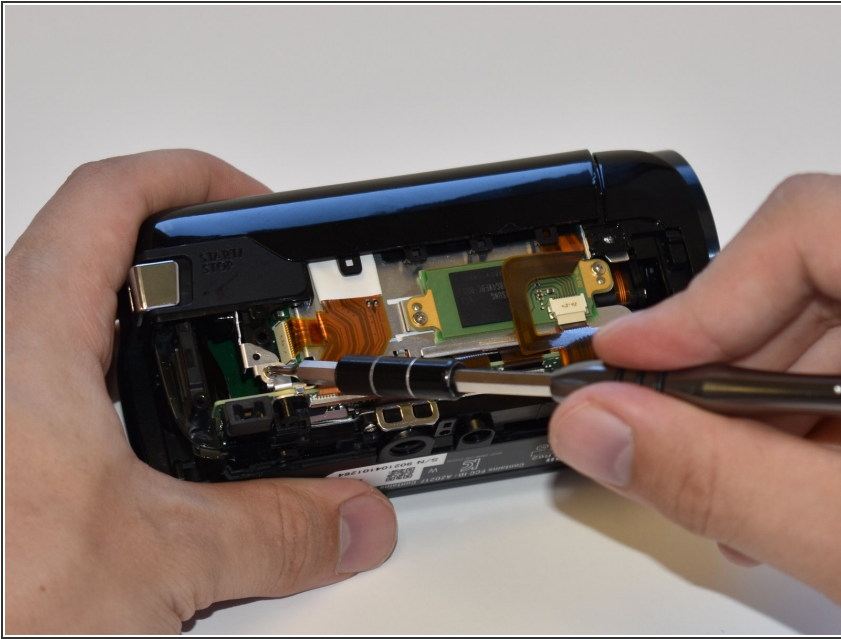


- Remove the 4mm Phillips #000 screw that was exposed after taking off the side panel.

Step 6




- Remove the three 4mm Phillips #000 screws shown.
- ⓘ There will be foam covers protecting some or all of these screws. These will need to be removed before you will be able to unscrew them.

Step 7

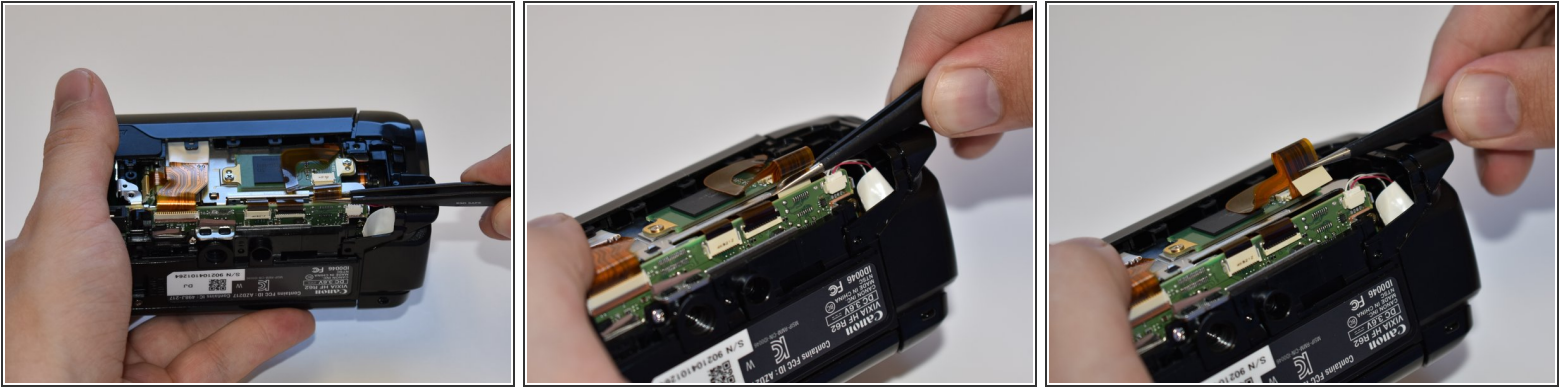


- Using tweezers, disconnect this ribbon cable by pulling straight out.

Step 8

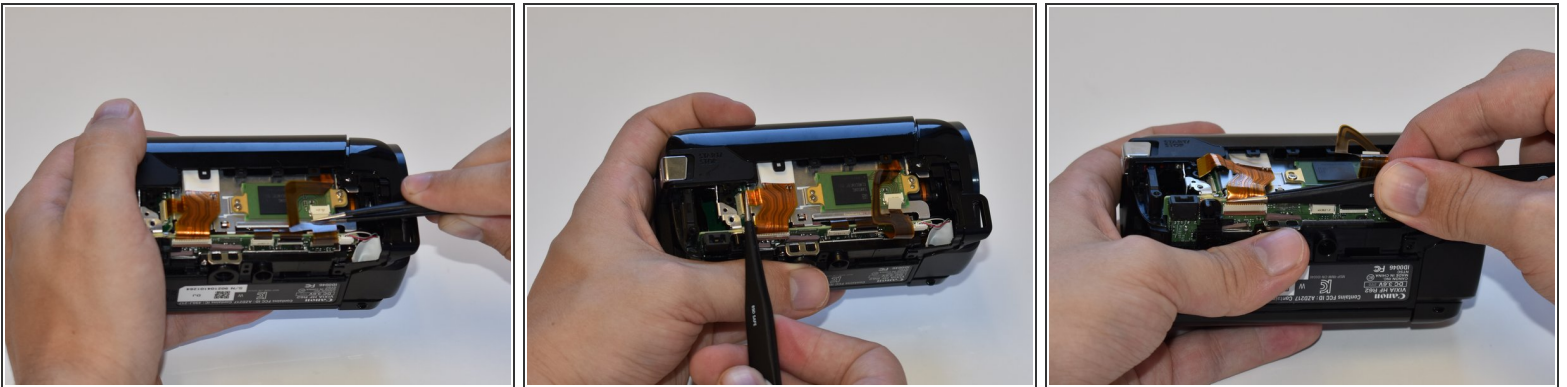

- Repeat step seven (7) for the remaining three wires shown.

Step 9

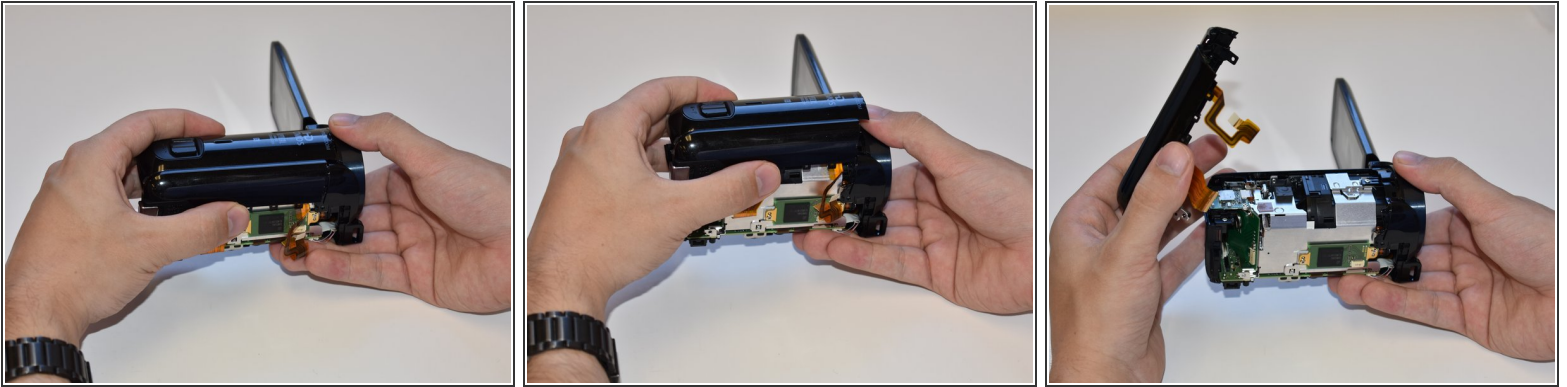

- Grasp the top of the camera and pull straight up to remove the top panel.

To reassemble your device, follow these instructions in reverse order.