



# Crock-Pot Express Crock Multi-Cooker Lid Replacement

How to replace a Crock-Pot Express Crock Multi-Cooker lid.

Written By: William Kelly



## INTRODUCTION

This guide will serve as a prerequisite. Removal of the lid will be a common step that takes place on multiple repair guides.

## Step 1 — Lid



- Orient the crock pot where the lid locked and unlocked icons are visible.
- Grasp the handle firmly and turn the lid clockwise until the arrow and the lid unlocked icon are facing each other.
- Remove the lid.

To reassemble your device, follow these instructions in reverse order.