



# Nude Move S wired Speaker - PS001BKG

## Teardown

Complete Teardown and Rebuild of a portable wired speaker.

Written By: Fabio Fariselli





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Nude Move S wired Speaker - PS001BKG Teardown



- Starting from the fully assembled speaker.

## Step 2



- Taking silicone cover apart

## Step 3




- Removing speaker grill, undoing 5 screws on the back. Using PH1 Screwdriver.

## Step 4




- Undoing 2 Screws using PH1 Screwdriver from speaker cone.

## Step 5

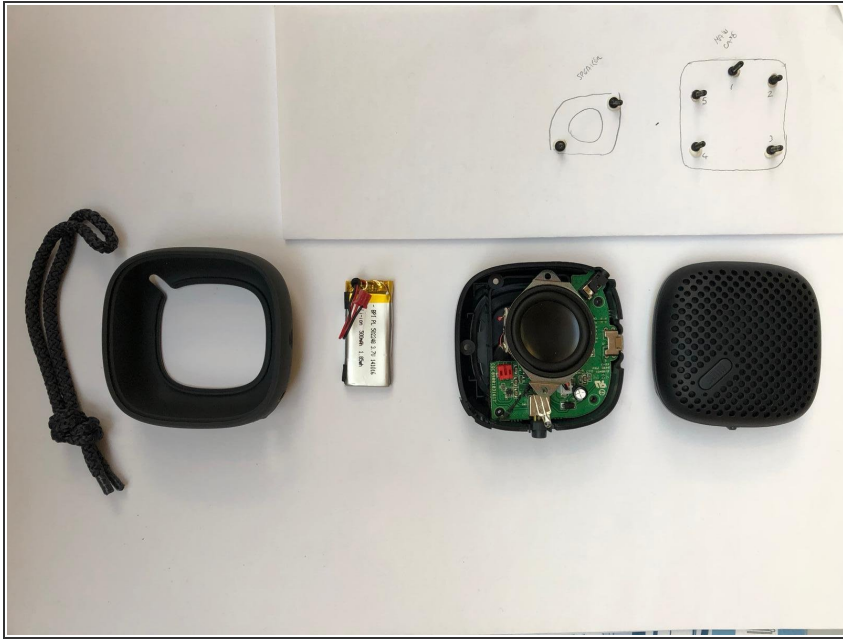

- Removing battery carefully undoing clip on the circuit board.

## Step 6

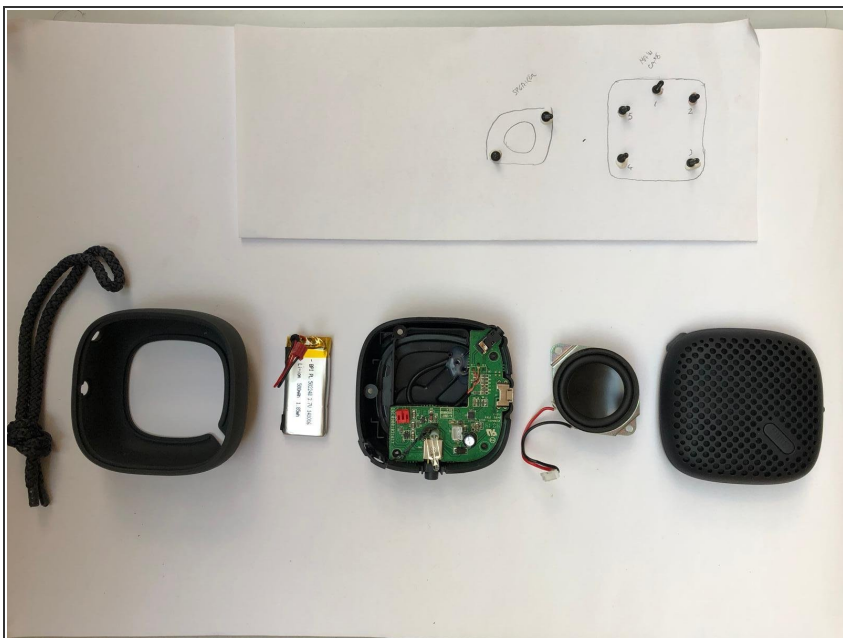

- Removing speaker carefully undoing clip on the circuit board.

## Step 7



- Exploded view of the speaker.