



Polaroid OneStep 2 Flash Cover Replacement

Replace the flash cover in order to take clear photos with your Polaroid OneStep 2.

Written By: Abby Boucher



INTRODUCTION

You will need to replace the flash cover if the camera will not take clear pictures, has a cracked or scratched cover. You will need to use the Shutter Switch Replacement guide as a precursor guide.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Flash Cover




- Unscrew the four 5mm screws on the base of the camera. Remove the two pieces of the base.

Step 2

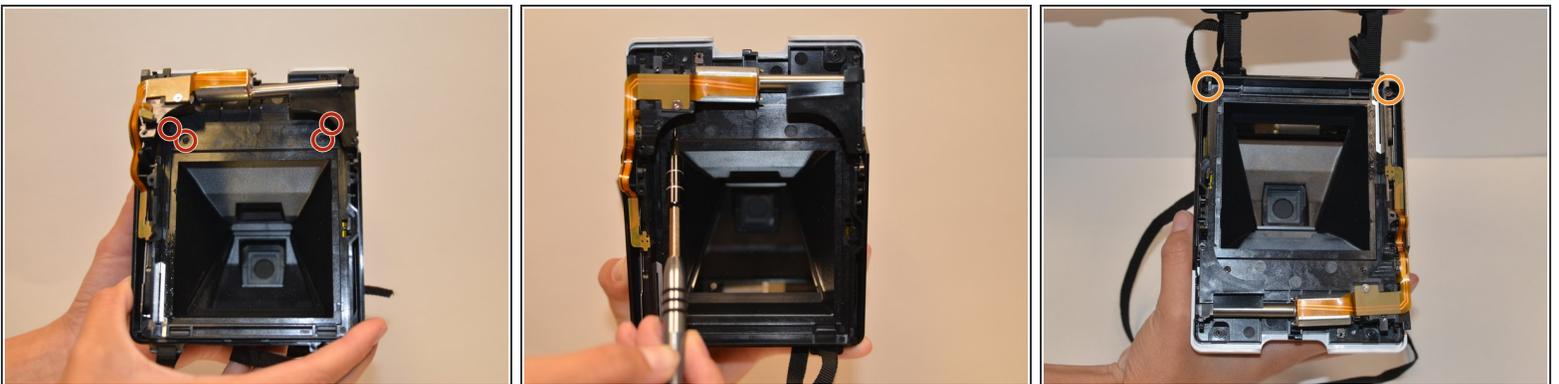



- Unscrew the four 5mm screws on the top of the inside base piece.
- Unscrew the two 5mm screws on the bottom of the inside base piece which is near the strap.

Step 3

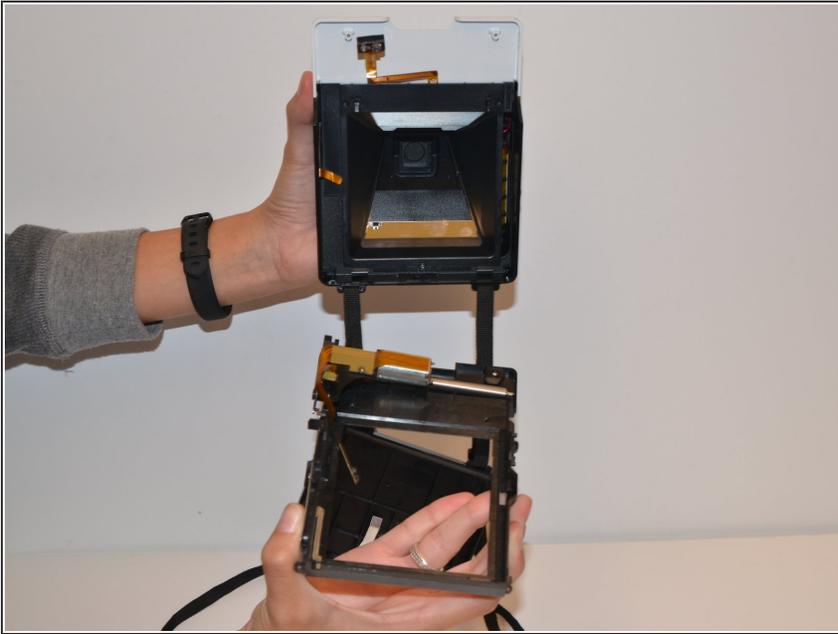


- Remove the inside black base piece.

Step 4

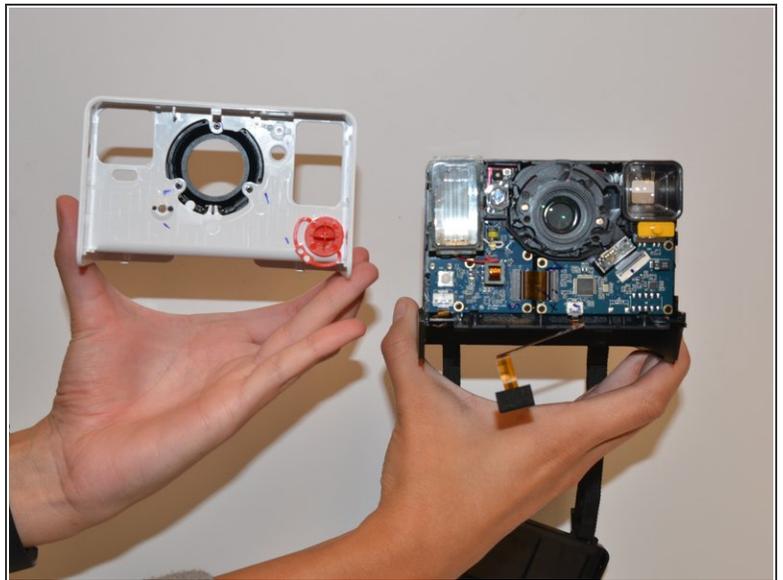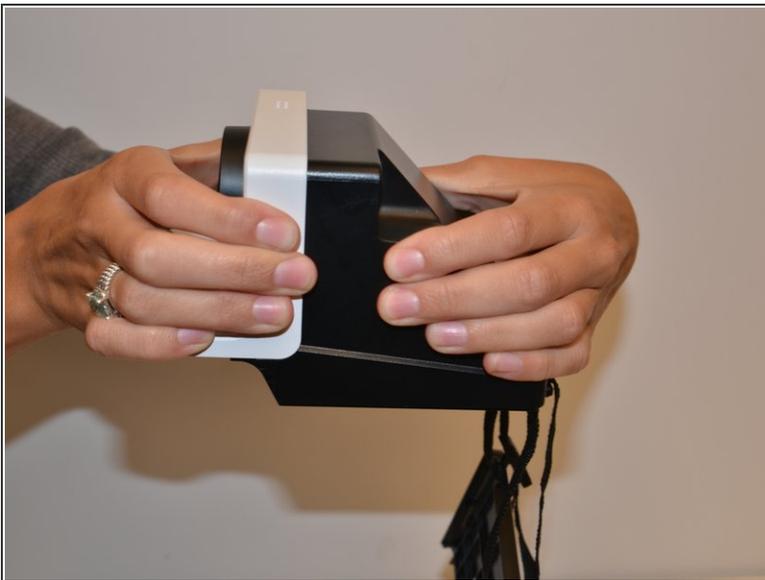

- With force separate the front white piece from the back of the camera. You will use your hands to pull it apart.

Step 5

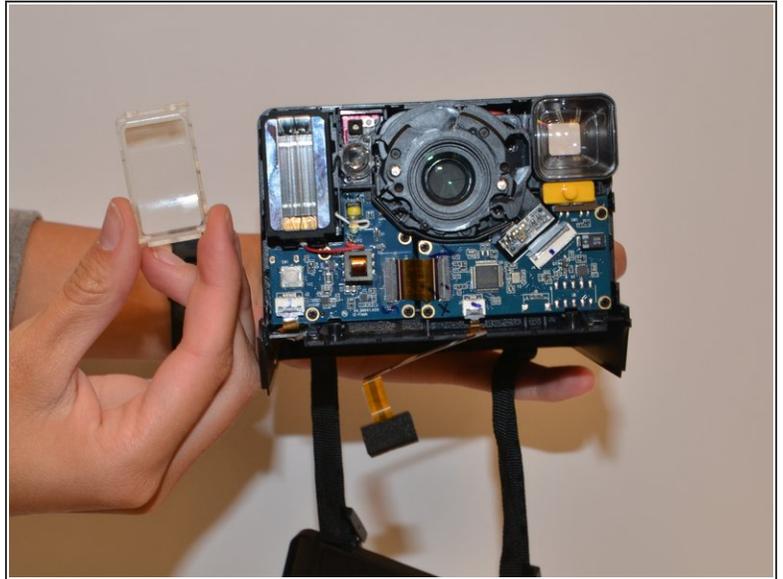

- Forcefully pull on the flash cover until it is removed.

To reassemble your device, follow these instructions in reverse order.