




# Lenovo IdeaPad FLEX 4-1580 Battery Replacement

If your laptop is not holding a charge like it...

Written By: Matthew Hurtt

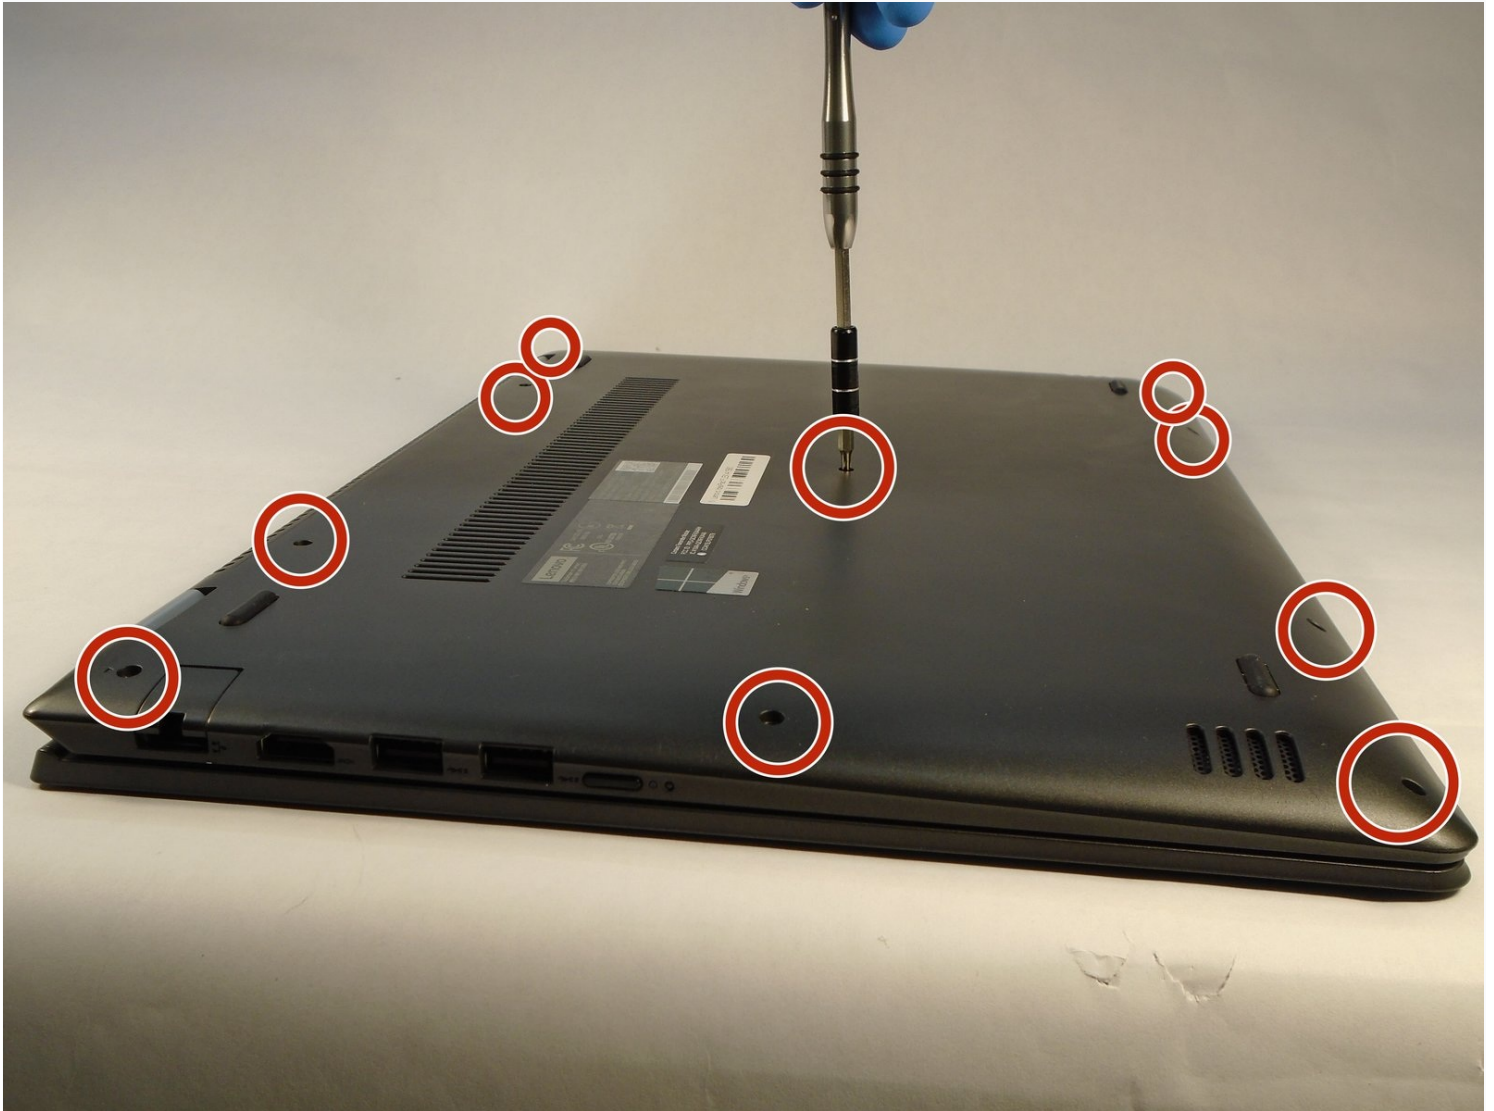

# INTRODUCTION

If your laptop is not holding a charge like it is intended to, then it may be due to your battery.

---

## TOOLS:


[iFixit Opening Tool](#) (1)

## PARTS:

[5B10K85056 - Lenovo Laptop Battery - Genuine](#) (1)


---

## Step 1 — Battery

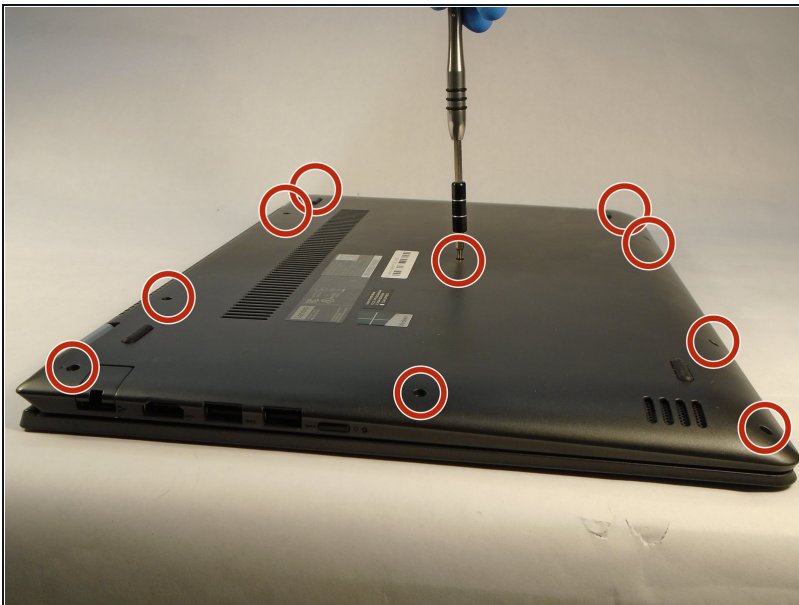


- Flip laptop over so the model sticker is showing, and begin to unscrew all of the screws.

## Step 2

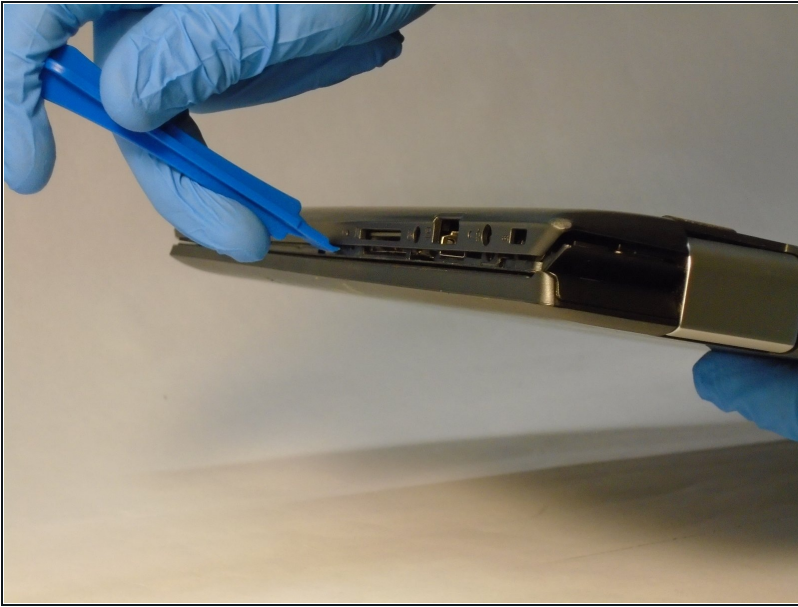

- Pop off the back panel using a plastic opening tool once all screws are removed.


## Step 3

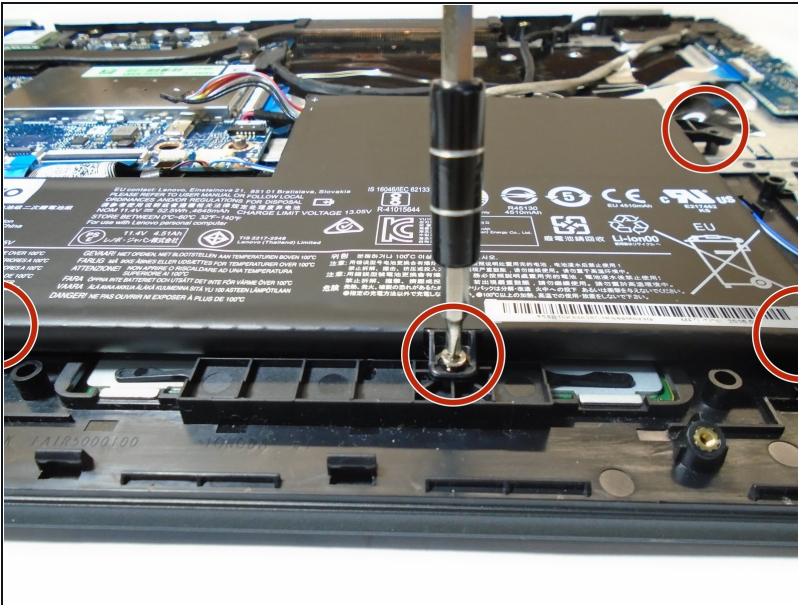

- Once the panel is fully removed, begin to unscrew the battery.



## Step 4

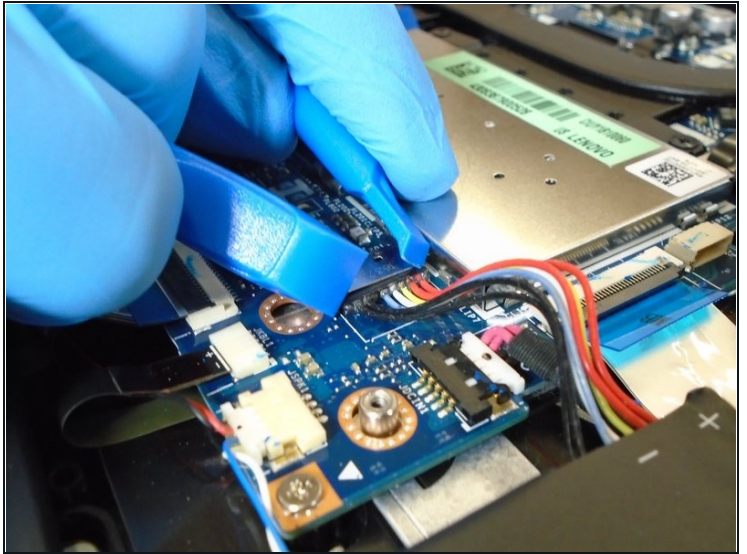

- Use the iFixit Opening tool to disconnect the battery from the circuit board.
- When all screws are removed from the battery, carefully lift the battery up.

## Step 5



- The battery is completely removed, and can be replaced with a new battery.

To reassemble your device, follow these instructions in reverse order.