



# Hover-1 Chrome Disassembly

How to remove the plastic case from the Hover-1 Chrome.

Written By: Craig Belshe



---

## INTRODUCTION

If you need to access the internals of your Hover-1, or want to replace the case, use this guide. It will show you how to remove the case. You will need a Phillips #2 screwdriver.

---

### TOOLS:


- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Hover-1 Chrome Disassembly




- Flip the Hover-1 Chrome upside down.
- Use a Phillips #2 screwdriver to remove the fourteen 14 mm screws from the bottom of the Hover-1.
- Break the two black tape circles, and remove the two 15 mm Phillips screws underneath.

## Step 2

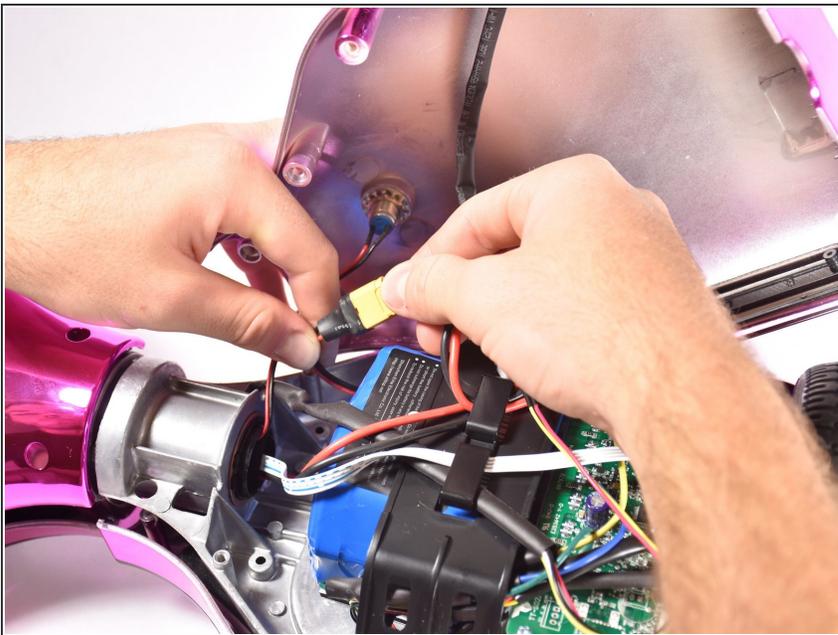

- Lift the shell without the speaker grille and unplug the battery.

## Step 3

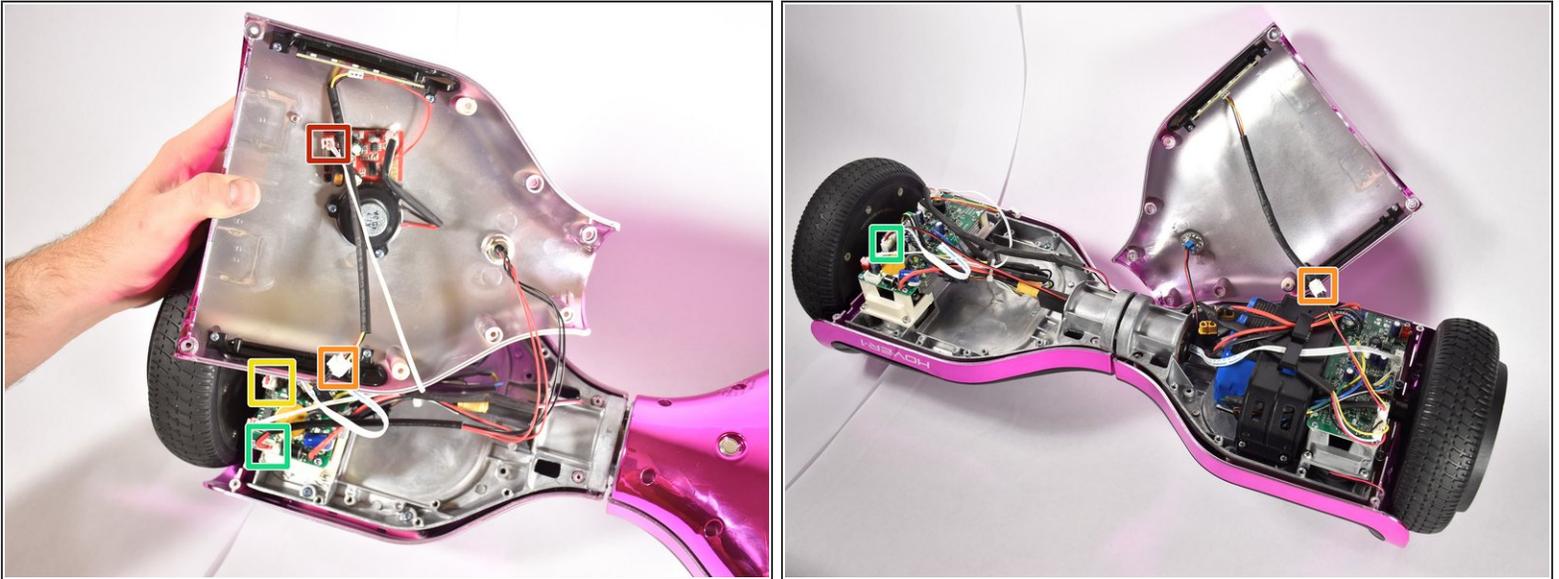

- Lift the shell with the speaker grille.
- Unplug the speaker.
- Unplug the LEDs.
- Unplug the power button
- Unplug the charging port.

To reassemble your device, follow these instructions in reverse order.