

Lenovo IdeaPad FLEX 4-1580 Fan Replacement

If the laptop begins to freeze up then it is a...

Written By: Matthew Hurtt



INTRODUCTION

If the laptop begins to freeze up then it is a problem with the fan.

🖌 TOOLS:

PARTS:


iFixit Opening Tool (1) Spudger (1) 5F10L46056 - Lenovo Laptop CPU Cooling Fan - Genuine (1)

Step 1 — Battery




• Flip laptop over so the model sticker is showing, and begin to unscrew all of the screws.

Step 2

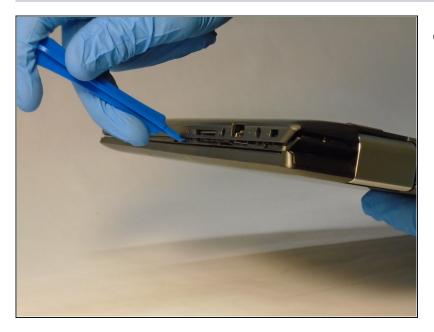


• Pop off the back panel using a plastic opening tool once all screws are removed.

Step 3

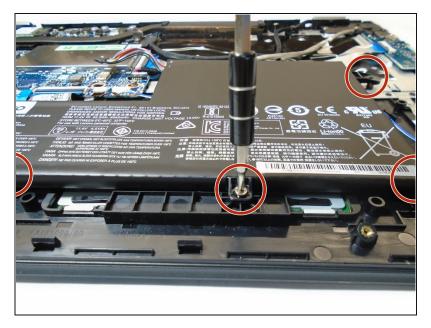

• Once the panel is fully removed, begin to unscrew the battery.

Step 4

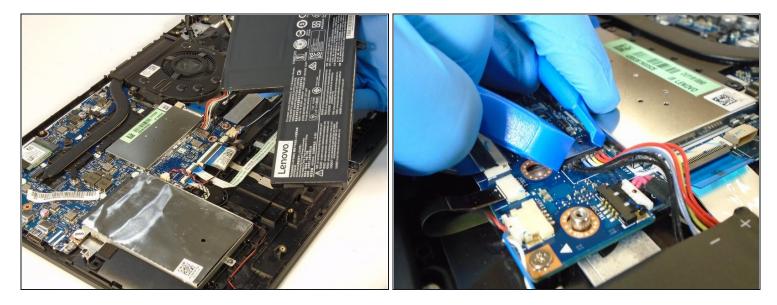

- Use the iFixit Opening tool to disconnect the battery from the circuit board.
- When all screws are removed from the battery, carefully lift the battery up.

Step 5




• The battery is completely removed, and can be replaced with a new battery.

Step 6 — Fan



• Remove all screws securing the fan to the laptop.

Step 7

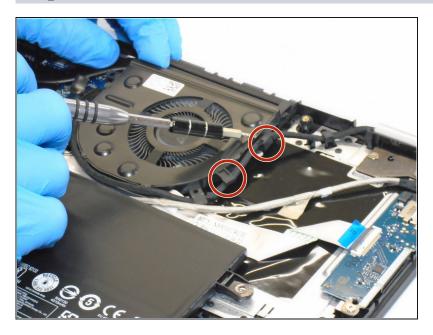

• Unhook the wire from the fan component using a spudger.

Step 8



• Now the fan is completely removed.

To reassemble your device, follow these instructions in reverse order.