



Asus M51E-B2 Battery Replacement

If your Asus M51E-B2 laptop is not holding a charge or will not power up unless it is plugged in, you may need to replace the battery.


Written By: Juston Brown



INTRODUCTION

This guide will detail how to remove and replace the battery on your ASUS M51E-B2 laptop. This is an easy procedure, as the battery was designed to be quickly removed by using a couple a latches. This guide can be useful if your laptop is frequently overheating, or will not hold a charge for very long.

Step 1 — Battery

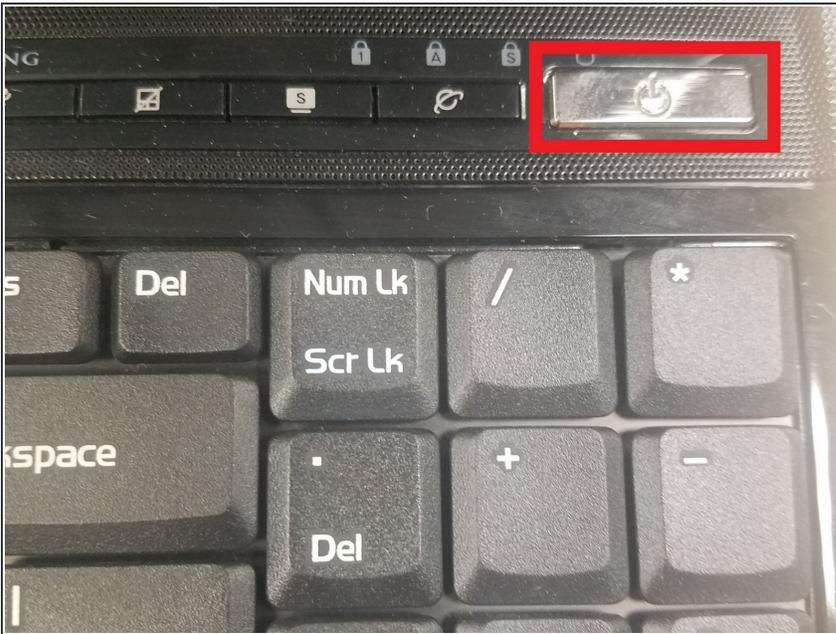

- Power off the laptop and flip the laptop upside down.

Step 2



- Push and hold the left hand switch outward in the "unlocked" position using your fingers.

Step 3



- Use your fingers to gently slide the battery outward.

To reassemble your device, follow these instructions in reverse order.