




# Purple SmartVP Speaker Replacement

Written By: Brian Maulucci

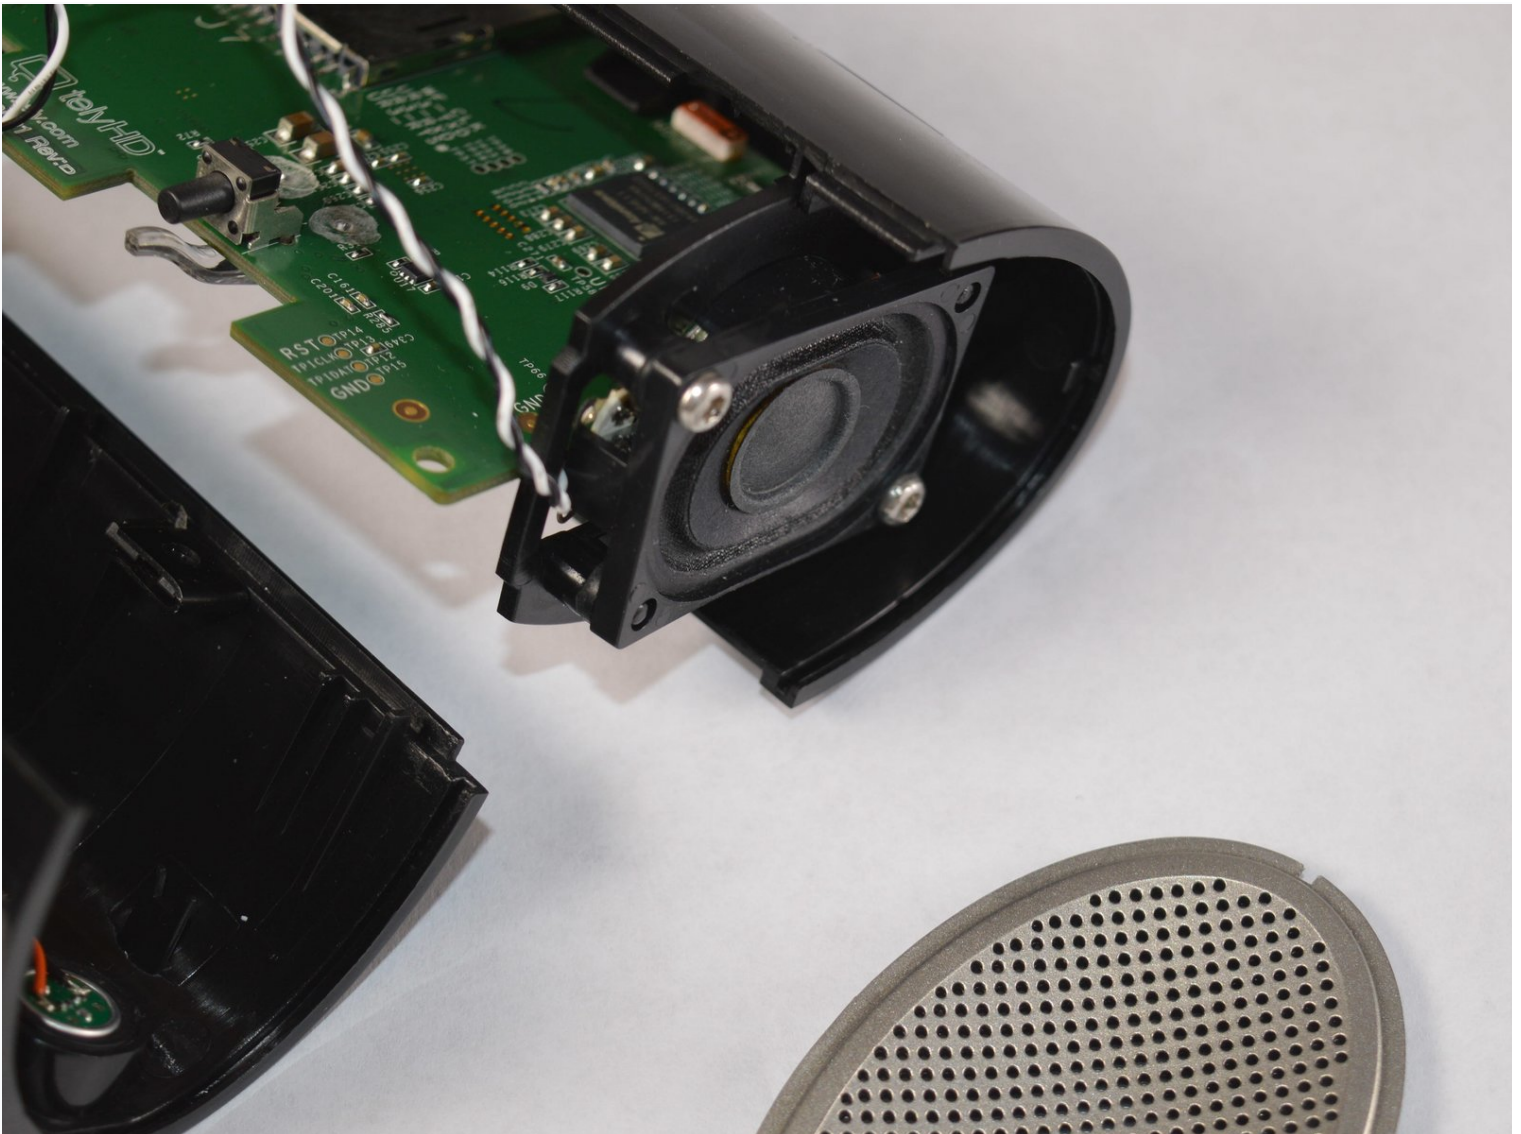

## TOOLS:

TR9 Torx Security Screwdriver (1)

Spudger (1)


TR10 Torx Security Screwdriver (1)

### Step 1 — Speaker




- Remove the top bar by removing the 5cm hex T10 screws on the back of the device as shown. Then gently pull off the top bar from the main component.

### Step 2

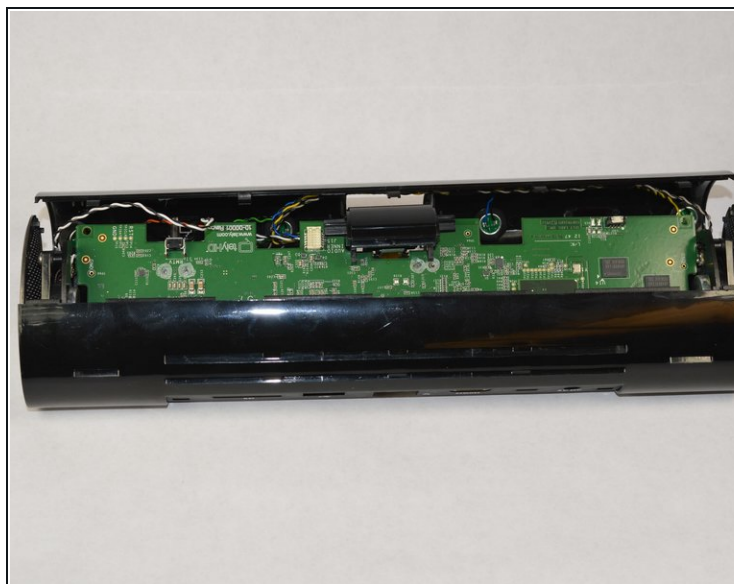


- Remove the 1.2 cm hex T9 screws and gently open up the device.

### Step 3

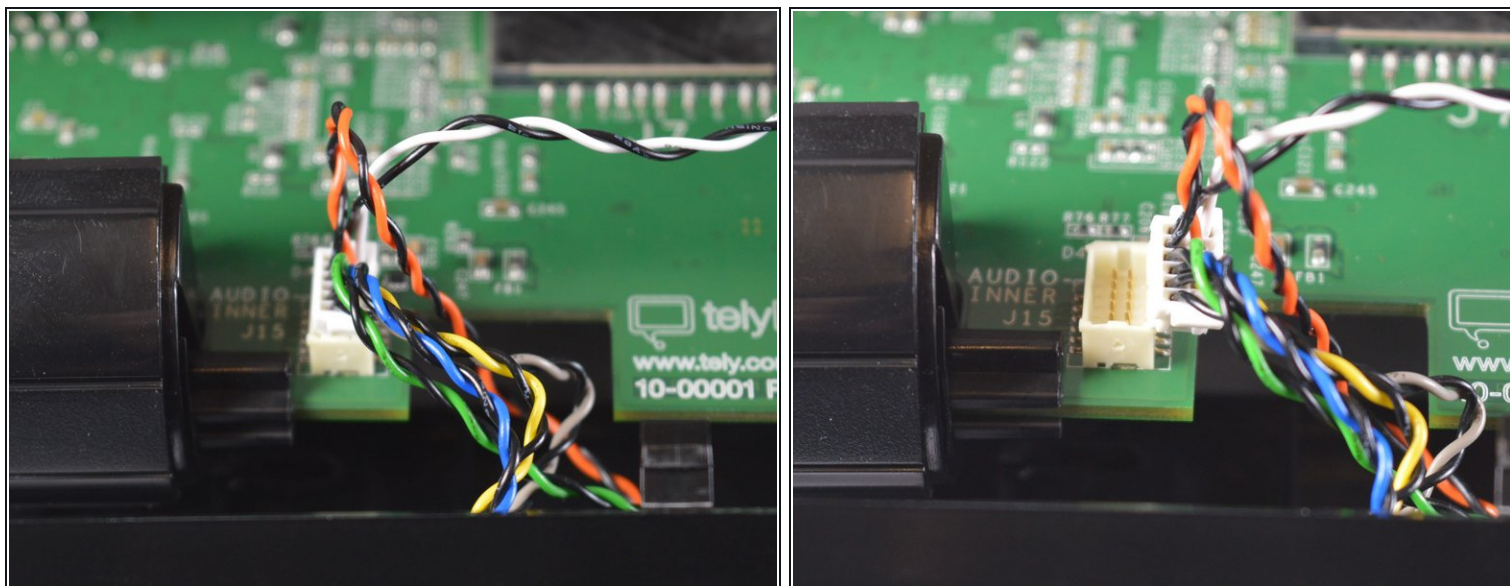

- Disconnect the speakers from the motherboard.

### Step 4

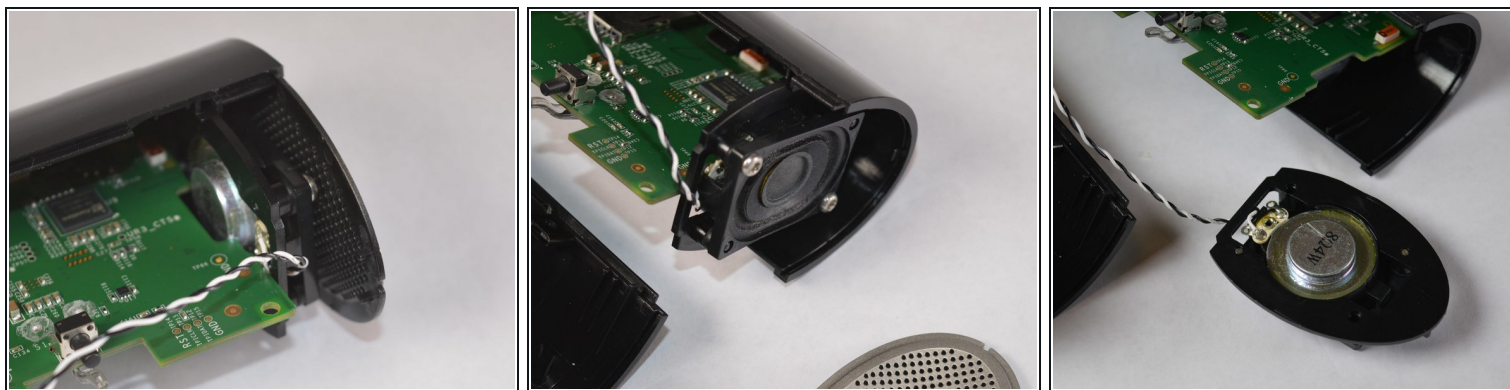

- Remove the speaker from the plastic shell of the device.



## Step 5



- Release the wires connected to the speaker from the 12-pin connector with a spudger and replace the affected speaker.

To reassemble your device, follow these instructions in reverse order.