




Alienware M17x P01E Cooling Fan Replacement

This guide will help replace the cooling fan in your Alienware M17x P01E.

Written By: Kevin Palacios

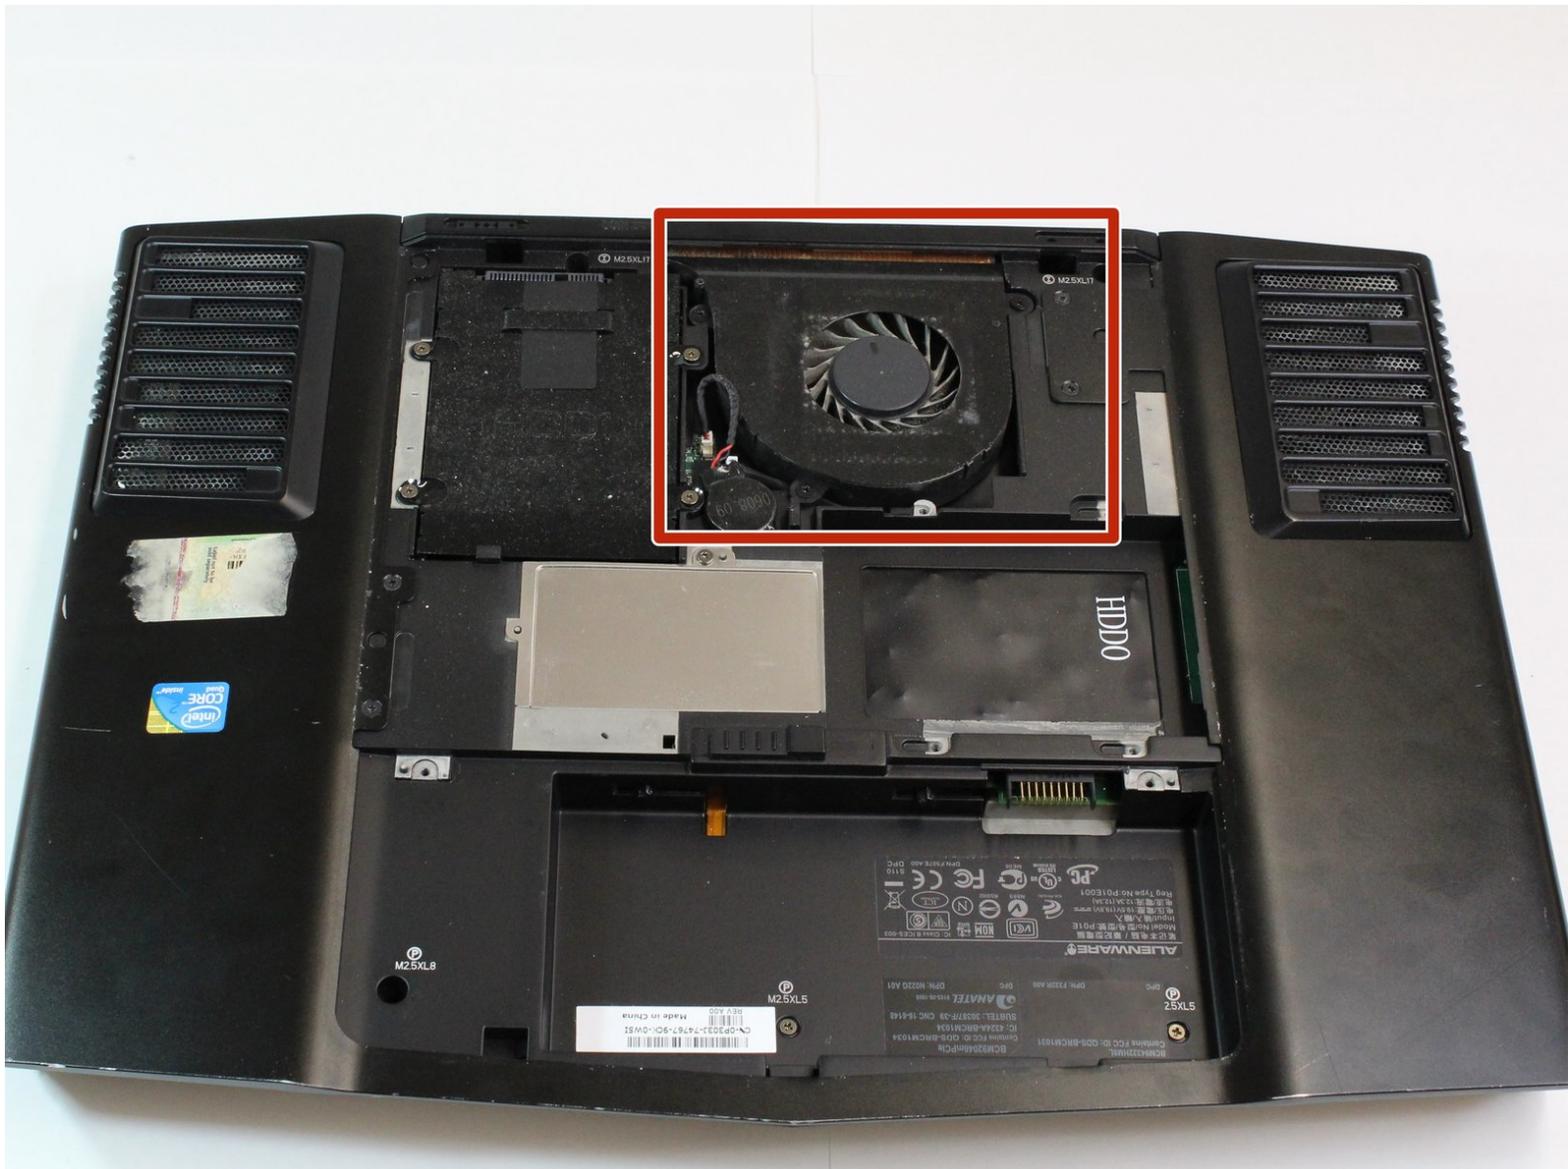

INTRODUCTION

Is your device heating up unexpectedly or making loud noises? Consider using this guide to replace the fan of your device.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



⚠ Please power off the computer and deplete the battery before attempting the following step.

Step 2



- Press down on the battery latch and slide it to the left.
- Lift the battery out once it pops out.

Step 3 — Compartment Door




- Loosen the two silver Phillips #1 screws.
- ⓘ The screws are held to the compartment door by a washer and cannot be removed.

Step 4




- Use your hand to gently lift and remove the compartment door.

Step 5 — Cooling Fan

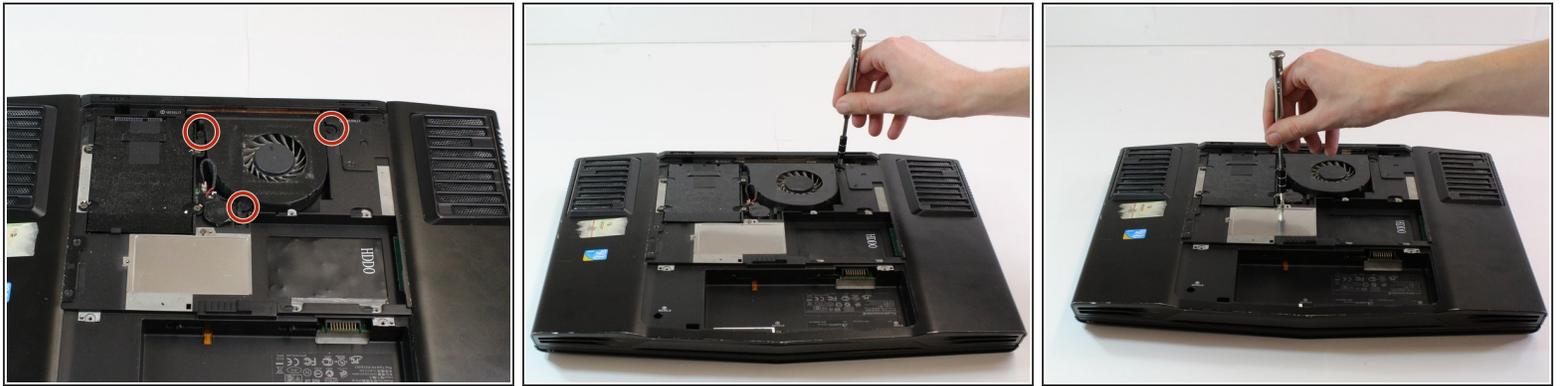

- Loosen the three black Phillips #1 screws.
- ⓘ The screws are held to the fan by a washer and cannot be removed.

Step 6

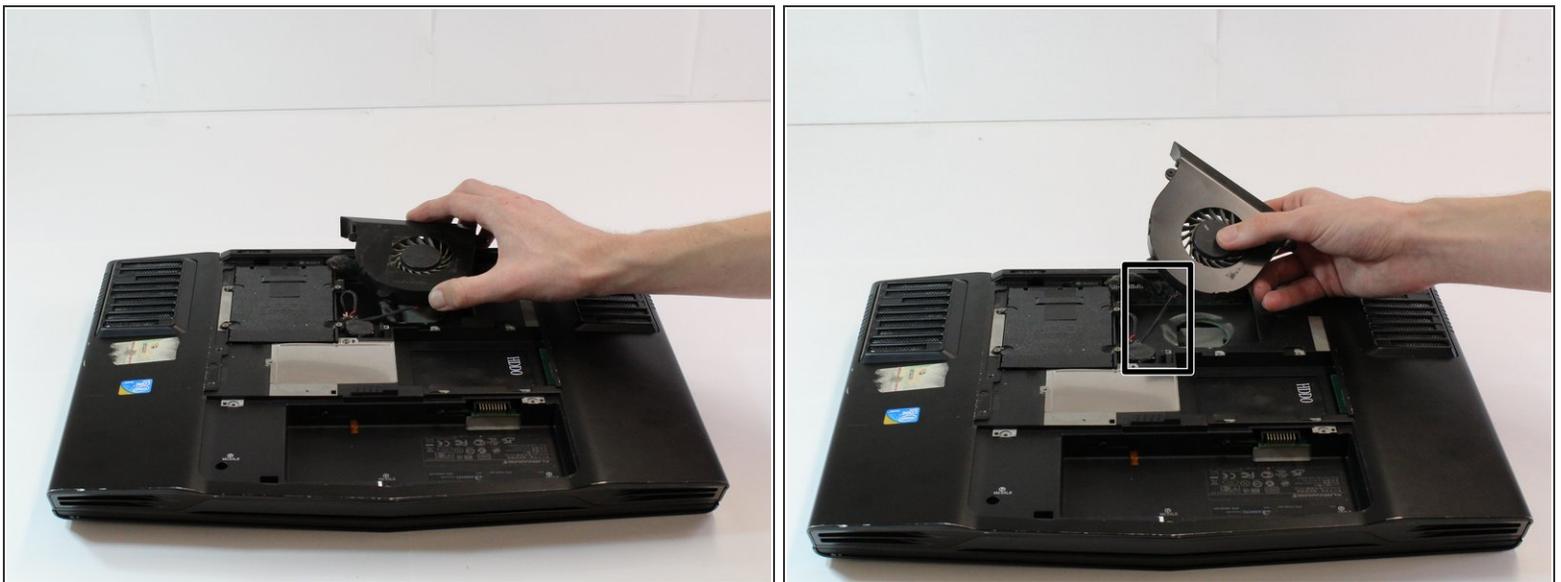

- Use your hand to gently lift the fan from the laptop.
- ☒ Careful not to pull too hard on CPU fan cable.

To reassemble your device, follow these instructions in reverse order.