



Lenovo Ideapad Flex 4-1570 Hard Drive Replacement

If the laptop is lagging, and the mouse is slow...

Written By: Isaiah Vang



INTRODUCTION


If the laptop is lagging, and the mouse is slow to react, use this guide to replace your hard drive.

TOOLS:

 
[T5 Torx Screwdriver](#) (1)
[Magnetic Project Mat](#) (1)
[iFixit Opening Tool](#) (1)
[Phillips #00 Screwdriver](#) (1)

Step 1 — Back Panel



 Shut down and unplug your laptop before you begin.

Step 2

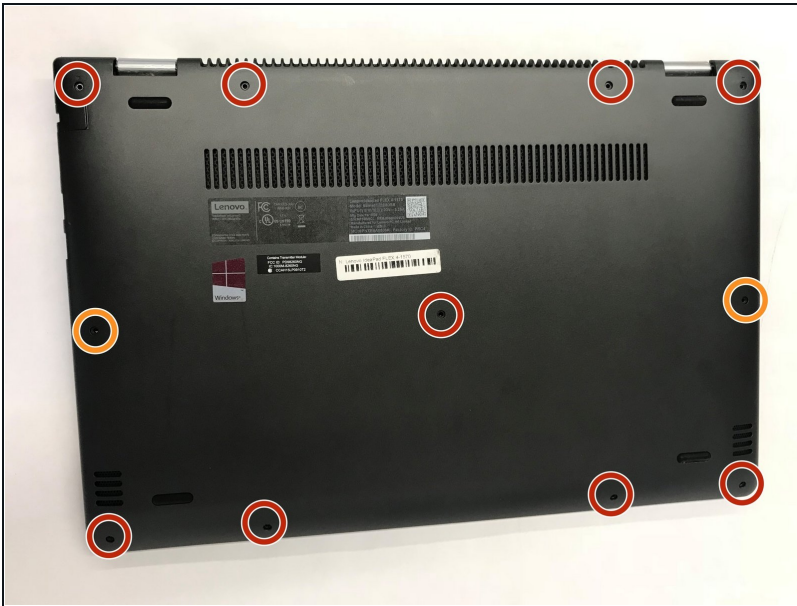


- Remove the nine 6 mm screws using a T5 Torx Screwdriver.
- Remove the two 10 mm screws using a T5 Torx Screwdriver.

Step 3



- Use a plastic opening tool to carefully pry off the back cover.
- Remove the back cover.

 Step 4 — Hard Drive

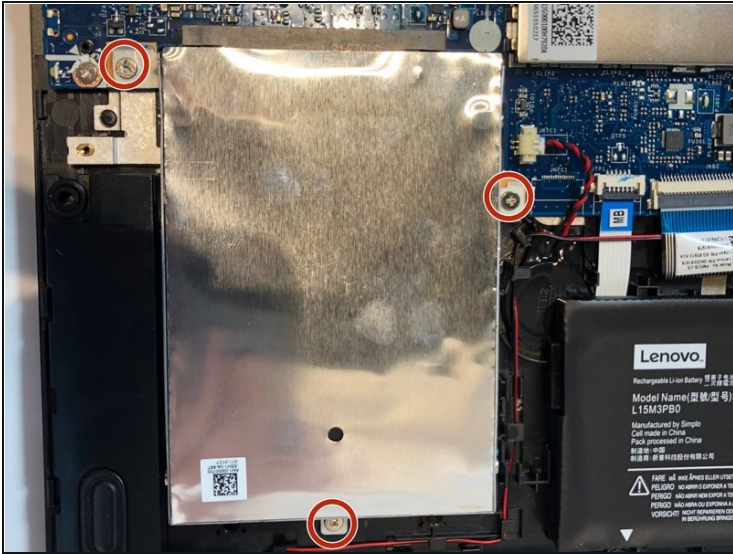

- Remove the three 4 mm screws using a Phillips #00 screwdriver.

Step 5



- Lift the hard drive up and out.

To reassemble your device, follow these instructions in reverse order.