




Lenovo Legion Y520-15IKBN RAM Replacement

This guide will show you how to replace the RAM...

Written By: Noah J Michalek

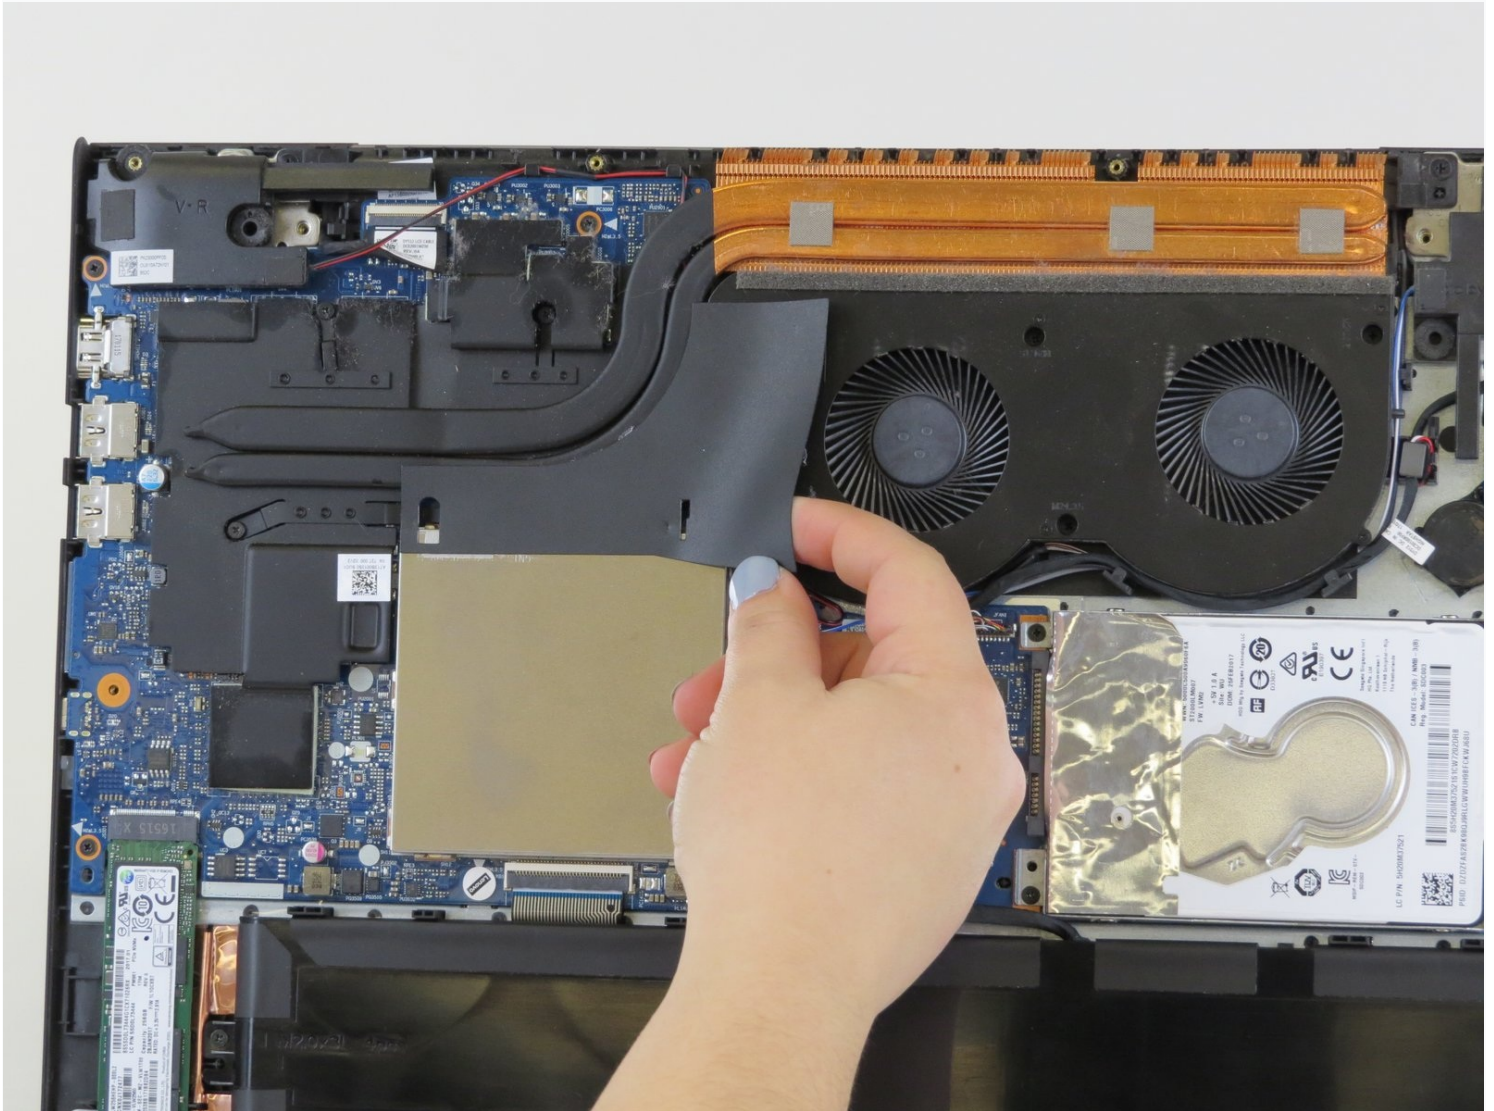

INTRODUCTION

This guide will show you how to replace the RAM in the Lenovo Legion 520-IKBN. You would replace the RAM if computer is acting slower than it is or if your startup screen is a black screen.

TOOLS:

Phillips #00 Screwdriver (1)
Spudger (1)

PARTS:

01AG843 - Lenovo Laptop Memory - Genuine (1)

Step 1 — Base Panel



 Shut down and unplug your device before proceeding.


- Remove the thirteen 6.5 mm screws from the base plate using a Phillips #00 screwdriver.

Step 2




- Flip the laptop on its side and wedge a spudger between the base panel and chassis, then pry around the perimeter until the base panel releases.
 - ① To get a better grip you may want to open the laptop slightly.
- Lift the bottom panel off of the chassis.
 - ★ During reassembly, make sure that the bottom panel clicks back into place on all four sides of the laptop.

Step 3 — RAM

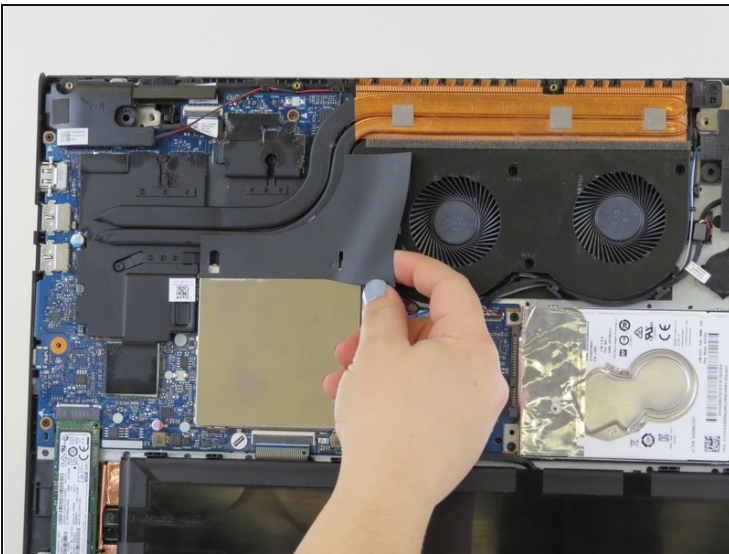


- There is a piece of plastic covering part of the RAM and the fan. You will need to remove this to get to the RAM.
- ① You do not need to remove the battery for the replacement of RAM card.

Step 4

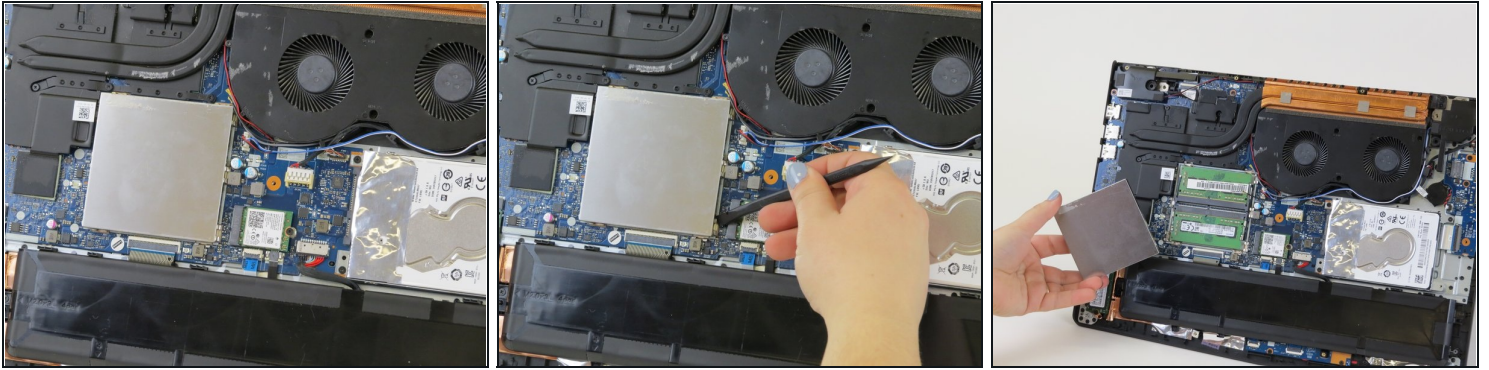

- There will be a silver square box next to the fan. Use a plastic spudger to pry the small tabs on the side that are holding the silver square on.

Step 5

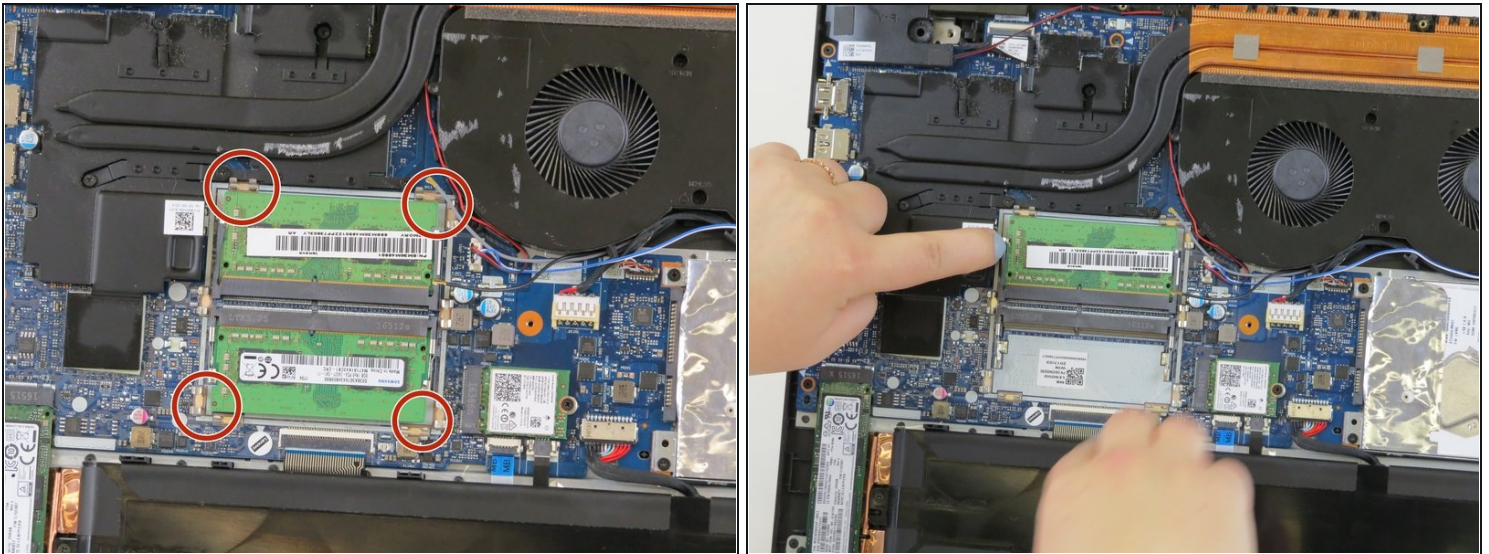

- The RAM will now be exposed. There are two tabs holding each one of two RAM cards in place. They are on the sides of the RAM cards. Pull the tabs to release the cards.
- ☒ When putting the RAM back together, there are lines on the end of the RAM cards that need to line up.

To reassemble your device, follow these instructions in reverse order.