


Sony Vaio SVF15A16CXB Back Panel Replacement

This guide will show you how to open the back of the laptop in order to access all inner functions.

Written By: Quinn Walter

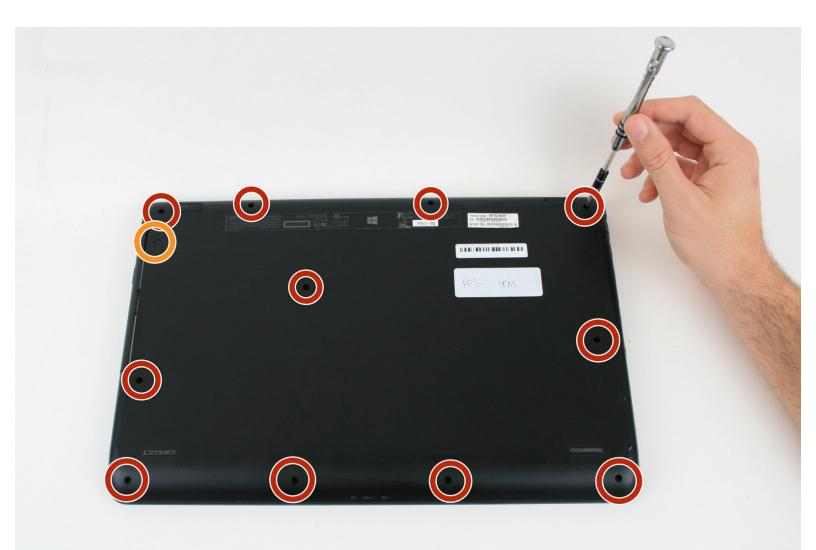


INTRODUCTION

This guide helps users to remove the back panel, which is required to access the other pieces of the laptop and is the first step to any part replacement.

TOOLS:

- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Back Panel

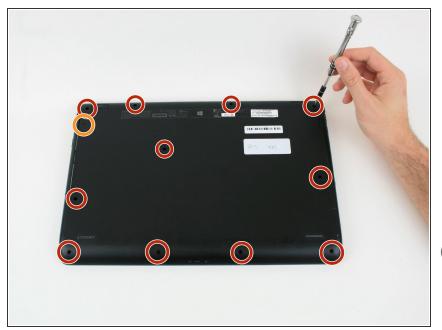

- Unscrew the eleven 6 mm screws from the back panel on the bottom of laptop with the Phillips #0 screwdriver.
- Unscrew the one 4 mm screw from the back panel on the bottom of laptop with the Phillips #0 screwdriver.
- (i) 6 mm screws marked in red, 4 mm marked in orange

Step 2



- Using a plastic opening tool, pull the optical drive out of the computer by the seam.
- In reassembly, slide the optical drive back in after reapplying cover.

Step 3



• Run the opening tool along the bottom cover seam.

Step 4



- Lift the clip marked in red in order to release the back cover.
- Lift the back cover.

To reassemble your device, follow these instructions in reverse order.