 




Asus G73JW-XT1 Hard Drive Replacement

Replace an aging hard drive or upgrade the capacity.

Written By: Nathan T Endner

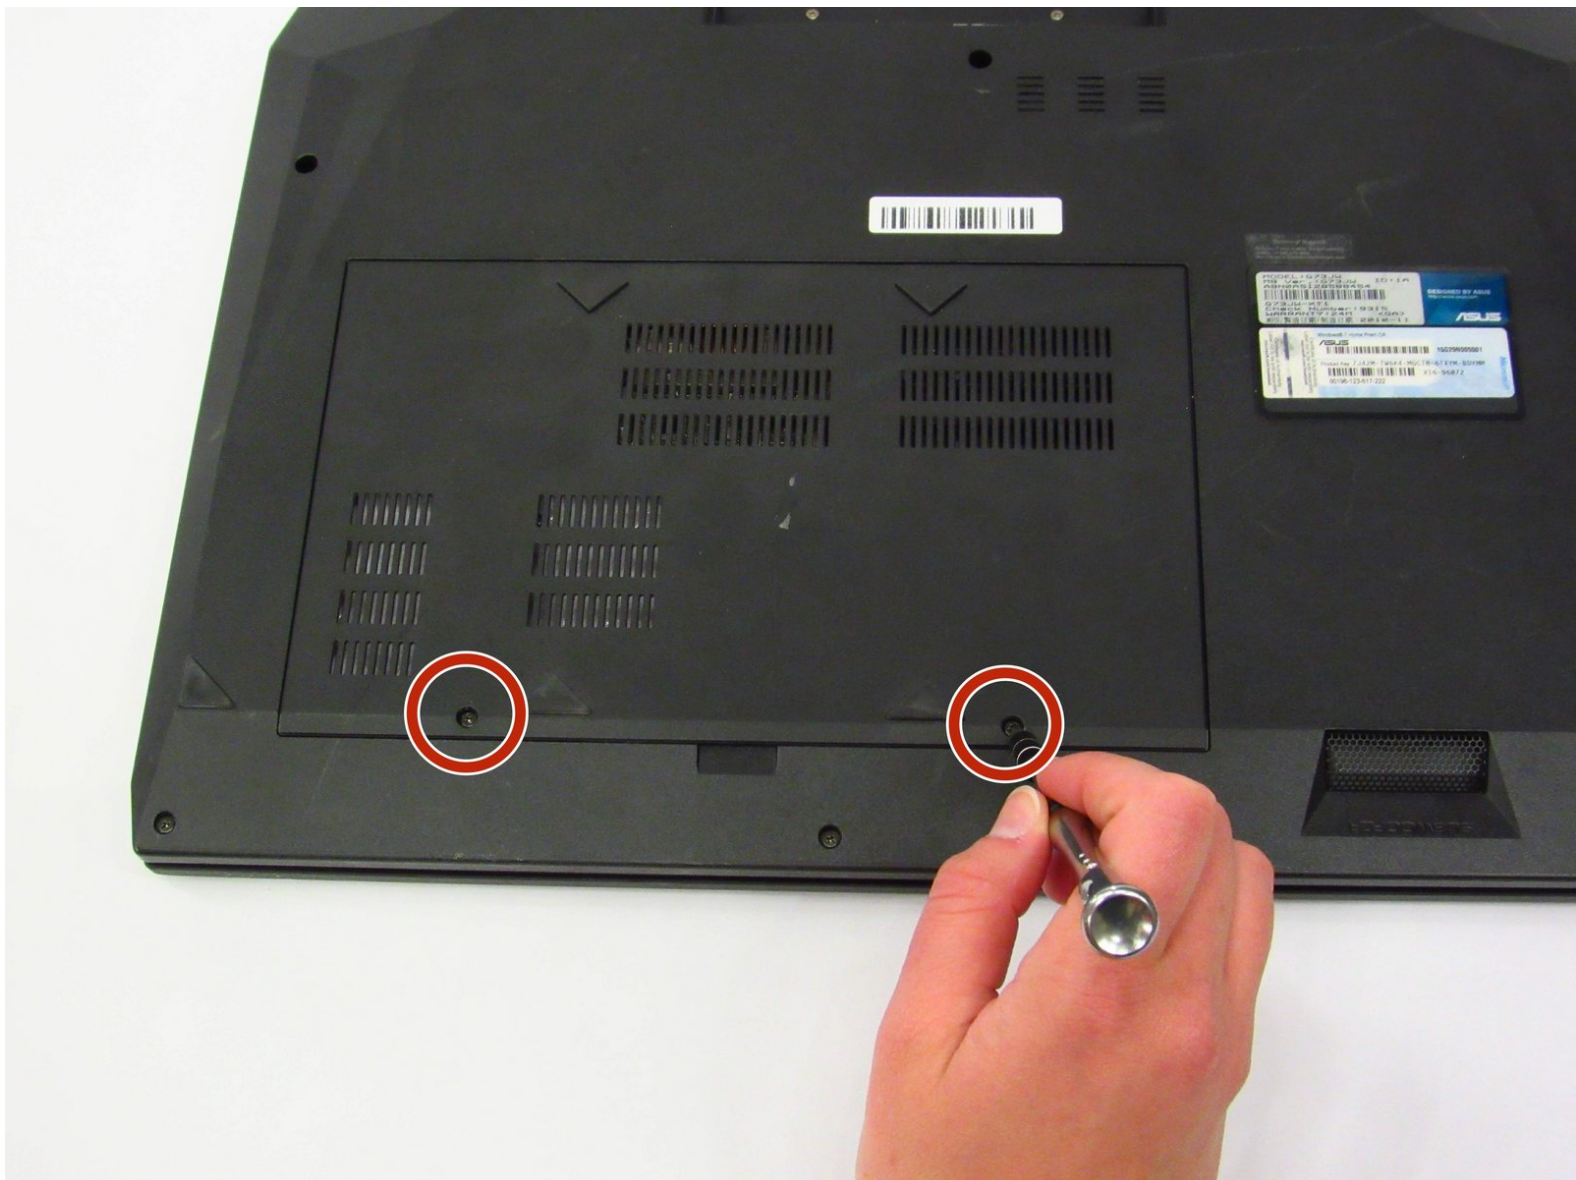

INTRODUCTION

If your hard drive is filling up or has become corrupted, use this guide to replace the Asus G73JW-XT1 Hard Drive.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [2.5" SATA Hard Drive](#) (1)

Step 1 — Battery



 
- Flip the device over so the battery port is easy to access.

Step 2



- Slide the left slider to the left so that it locks in place.
- Slide the right slider to the right while pushing the battery away from you. The battery should disconnect.

Step 3 — Hard Drive

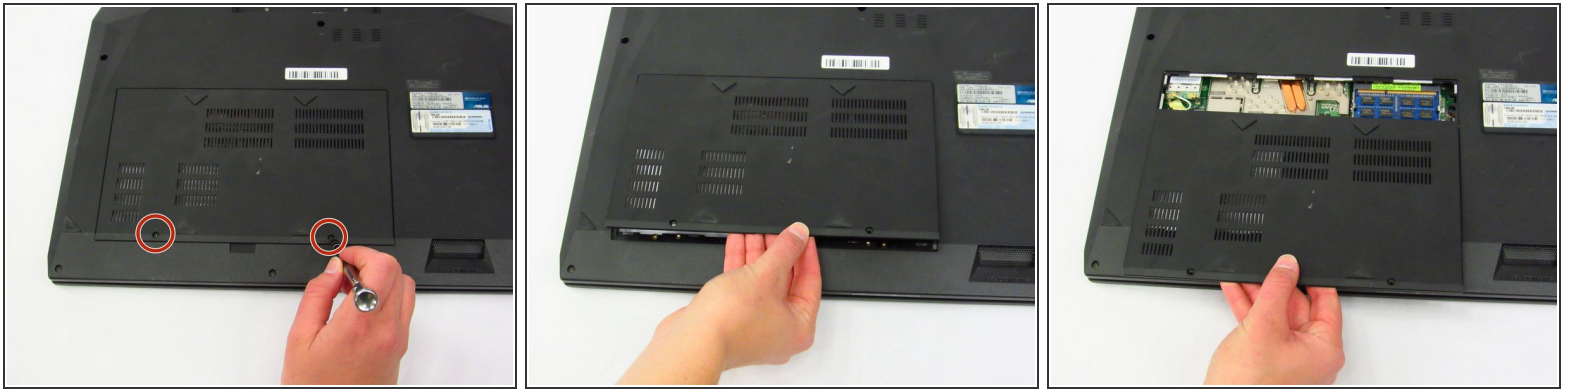

- Remove the two 5.5 mm Phillips #0 screws from the back cover.
- Gently lift and remove the back cover.

Step 4



- Remove the four 5.5 mm Phillips #0 screws.
- Gently lift the hard drive starting on the far side.

To reassemble your device, follow these instructions in reverse order.