



# Insignia NS-F12R6-SS Motor Housing

## Replacing

This guide will show you how to remove the motor housing on your Insignia NS-F12R6-SS fan.

Written By: Hank



---

## INTRODUCTION

Removing the motor housing provides access to all of the fan's internal workings.

---



### TOOLS:


- [Phillips #3 Screwdriver](#) (1)
  - [7/16 Crescent Wrench](#) (1)
-

## Step 1 — Front Cage



- Unplug your fan.
- Remove the 20 mm bolt that fastens the fan ring located at the bottom of the fan cage with a Phillips #3 screwdriver.

## Step 2

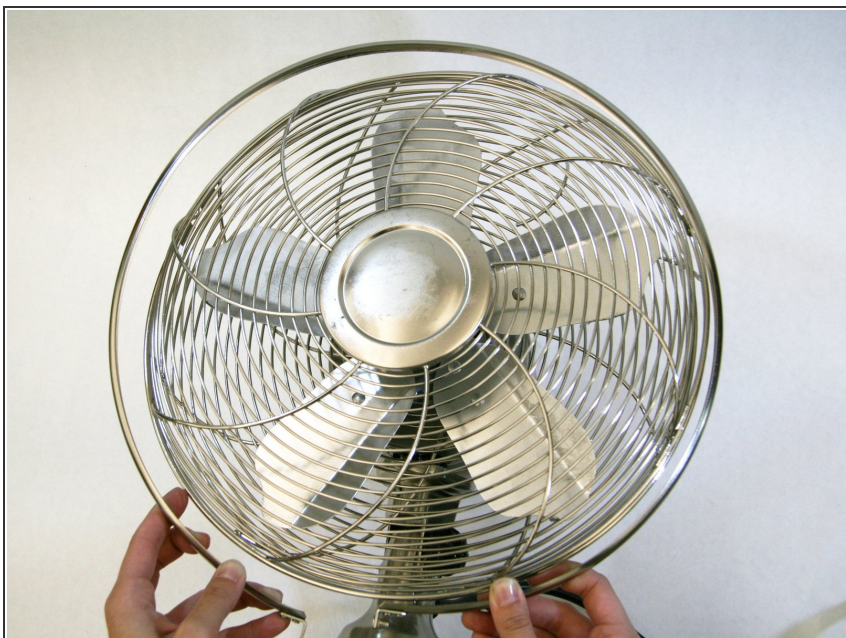

- Remove the ring that runs around the edge of the fan cage.



### Step 3




- Remove the front of the fan cage.

### Step 4 — Fan Blade



- Remove the 8 mm bolt fastening the fan blades to the rotor with a Phillip #3 screwdriver.

## Step 5

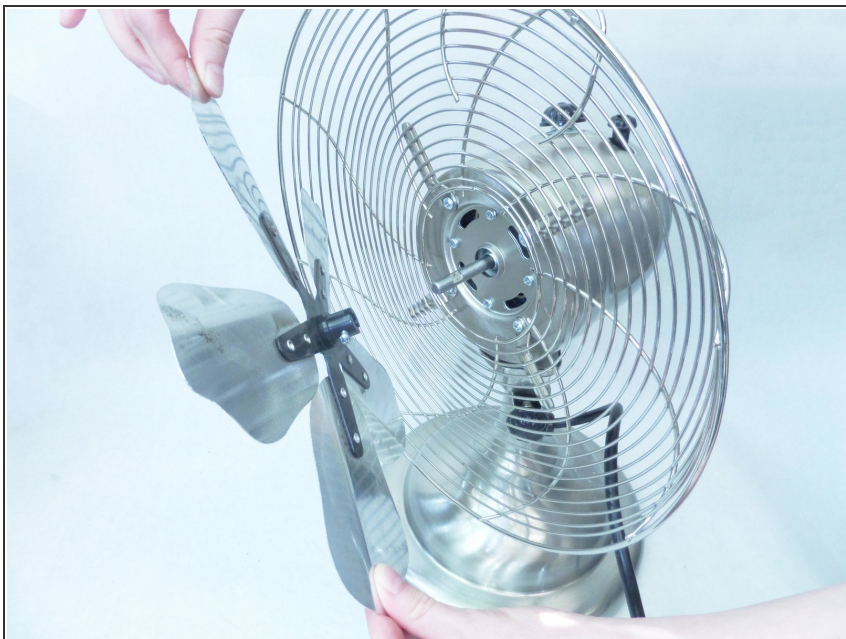

- ⚠ Take caution when removing the fan blades. They can be sharp!
- Slide the fan blade off the end of the rotor.

## Step 6 — Back Cage



- Unscrew the four 8 mm bolts that fasten the back of the fan cage back to the motor housing with a Phillips #3 screwdriver.




## Step 7



- Pull the back cage off.

## Step 8 — Oscillation Button

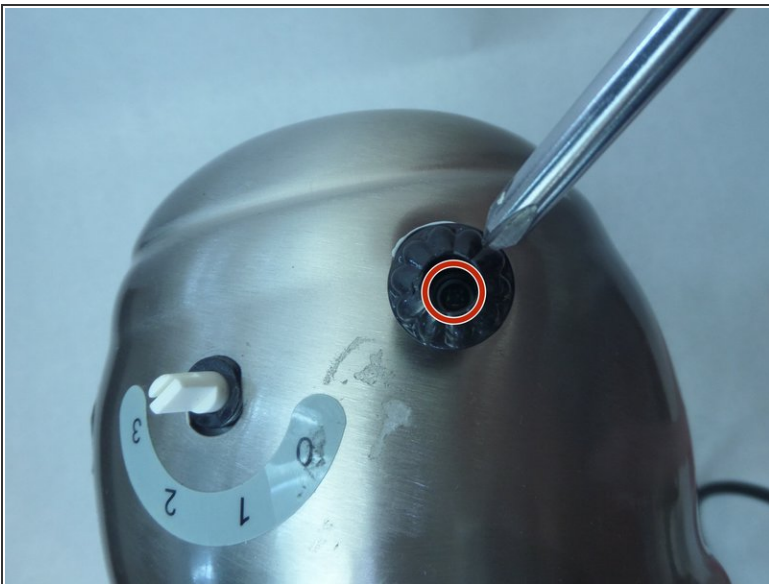


- Unscrew the 10 mm screw in the center hole of the oscillation knob with a Phillips #3 screwdriver.

## Step 9



- Remove the oscillation knob.

## Step 10 — Motor Housing

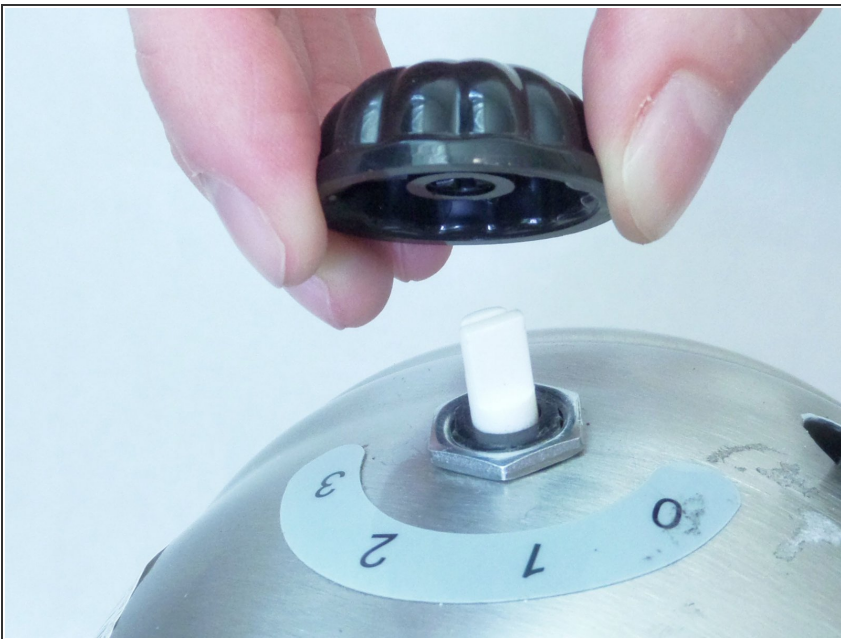

- Use your fingers to gently pull the power knob directly away from the motor housing.



## Step 11



- Unscrew the flat 17 mm nut fastened at the bottom of the power knob with a small crescent wrench.

## Step 12



- Remove the four 6 mm bolts and small washers that secure the front face of the motor housing with a Phillips #3 screwdriver and remove the washers.



## Step 13



- Pull the front face of the motor housing off toward the front of the rotor.

## Step 14




- Remove the 10 mm triangular-headed bolt with a Phillips #3 screwdriver.

## Step 15



- Slide the back end of the motor housing away from the front of the rotor.

## Step 16

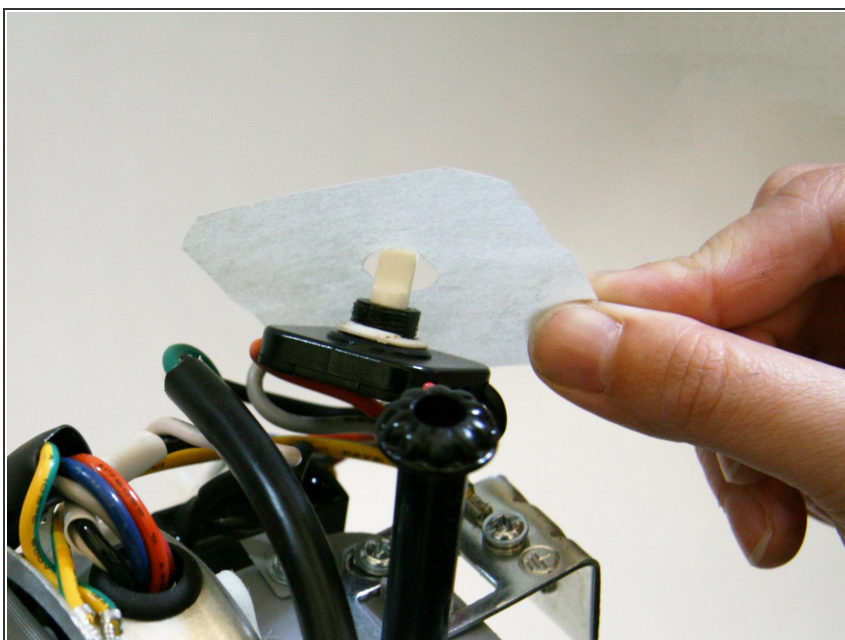

- Remove the small piece of paper hanging on the power button.

To reassemble your device, follow these instructions in reverse order.